



+1-703-256-8900 or 800-628-0885

info@NavtechGPS.com

www.NavtechGPS.com



## Vector VS131 GPS Compass User Guide

Part No. 875-0311-000 Rev. B1



www.hemispheregps.com





This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- (1) This device may not cause harmful interference, and
- (2) this device must accept any interference received, including interference that may cause undesired operation.

### Copyright Notice

Copyright Hemisphere GNSS, Inc. (2013). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GNSS.

### Trademarks

Hemisphere GPS<sup>®</sup>, the Hemisphere GPS logo, COAST<sup>™</sup>, Crescent<sup>®</sup>, Earthworks<sup>®</sup>, Eclipse<sup>™</sup>, e-Dif<sup>®</sup>, L-Dif<sup>™</sup>, miniEclipse<sup>™</sup>, PocketMAX PC<sup>™</sup>, PocketMAX<sup>™</sup>, PocketMax3<sup>™</sup>, S320<sup>™</sup>, SBX-4<sup>™</sup>, SureTrack<sup>®</sup>, Vector<sup>™</sup>, XF1<sup>™</sup>, and XF2<sup>™</sup> are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners.

### Patents

Hemisphere GNSS products may be covered by one or more of the following patents:

#### U.S. Patents

6111549	6876920	7400956	8000381	8214111
6397147	7142956	7429952	8018376	8217833
6469663	7162348	7437230	8085196	8265826
6501346	7277792	7460942	8102325	8271194
6539303	7292185	7689354	8138970	8307535
6549091	7292186	7808428	8140223	8311696
6711501	7373231	7835832	8174437	8334804
6744404	7388539	7885745	8184050	RE41358
6865465	7400294	7948769	8190337	

#### Australia Patents

2002244539  
2002325645  
2004320401

Other U.S. and foreign patents pending.

### Notice to Customers

Contact your local dealer for technical assistance. To find the authorized dealer near you:

Hemisphere GNSS, Inc.  
8444 N 90th St, Suite 120  
Scottsdale, AZ 85258 USA  
Phone: (480) 348-9919  
Fax: (480) 348-6370  
[precision@hemispheregps.com](mailto:precision@hemispheregps.com)  
[www.hemispheregps.com](http://www.hemispheregps.com)

### Technical Support

If you need to contact Hemisphere GNSS Technical Support:

Hemisphere GNSS, Inc.  
8444 N 90th St, Suite 120  
Scottsdale, AZ 85258 USA  
Phone: (480) 348-9919  
Fax: (480) 348-6370  
[techsupport@hemispheregps.com](mailto:techsupport@hemispheregps.com)

### Documentation Feedback

Hemisphere GNSS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GNSS with any feedback regarding this guide by writing to the following email address: [techsupport@hemispheregps.com](mailto:techsupport@hemispheregps.com).

## Warranty Notice

**COVERED PRODUCTS:** This warranty covers all products manufactured by Hemisphere GPS and purchased by the end purchaser (the "Products"), unless otherwise specifically and expressly agreed in writing by Hemisphere GPS.

**LIMITED WARRANTY:** Hemisphere GPS warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth below, that the Products sold to such end purchaser and its internal components shall be free, under normal use and maintenance, from defects in materials, and workmanship and will substantially conform to Hemisphere GPS's applicable specifications for the Product, for a period of 12 months from delivery of such Product to such end purchaser (the "Warranty Period"). Repairs and replacement components for the Products are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship, and will substantially conform to Hemisphere GPS's applicable specifications for the Product, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater.

**EXCLUSION OF ALL OTHER WARRANTIES.** The LIMITED WARRANTY shall apply only if the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GPS's relevant User's Manual and Specifications, AND the Product is not modified or misused. The Product is provided "AS IS" and the implied warranties of MERCHANTABILITY and FITNESS FOR A PARTICULAR PURPOSE and ALL OTHER WARRANTIES, express, implied or arising by statute, by course of dealing or by trade usage, in connection with the design, sale, installation, service or use of any products or any component thereof, are EXCLUDED from this transaction and shall not apply to the Product. The LIMITED WARRANTY is IN LIEU OF any other warranty, express or implied, including but not limited to, any warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, title, and non-infringement.

**LIMITATION OF REMEDIES.** The purchaser's EXCLUSIVE REMEDY against Hemisphere GPS shall be, at Hemisphere GPS's option, the repair or replacement of any defective Product or components thereof. The purchaser shall notify Hemisphere GPS or a Hemisphere GPS's approved service center immediately of any defect. Repairs shall be made through a Hemisphere GPS approved service center only. Repair, modification or service of Hemisphere GPS products by any party other than a Hemisphere GPS approved service center shall render this warranty null and void. The remedy in this paragraph shall only be applied in the event that the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GPS's relevant User's Manual and Specifications, AND the Product is not modified or misused. NO OTHER REMEDY (INCLUDING, BUT NOT LIMITED TO, SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS) SHALL BE AVAILABLE TO PURCHASER, even if Hemisphere GPS has been advised of the possibility of such damages. Without limiting the foregoing, Hemisphere GPS shall not be liable for any damages of any kind resulting from installation, use, quality, performance or accuracy of any Product.

**HEMISPHERE IS NOT RESPONSIBLE FOR PURCHASER'S NEGLIGENCE OR UNAUTHORIZED USES OF THE PRODUCT.** IN NO EVENT SHALL HEMISPHERE GPS BE IN ANY WAY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM PURCHASER'S OWN NEGLIGENCE, OR FROM OPERATION OF THE PRODUCT IN ANY WAY OTHER THAN AS SPECIFIED IN HEMISPHERE GPS'S RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GPS is NOT RESPONSIBLE for defects or performance problems resulting from (1) misuse, abuse, improper installation, neglect of Product; (2) the utilization of the Product with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Hemisphere GPS; (3) the operation of the Product under any specification other than, or in addition to, the specifications set forth in Hemisphere GPS's relevant User's Manual and Specifications; (4) damage caused by accident or natural events, such as lightning (or other electrical discharge) or fresh/salt water immersion of Product; (5) damage occurring in transit; (6) normal wear and tear; or (7) the operation or failure of operation of any satellite-based positioning system or differential correction service; or the availability or performance of any satellite-based positioning signal or differential correction signal.

**THE PURCHASER IS RESPONSIBLE FOR OPERATING THE VEHICLE SAFELY.** The purchaser is solely responsible for the safe operation of the vehicle used in connection with the Product, and for maintaining proper system control settings. UNSAFE DRIVING OR SYSTEM CONTROL SETTINGS CAN RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH. The purchaser is solely responsible for his/her safety and for the safety of others. The purchaser is solely responsible for maintaining control of the automated steering system at all times. THE PURCHASER IS SOLELY RESPONSIBLE FOR ENSURING THE PRODUCT IS PROPERLY AND CORRECTLY INSTALLED, CONFIGURED, INTERFACED, MAINTAINED, STORED, AND OPERATED IN ACCORDANCE WITH HEMISPHERE GPS'S RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GPS does not warrant or guarantee the positioning and navigation precision or accuracy obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GPS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on performance specifications provided by the satellite service operator (i.e. US Department of Defense in the case of GPS) and differential correction service provider. Hemisphere GPS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

**GOVERNING LAW.** This agreement and any disputes relating to, concerning or based upon the Product shall be governed by and interpreted in accordance with the laws of the State of Arizona.

**OBTAINING WARRANTY SERVICE.** In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GPS approved service center along with the end purchaser's proof of purchase. Hemisphere GPS does not warrant claims asserted after the end of the warranty period. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GPS approved service center, contact Hemisphere GPS at the following address:

**Hemisphere GPS**  
8444 N. 90th Street, Suite 130  
Scottsdale, AZ 85258  
Phone: 480-348-9919 Fax: 480-348-6370  
techsupport@hemispheregps.com  
www.hemispheregps.com

---

# Contents

---

<b>Chapter 1</b>	<b>Introduction</b>	<b>1</b>
	What's In This Guide?	2
	Product Overview	2
	Key Features	3
	What's Included in Your Kit	3
	Using VectorPC to Communicate with the VS131	4
<b>Chapter 2</b>	<b>Understanding the VS131</b>	<b>5</b>
	GPS Overview	6
	GPS Operation	6
	Differential Operation	6
	VS131 Overview	8
	Fixed Baseline Moving Base Station RTK	8
	Supplemental Sensors	9
	Time Constants	10
<b>Chapter 3</b>	<b>Installing the VS131</b>	<b>13</b>
	Mounting the Antennas	14
	Antenna Options	14
	Mounting Orientation	14
	Planning the Optimal Antenna Placement	15
	Mounting Options	16
	Routing and Securing the Antenna Cable	19
	Mounting the Receiver	20
	Routing and Connecting the Cables	21
	Connecting the Receiver to External Devices	22
	Default Parameters	23
<b>Chapter 4</b>	<b>Operating the VS131</b>	<b>25</b>
	Powering the Receiver On/Off	26
	LED Indicators	27
	Startup	28
	Using the Menus	29
	Configuring the VS131	30
	Config Wizard Menu	30
	Using the Config Wizard	31
	Disabling the Aiding Features	33
	Disabling Tilt Aiding	33
	Disabling Gyro Aiding	33
	Adjusting the Time Constants	34

Connecting to Existing Navigation Systems	35
Viewing GPS/DGPS Status	35
Do I Have a Signal?	35
How Good is the Quality of My Signal?	35
<b>Appendix A Troubleshooting</b>	<b>37</b>
<b>Appendix B FAQ</b>	<b>41</b>
<b>Appendix C Menu Map</b>	<b>45</b>
Vector Menu	46
GPS Menu	47
Differential Menu	48
Config Wizard Menu	50
System Setup Menu	51
<b>Appendix D Technical Specifications</b>	<b>53</b>
VS131 Receiver Specifications	54
A21 Antenna Specifications	57
A31 Antenna Specifications	58
<b>Index</b>	<b>61</b>
<b>End User License Agreement</b>	<b>63</b>
<b>Warranty Notice</b>	<b>66</b>

21. **TERMINATION.** Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.
22. **EXPORT RESTRICTIONS.** Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.
23. **PRODUCT COMPONENTS.** The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.
24. **FORCE MAJEURE EVENT.** Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.
25. **FORUM FOR DISPUTES.** The parties agree that the courts located in the State of Arizona and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.
26. **APPLICABLE LAW.** This Agreement shall be governed by the laws of the State of Arizona, exclusive of any of its choice of law and conflicts of law jurisprudence.
27. **CISG.** The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.
28. **GENERAL.** This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.

positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.

10. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
11. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.
12. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.
13. **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.
14. **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.
15. **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.
16. **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.
17. **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.
18. **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere.
19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a) negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product, (c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.  
The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.
20. **INDEMNIFICATION.** Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption.



## Chapter 1: Introduction

What's In This Guide?

Product Overview

What's Included in Your Kit

Using VectorPC to Communicate with the VS131



## What's In This Guide?

This User Guide provides the following information to get you up and running quickly with your Vector™ VS131™ GPS compass.

- This chapter briefly describes the VS131 and the parts in your VS131 kit.
- Chapter 2, “Understanding the VS131” discusses GPS and differential operation as well as sensors and time constants related to the VS131.
- Chapter 3, “Installing the VS131” describes how to mount the antennas and receiver, connect the cables, and power the system.
- Chapter 4, “Operating the VS131” provides instructions on configuring the receiver, disabling aiding features, adjusting the time constants, and operating the receiver.
- Appendix A, “Troubleshooting” provides possible solutions for issues.
- Appendix B, “FAQ” includes answer to common questions.
- Appendix C, “Menu Map” provides a full map of all system menus.
- Appendix D, “Technical Specifications” lists the technical specifications of the VS131 and the included antennas.

*Note: Throughout the rest of this user guide the Vector VS131 GPS Compass is referred to simply as the VS131.*

## Product Overview

The VS131 provides a highly-accurate GPS heading that takes into account the pitch, roll, and speed of various vehicles and vessels and is ideal for professional machine control and navigation applications in areas where either beacon or L-band positioning can be achieved. Featuring a Hemisphere GPS Crescent® Vector-based receiver and two separate antennas, VS131 achieves heading accuracy ranging from 0.03° to 0.33° rms (depending on the antenna separation) and offers robust positioning performance.

With more accurate code phase measurements, improved multipath mitigation and fewer components than competing products, VS131 offers superior accuracy and stability.

The VS131 receiver, with its display and user interface, can be conveniently installed near the operator, while the two antennas are mounted separately with a user-determined separation (up to 5 m) to meet the desired accuracy.

VS131 uses L-band, SBAS (WAAS, EGNOS, MSAS, etc.), or beacon for differential GPS positioning—offering differential positioning performance of less than 0.6 m 95% of the time.

VS131 also features Hemisphere GPS' exclusive COAST™ technology that enables Hemisphere GPS receivers to utilize aging differential GPS correction data for 40 minutes or more without significantly affecting positioning quality. VS131 is less likely to be affected by differential signal outages due to signal blockages, weak signals, or interference when using COAST.



## End User License Agreement

**IMPORTANT** - This is an agreement (the “**Agreement**”) between you, the end purchaser (“**Licensee**”) and Hemisphere GNSS Inc. (“**Hemisphere**”) which permits Licensee to use the Hemisphere software (the “**Software**”) that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a “**Product**”. As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. **LICENSE.** Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the “**Software**”), solely in binary executable form.
2. **RESTRICTIONS ON USE.** Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
  - a. install or use more copies of the Software than the number of copies that have been licensed;
  - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
  - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
  - d. modify or create derivative works based on the Software;
  - e. sub-license, rent, lease, loan or distribute the Software;
  - f. permit any third party to use the Software;
  - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
  - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
  - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. **UPDATES.** At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update (“**Update**”) means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
4. **SUPPORT.** Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at any time.
5. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
6. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
7. **TRADEMARKS.** “Hemisphere”, “Hemisphere GPS”, “Hemisphere GNSS”, “Crescent”, “Eclipse” and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
8. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the “**Warranty Period**”), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.
9. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential



SBAS 48	A31 power 58
system setup 51	beacon sensor 54
vector 46	communication 55
mounting <i>See</i> antenna mounting	environmental 56
	GNSS sensor 57
	GPS 54
	power 55
	receiver 54
<b>N</b>	
NMEA messages 22, 42	
<b>P</b>	
position 35	<b>T</b>
power	tilt aid, disabling 33
A21 specifications 57	time constants 34
A31 specifications 58	adjusting 34
powering up the system 26	course-over-ground 11
specifications 55	heading 10
power indicator LED 27	HRTAU 11
powering off the receiver 26	speed 11
powering on the receiver 26	tracking, automatic 6
	turn rate, limits 33
<b>R</b>	
receiver	<b>U</b>
powering off 26	updates, receiving 35
powering on 26	
receiver, mounting 20	<b>V</b>
RTK	vector, menu map 46
constrained heading solution 33	
moving base station 8	<b>W</b>
use by VS131 8	wizard
	configuration 30, 50
	configuration, using 31
<b>S</b>	
SBAS	
coasting between corrections 35	
not available 6	
receiving corrections 35	
tracking 7	
use of 6	
serial ports	
communicate at 22	
communicate with 22	
setup, system, menu map 51	
signal	
indicators 35	
lock 35	
lock, LED readout 35	
quality 35	
specifications	
A21 environmental 57	
A21 L-band sensor 57	
A21 mechanical 57	
A21 power 57	
A31 beacon sensor 58	
A31 environmental 59	
A31 GNSS sensor 58	
A31 L-band sensor 58	
A31 mechanical 58	

Key Features

- Key features of the VS131 include:
- High-precision positioning in L1, SBAS, beacon, and L-band (beacon and L-band require an unlock code)
  - Heave of 30 cm rms (DGPS)
  - Pitch and roll < 1° rms
  - Simple menu operations
  - Accurate heading up to 3 minutes during GPS outages
  - Integrated gyro and tilt sensors deliver fast startup times and provide heading updates during temporary loss of GPS

What’s Included in Your Kit

Your VS131 kit (Figure 1-1) includes the following parts:

- VS131 receiver and related mounting hardware
- Power and data cables

*Note: The standard VS131 kit does not include antennas, antenna mounting hardware, and antenna cables since receiver options vary.*

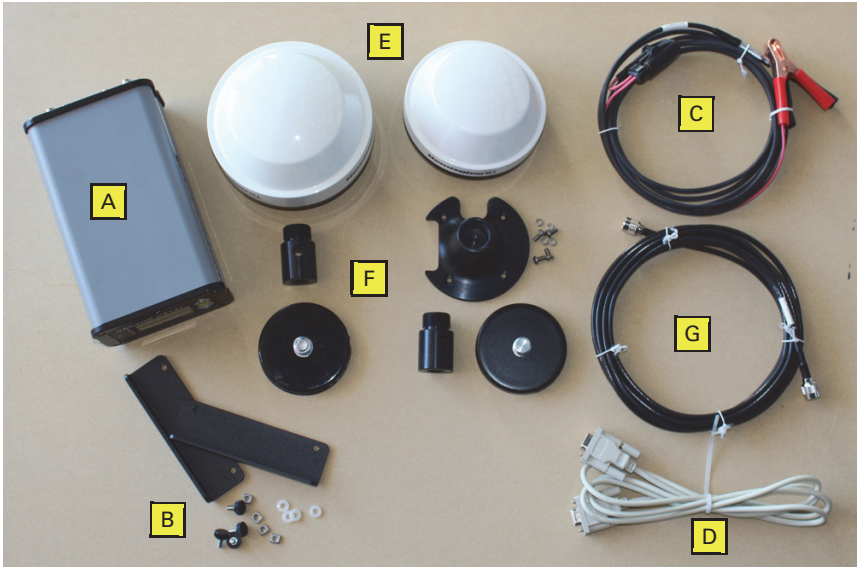


Figure 1-1: VS131 system parts diagram

Table 1-1 on page 4 provides the description and part number of each part in your kit. Review the parts shipped with your kit: if any parts are damaged, contact your freight carrier. If any parts are missing, contact your dealer.

**Table 1-1: Parts list**

Item	Part Name	Qty	Part Number
A	VS131 receiver	1	803-3022-000#
B	Receiver mounting kit (two brackets and related hardware)	1	710-0056-000#
C	Power cable, circular	1	054-0118-000#
D	Data cable, DB-9 female to DB-9 male, 3 m	1	050-0011-022#
<i>The following are available for purchase separately from the standard VS131 kit.</i>			
E	Antenna (quantity of each based on your purchased configuration) A21 A31		804-3036-000# 804-3043-000#
F	Antenna mounting kit (quantity of each based on your purchased configuration) A21 antenna mounting kit A31 antenna mounting kit <i>Note: Your kit may not include a mag mount.</i>		710-0110-000# 710-0111-000#
G	Antenna cable, TNC male to TNC male, 10 m	2	052-0004-000#

## Using VectorPC to Communicate with the VS131

Hemisphere GPS' VectorPC is a free utility program that runs on your Windows PC or Windows mobile device. Simply connect your Windows device to the VS131 via the COM port and open VectorPC. The screens within VectorPC enable you to easily interface with the VS131 to:

- Select the internal SBAS, beacon, or L-band correction source, if available, and monitor reception
- Configure GPS message output and port settings
- Review heading, pitch, and roll visually
- Help calculate heading offset or heading bias
- Help calculate heading offset or heading bias

VectorPC is available for download from the OEM Software Downloads page on the Hemisphere GPS website ([www.hemispheregps.com](http://www.hemispheregps.com)).

## Index

### Numerics

1 PPS output 22

### A

A21 antenna  
GNSS sensor specifications 57  
L-band sensor specifications 57  
A31 antenna  
beacon sensor specifications 58  
GNSS sensor specifications 58  
L-band sensor specifications 58  
accelerometer *See* tilt aid  
antenna  
cable, routing and securing 19  
mounting 16  
mounting, magnetic 17  
mounting, pole mount 18  
mounting, rail mount 19  
placement, optimal 15  
primary, search volume 8  
secondary 8

### B

base station, moving, RTK 8  
baud rate 42  
beacon  
A31 sensor specifications 58  
description of 7  
sensor specifications 54  
status 35

### C

cables  
antenna 19  
connecting 21  
selecting port, message output 22  
COAST  
corrections from external source 42  
communication specifications 55  
configuration  
menu system 29  
of the system 30  
returning to factory defaults 29  
wizard 30, 50  
wizard, using 31

### D

DGPS  
status 35  
DGPS position indicator LED 27

Diff (differential source)  
menu map 48  
disabling  
gyro 33  
tilt aid 33

### E

environmental  
A21 specifications 57  
A31 specifications 59  
environmental specifications 56  
event marker 22

### G

GNSS  
A31 sensor specifications 58  
sensor specifications 57  
GPS  
menu map 47  
operation 6  
receiver performance 6  
specifications 54  
status 35  
gyro 33  
aiding 9  
calibration, self or manual 9  
disabling 33

### H

heading 14, 35  
bias 14  
heading rate time constant 11  
HRTAU 11

### L

L-band  
A21 sensor specifications 57  
A31 sensor specifications 58  
LED  
DGPS position indicator 27  
indicators 27  
power indicator 27

### M

mechanical  
A21 specifications 57  
A31 specifications 58  
menu map 28  
Diff (differential source) 48  
GPS 46, 47



## **Chapter 2: Understanding the VS131**

GPS Overview  
VS131 Overview

## GPS Overview

For your convenience, both the GPS and SBAS operation of the VS131 features automatic operational algorithms. When powered for the first time, the VS131 performs a “cold start,” which involves acquiring the available GPS satellites in view and the SBAS differential service.

If SBAS is not available in your area, an external source of RTCM SC-104 differential corrections may be used. If you use an external source of correction data, it must support an eight data bit, no parity, one stop bit configuration (8-N-1).

## GPS Operation

The GPS receiver is always operating, regardless of the DGPS mode of operation. The following sections describe the general operation of the VS131’s internal GPS receiver.

*Note: Differential source have no impact on heading, pitch, or roll. It only has an impact on positioning and heave.*

### Automatic Tracking

The VS131’s internal GPS receiver automatically searches for GPS satellites, acquires the signals, and manages the navigation information required for positioning and tracking.

### Receiver Performance

The VS131 works by finding four or more GPS satellites in the visible sky. It uses information from the satellites to compute a position within 2.5 m. Since there is some error in the GPS data calculations, the VS131 also tracks a differential correction. The VS131 uses these corrections to improve its position accuracy to better than 0.6 m.

There are two main aspects of GPS receiver performance:

- Satellite acquisition
- Positioning and heading calculation

When the VS131 is properly positioned, the satellites transmit coded information to the antennas on a specific frequency. This allows the receiver to calculate a range to each satellite from both antennas. GPS is essentially a timing system. The ranges are calculated by timing how long it takes for the signal to reach the GPS antenna. The GPS receiver uses a complex algorithm incorporating satellite locations and ranges to each satellite to calculate the geographic location and heading. Reception of any four or more GPS signals allows the receiver to compute three-dimensional coordinates and a valid heading.

## Differential Operation

The purpose of differential GPS (DGPS) is to remove the effects of selective availability (SA), atmospheric errors, timing errors, and satellite orbit errors, while enhancing system integrity.

Autonomous positioning capabilities of the VS131 will result in positioning accuracies of 2.5 m 95% of the time. To improve positioning quality to sub-meter levels, the VS131 is able to use differential corrections received through the internal SBAS demodulator or externally-supplied RTCM corrections.

Table D-19: A31 environmental specifications

Specification	Description
Storage temperature	-40°C to +85°C (-40°F to +185°F)
Operating temperature	-30°C to +70°C (-22°F to +158°F)
Enclosure rating	IP69K
Shock and vibration	EP 455
Humidity	95%, non-condensing

## A31 Antenna Specifications

Table D-14 through Table D-19 list the technical specifications of the A31 antenna.

**Table D-14: A31 GNSS sensor specifications**

Specification	Description
GNSS reception	GPS, SBAS, L-band, and beacon
GNSS frequency	1.575 GHz (L1)
LNA gain	30 dB
LNA noise	< 2.0 dB

**Table D-15: A31 L-Band sensor specifications**

Specification	Description
L-Band frequency	1.525 - 1.585 GHz
L-Band LNA gain	30 dB

**Table D-16: A31 Beacon sensor specifications**

Specification	Description
Beacon frequency	283.5 - 325 kHz
Beacon LNA gain	30 dB

**Table D-17: A31 power specifications**

Specification	Description
Input voltage	5 to 12 VDC
Input current	50 to 60 mA

**Table D-18: A31 mechanical specifications**

Specification	Description
Enclosure	Lexan
Dimensions	10.4 H x 14.5 D (cm) 4.1 H x 5.7 D (in)
Weight	734 g (25.9 oz)
Mounting thread	1" coarse thread (5/8" adapter available)
Connector	TNC

In addition to these differential services the VS131 can also receive radiobeacon corrections.

For more information on the differential services and the associated commands refer to the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon).

### Automatic SBAS Tracking

The VS131 automatically scans and tracks SBAS signals without the need to tune the receiver. The VS131 features two-channel tracking that provides an enhanced ability to maintain a lock on an SBAS satellite when more than one satellite is in view. This redundant tracking approach results in more consistent tracking of an SBAS signal in areas where signal blockage of a satellite is possible.

### Beacon Operation

Many marine authorities, such as coast guards, have installed networks of radiobeacons that broadcast DGPS corrections to users of this system. With the increasing utility of these networks for terrestrial applications, there is an increasing trend toward densification of these networks inland. The dual channel beacon receiver in the VS131 can operate in manual or automatic tuning mode, or, using database mode, will select the closest station in compliance with IEC 61108-4 standards.

### L-Band

L-band corrections are available worldwide through third-party providers. With this service, the positioning accuracy does not degrade as a function of distance to a base station, as the data content is not composed of a single base station's information, but an entire network's information.

## VS131 Overview


The VS131 provides accurate and reliable heading and position information at high update rates. To accomplish this task, the VS131 uses a high performance GPS receiver and two antennas for GPS signal processing. One antenna is designated as the primary GPS antenna and the other is the secondary GPS antenna. Positions computed by the VS131 are referenced to the phase center of the primary GPS antenna. Heading data references the vector formed from the primary GPS antenna phase center to the secondary GPS antenna phase center.

### Fixed Baseline Moving Base Station RTK

The VS131's internal GPS receiver uses both the L1 GPS C/A code and carrier phase data to compute the location of the secondary GPS antenna in relation to the primary GPS antenna with a very high sub-centimeter level of precision. The technique of computing the location of the secondary GPS antenna with respect to the primary antenna, when the primary antenna is moving, is often referred to as moving base station Real Time Kinematic (or moving base station RTK).

Generally, RTK technology is very sophisticated and requires a significant number of possible solutions to be analyzed where various combinations of integer numbers of L1 wavelengths to each satellite intersect within a certain search volume. The integer number of wavelengths is often referred to as the "ambiguity" as they are initially ambiguous at the start of the RTK solution.

The VS131 restricts the RTK solution by knowing that the secondary GPS antenna is a fixed distance from the primary GPS antenna. The default value is 1.0 m, but you may install the antennas with a different separation distance, then enter that value into the VS131. This is called a fixed baseline and it defines the search volume of the secondary antenna as the surface of a sphere with radius 1.0 m centered on the location of the primary antenna (see Figure 2-1).

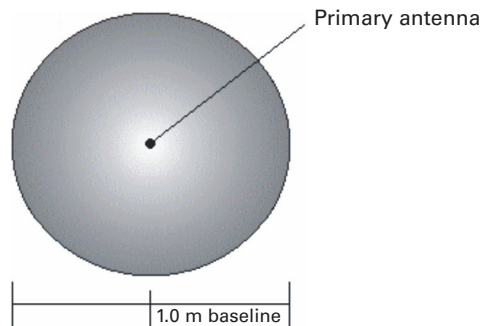

**Figure 2-1: Secondary antenna's search volume**

*Note: The VS131 moving base station algorithm only uses GPS to calculate heading. Differential and RTK corrections are not used in this calculation and will not affect heading accuracy.*

## A21 Antenna Specifications

Table D-9 through Table D-13 list the technical specifications of the A21 antenna.

**Table D-9: A21 GNSS sensor specifications**

Specification	Description
GNSS reception	GPS, SBAS, and L-band
GNSS frequency	1.575 GHz (L1)
LNA gain	30 dB
LNA noise	< 2.0 dB

**Table D-10: A21 L-Band sensor specifications**

Specification	Description
L-Band frequency	1.525 - 1.585 GHz
L-Band LNA gain	30 dB

**Table D-11: A21 power specifications**

Specification	Description
Input voltage	3.3 to 12 VDC
Input current	24 mA, typical

**Table D-12: A21 mechanical specifications**

Specification	Description
Enclosure	Aluminum base with ASA plastic cap
Dimensions	7.0 H x 13.0 D (cm) 2.8 H x 5.1 D (in)
Weight	380 g (13.4 oz)
Mounting thread	5/8" female thread
RF connector	TNC

**Table D-13: A21 environmental specifications**

Specification	Description
Operating temperature	-30°C to +70°C (-22°F to +158°F)
Storage temperature	-40°C to +85°C (-40°F to +185°F)
Enclosure rating	IP69K
Shock and vibration	EP455
Humidity	96% non condensing



**Table D-6: VS131 environmental specifications**

Item	Specification
Operating temperature	-30°C to +70°C (-22°F to +158°F)
Storage temperature	-40°C to +85°C (-40°F to +185°F)
Humidity	95%, non-condensing
Enclosure rating	IP66 (IEC 60529)
Shock and vibration	Mechanical Shock: EP455 Section 5.14.1 Vibration: EP455 Section 5.15.1 Random
EMC	CE (IEC 60945 Emissions and Immunity), FCC Part 15, Subpart B, CISPR 22
IMO wheelmarked certification	No

**Table D-7: VS131 mechanical specifications**

Item	Specification
Dimensions	20.2 L x 12.0 W x 7.5 H (cm) 8.0 L x 4.7 W x 3.0 H (in)
Weight	~1.1 kg (2.5 lb)
Status indications (LEDs)	Power, primary GPS lock, secondary GPS lock, differential lock, DGPS position, heading, L-band lock
Power switch	Front panel soft switch
Power connector	2-pin ODU metal circular
Data connectors	(2) DB9 sealed
Antenna connectors	(2) TNC female

**Table D-8: Aiding devices**

Item	Specification
Gyro	Provides smooth heading, fast heading reacquisition, and reliable < 1° per minute heading for periods up to 3 minutes when loss of GPS has occurred. <sup>5</sup>
Tilt Sensors	Provide pitch, roll data and assist in fast start-up and reacquisition of heading solution.

<sup>1</sup>Depends on multipath environment, number of satellites in view, and satellite geometry<sup>2</sup>Requires a subscription from L-band service provider<sup>3</sup>Based on a 40 second time constant<sup>4</sup>Hemisphere GPS proprietary<sup>5</sup>Under static conditions

## Supplemental Sensors


The VS131 has an integrated gyro and two tilt sensors, which are enabled by default. Each supplemental sensor may be individually enabled or disabled. Both supplemental sensors are mounted on the printed circuit board inside the VS131.

The sensors act to reduce the RTK search volume, which improves heading startup and reacquisition times. This improves the reliability and accuracy of selecting the correct heading solution by eliminating other possible, erroneous solutions.

The Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon) describes the commands and methodology required to recalibrate, query, or change the sensors status.


### Tilt Aiding

The VS131's accelerometers (internal tilt sensors) are factory calibrated and enabled by default. This constrains the RTK heading solution beyond the volume associated with just a fixed antenna separation. This is because the VS131 knows the approximate inclination of the secondary antenna with respect to the primary antenna. The search space defined by the tilt sensor will be reduced to a horizontal ring on the sphere's surface by reducing the search volume. This considerably decreases startup and reacquisition times (see Figure 2-2).

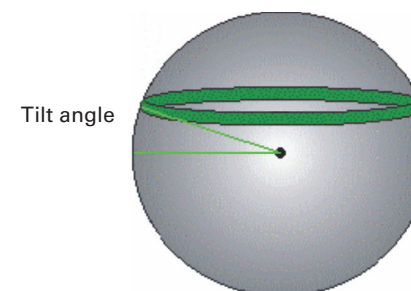**Figure 2-2: VS131's tilt aiding**

### Gyro Aiding

The VS131's internal gyro offers several benefits. It reduces the sensor volume for an RTK solution. This shortens reacquisition times when a GPS heading is lost because the satellite signals were blocked. The gyro provides a relative change in angle since the last computed heading, and, when used in conjunction with the tilt sensor, defines the search space as a wedge-shaped location (see Figure 2-3).

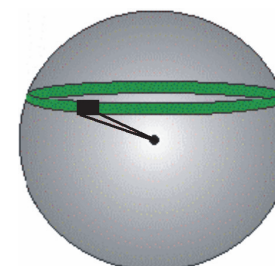**Figure 2-3: VS131's gyro aiding**

The gyro aiding accurately smoothes the heading output and the rate of turn. It provides an accurate substitute heading for a short period depending on the roll and pitch of the vessel, ideally seeing the system through to reacquisition. The gyro provides an alternate source of heading, accurate to within 1° per minute for up to three minutes, in times of GPS loss for either antenna. If the outage lasts longer than three minutes, the gyro will have drifted too far and the VS131 begins outputting null fields in the heading output messages. There is no user control over the timeout period of the gyro.

The gyro initializes itself at powerup and during initialization, or you can calibrate it as outlined in the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon). When the gyro is first initializing, it is important that the dynamics that the gyro experiences during this warmup period are similar to the regular operating dynamics. For example, if you use the VS131 on a high speed, maneuverable craft, it is essential that when gyro aiding in the VS131 is first turned on, use it in an environment that has high dynamics for the first five to ten minutes instead of sitting stationary.

With the gyro enabled, the gyro is also used to update the post HTAU smoothed heading output from the moving base station RTK GPS heading computation. This means that if the HTAU value is increased while gyro aiding is enabled, there will be little to no lag in heading output due to vehicle maneuvers. The Hemisphere GPS Technical Reference includes information on setting an appropriate HTAU value for the application.

## Time Constants

The VS131 incorporates user-configurable time constants that can provide a degree of smoothing to the heading, pitch, rate of turn (ROT), course over ground (COG), and speed measurements. You can adjust these parameters depending on the expected dynamics of the vessel. For example, increasing the time is reasonable if the vessel is very large and is not able to turn quickly or would not pitch quickly. The resulting values would have reduced 'noise,' resulting in consistent values with time. However, if the vessel is quick and nimble, increasing this value can create a lag in measurements. Formulas for determining the level of smoothing are located in the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon). If you are unsure on how to set this value, it is best to be conservative and leave it at the default setting.

### Heading Time Constant

Use the \$JATT,HTAU command to adjust the level of responsiveness of the true heading measurement provided in the \$GPHDT message. The default value of this constant is 2.0 seconds of smoothing when the gyro is enabled. The gyro is enabled by default, but can be turned off. By turning the gyro off, the equivalent default value of the heading time constant would be 0.5 seconds of smoothing. This is not automatically done and therefore you must manually enter it. Increasing the time constant increases the level of heading smoothing and increases lag.

### Pitch Time Constant

Use the \$JATT,PTAU command to adjust the level of responsiveness of the pitch measurement provided in the \$PSAT,HPR message. The default value of this constant is 0.5 seconds of smoothing. Increasing the time constant increases the level of pitch smoothing and increases lag.

**Table D-3: VS131 L-band sensor specifications**

Item	Specification
Sensitivity	-130 dBm
Channel spacing	7.5 kHz
Satellite selection	Manual and automatic
Reacquisition time	15 seconds (typical)
Rejection	15 kHz spacing > 30 dB 300 kHz spacing > 60 dB
Processor	DSP for demodulation and protocol decoding module provides processing for differential algorithms
Command support	Reports L-band region and satellite information Allows input and status of L-band subscription, bit error rate (BER) output for reception quality indication, and manual frequency tuning

**Table D-4: VS131 communication specifications**

Item	Specification
Serial ports	2 full-duplex RS-232
USB ports	1 USB-B
Baud rates	4800 - 115200
Data I/O protocol	NMEA 0183, Crescent binary <sup>4</sup>
Correction I/O protocol	RTCM v2.3 (DGPS), RTCM SC-104, L-Dif <sup>4</sup>
Timing output	1 PPS CMOS, active high, rising edge sync, 10 kΩ, 10 pF load

**Table D-5: VS131 power specifications**

Item	Specification
Power input voltage	8 to 36 VDC
Power consumption	< 4.5 W nominal (L1 GPS and L-band) < 3.6 W nominal (L1 GPS)
Current consumption	< 0.38 A nominal (L1 GPS and L-band) < 0.30 A nominal (L1 GPS)
Power isolation	500 V
Reverse polarity protection	Yes
Antenna short circuit protection	Yes

## VS131 Receiver Specifications

Table D-1 through Table D-7 list the technical specifications of the VS131.

**Table D-1: VS131 GPS sensor specifications**

Item	Specification															
Receiver type	L1, C/A code, with carrier phase smoothing															
Signals received	GPS															
Channels	24															
GPS sensitivity	-142 dBm															
SBAS tracking	2-channel, parallel tracking															
Update rate	10 Hz standard, 20 Hz available by subscription															
Horizontal accuracy	<table><tr><td></td><td>RMS (67%)</td><td>2DRMS (95%)</td></tr><tr><td>L-band DGPS service<sup>1,2</sup></td><td>0.3 m</td><td>0.6 m</td></tr><tr><td>SBAS (WAAS)<sup>1</sup></td><td>0.3 m</td><td>0.6 m</td></tr><tr><td>Beacon<sup>1</sup></td><td>0.3 m</td><td>0.6 m</td></tr><tr><td>Autonomous, no SA<sup>1</sup></td><td>1.2 m</td><td>2.5 m</td></tr></table>		RMS (67%)	2DRMS (95%)	L-band DGPS service <sup>1,2</sup>	0.3 m	0.6 m	SBAS (WAAS) <sup>1</sup>	0.3 m	0.6 m	Beacon <sup>1</sup>	0.3 m	0.6 m	Autonomous, no SA <sup>1</sup>	1.2 m	2.5 m
	RMS (67%)	2DRMS (95%)														
L-band DGPS service <sup>1,2</sup>	0.3 m	0.6 m														
SBAS (WAAS) <sup>1</sup>	0.3 m	0.6 m														
Beacon <sup>1</sup>	0.3 m	0.6 m														
Autonomous, no SA <sup>1</sup>	1.2 m	2.5 m														
Heading accuracy	< 0.33° rms @ 0.5 m antenna separation < 0.17° rms @ 1.0 m antenna separation < 0.08° rms @ 2.0 m antenna separation < 0.03° rms @ 5.0 m antenna separation															
Pitch/roll accuracy	< 1° rms															
Heave accuracy	30 cm rms <sup>3</sup>															
Timing (1PPS) accuracy	50 ns															
Rate of turn	90°/s maximum															
Cold start time	< 60 s typical (no almanac or RTC)															
Warm start time	< 20 s typical (almanac and RTC)															
Hot start time	< 1 s (almanac, RTC, and position)															
Heading fix	< 10 s typical (valid position)															
Maximum speed	1,850 kph (999 kts)															
Maximum altitude	18,288 m (60,000 ft)															

**Table D-2: VS131 beacon sensor specifications**

Item	Specification
Channels	2-channel, parallel tracking
Frequency range	283.5 to 325 kHz
Operating modes	Manual, automatic, and database
Compliance	IEC 61108-4 beacon standard

### Rate of Turn (ROT) Time Constant

Use the \$JATT,HRTAU command to adjust the level of responsiveness of the ROT measurement provided in the \$GPROT message. The default value of this constant is 2.0 seconds of smoothing. Increasing the time constant increases the level of ROT smoothing.

### Course Over Ground (COG) Time Constant

Use the \$JATT,COGTAU command to adjust the level of responsiveness of the COG measurement provided in the \$GPVTG message. The default value of this constant is 0.0 seconds of smoothing. Increasing the time constant increases the level of COG smoothing. COG is computed using only the primary GPS antenna and its accuracy depends upon the speed of the vessel (noise is proportional to 1/speed). This value is invalid when the vessel is stationary.

### Speed Time Constant

Use the \$JATT,SPDTAU command to adjust the level of responsiveness of the speed measurement provided in the \$GPVTG message. The default value of this parameter is 0.0 seconds of smoothing. Increasing the time constant increases the level of speed measurement smoothing.



## **Appendix D: Technical Specifications**

VS131 Receiver Specifications

A21 Antenna Specifications

A31 Antenna Specifications



## **Chapter 3: Installing the VS131**

Mounting the Antennas

Mounting the Receiver

Routing and Connecting the Cables

Connecting the Receiver to External Devices

Default Parameters

## Mounting the Antennas

Hemisphere GPS recommends mounting the antennas first then the mounting the receiver. When mounting the antennas consider the following:

- Mounting orientation (parallel or perpendicular)
- Proper antenna placement
- Mounting options (magnetic, pole, or rail mounting)

### Antenna Options

The standard VS131 kit does not include antennas. Your VS131 kit may contain one of each or two of one of the following antennas: A21 and A31. For example:

- If you **will** be using beacon, your kit may include one A31 beacon antenna and one A21 antenna.
- If you **will not** be using beacon, your kit may include two A21 antennas.

### Mounting Orientation

The VS131 outputs heading, pitch, and roll readings regardless of the orientation of the antennas. However, the relation of the antennas to the boat's axis determines whether you will need to enter a heading, pitch, or roll bias. The primary antenna is used for positioning and the primary and secondary antennas, working in conjunction, output heading, pitch, and roll values.

Regardless of which mounting orientation you use, the VS131 provides the ability to output the heave of the vessel. This output is available via the \$GPHEV message. For more information on this message refer to the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon).

#### Parallel Orientation

The most common installation is to orient the antennas parallel to, and along the centerline of, the axis of the boat. This provides a true heading. In this orientation:

- If you use a gyrocompass, you can enter a heading bias in the VS131 to calibrate the physical heading to the true heading of the vessel.
- You may need to adjust the pitch/roll output to calibrate the measurement if the Vector is not installed in a horizontal plane.

#### Perpendicular Orientation

You can also install the antennas so they are oriented perpendicular to the centerline of the boat's axis. In this orientation:

- You will need to enter a heading bias of +90° if the primary antenna is on the starboard side of the boat and -90° if the primary antenna is on the port side of the boat.
- You will need to configure the receiver to specify the GPS antennas are measuring the roll axis using \$JATT,ROLL,YES.
- You will need to enter a roll bias to properly output the pitch and roll values.
- You may need to adjust the pitch/roll output to calibrate the measurement if the Vector is not installed in a horizontal plane.

## System Setup Menu

The System Setup menu allows you quickly view and edit current system settings. General settings include such items as current applications, units, baud rates, logs, LED contrast, subscription code, display orientation (you can flip the display 180° by selecting *YES* under *Flip Display*), and language.

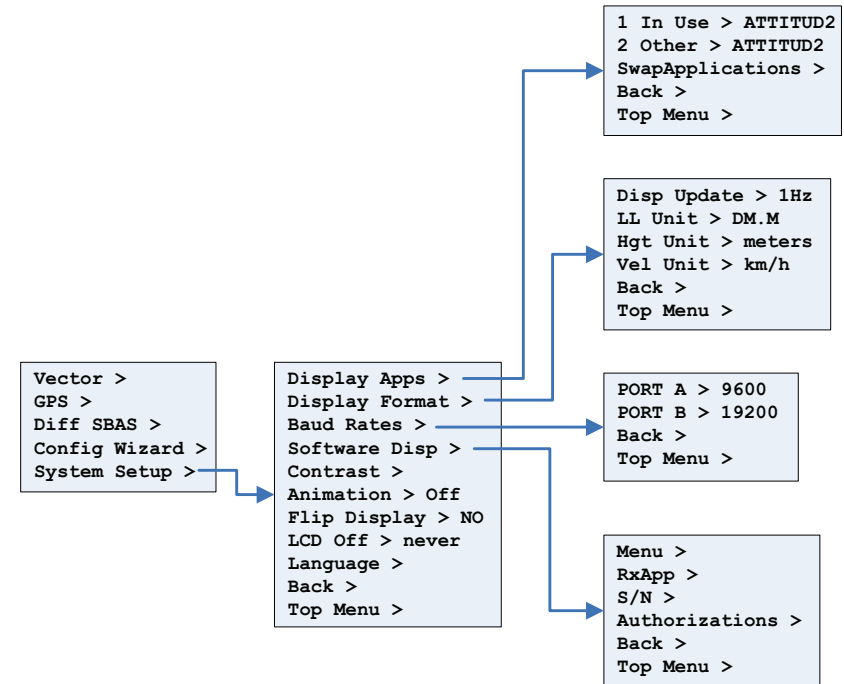


Figure C-8: System Setup menu



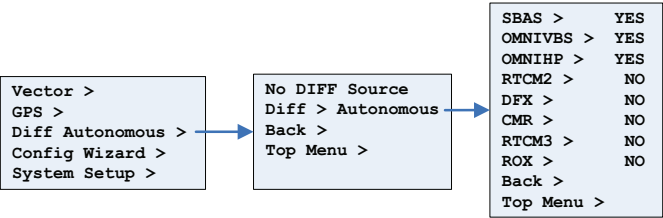


Figure C-6: Autonomous menu




Figure C-7: External RTCM menu

Config Wizard Menu

The Config Wizard walks you through basic settings to get up and running. See “Config Wizard Menu” on page 30 to view the Config Wizard menu map.

Planning the Optimal Antenna Placement

*Note: In the VS131 kit, install the A21 antenna as the primary antenna as it is used for positioning.*

Proper antenna placement is important to obtain a high-precision GPS reading. For the best results, orient the antennas so the antennas’ connectors face the same direction. Also, place the antennas:

- With a clear view of the horizon
- Away from other electronics and antennas
- Along the vessel’s centerline

**⚠WARNING:** You must install the primary antenna along the vessel’s centerline; you cannot adjust the position readings if the primary antenna is installed off the centerline. Positions are computed for the primary antenna.

- On a level plane
- With a 5.0 m maximum separation (default is 1.0 m)
- Away from radio frequencies
- As high as possible

Set the MSEP value to be accurate to within 1 to 2 cm. For more information on MSEP refer to the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon).

See Figure 3-1 below through Figure 3-3 on page 16 for mounting orientation examples.

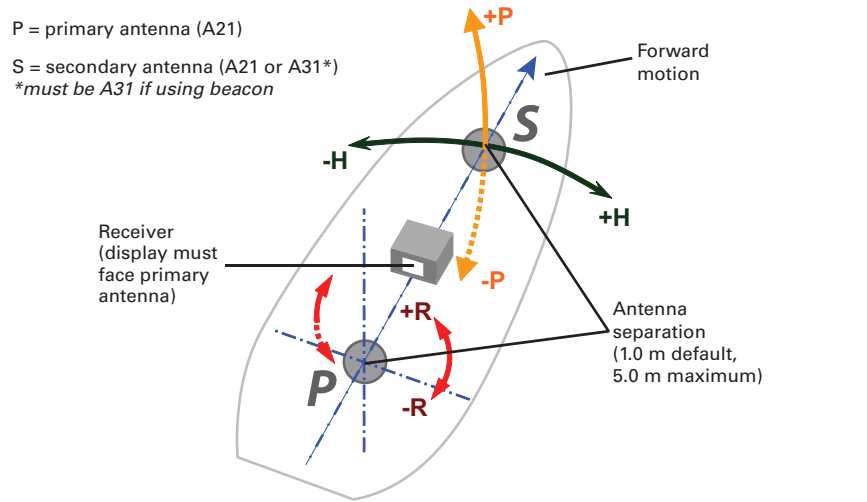


Figure 3-1: Recommended orientation and resulting signs of HPR values

P = primary antenna (A21)

S = secondary antenna (A21 or A31\*)

\*must be A31 if using beacon

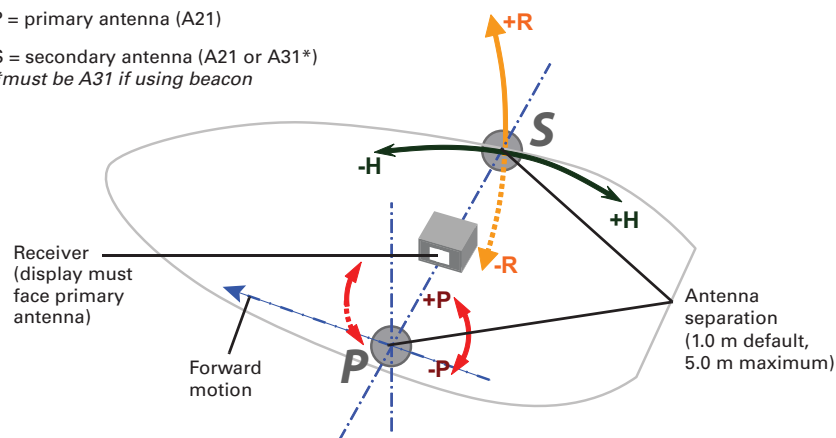


Figure 3-2: Alternate orientation and resulting signs of HPR values

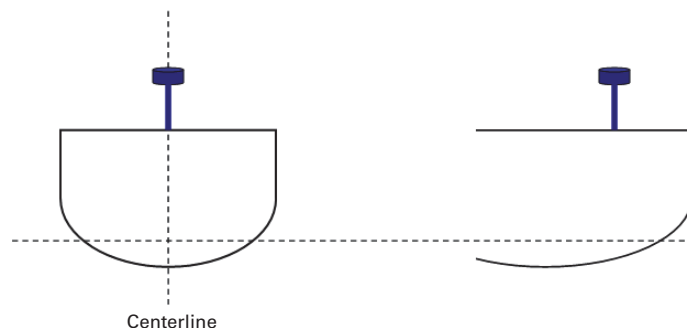


Figure 3-3: Antenna installation: Cross-section of boat

## Mounting Options

You can mount the antennas with a magnetic mount, pole mount, or rail mount configuration. You can secure the antennas to a threaded pole or threaded mount using the included mounting adapters.

Depending on the antennas included in your kit, you may need to use the included antenna height adapters to bring the antennas level. If the adapter is not used, you will need to enter a non-level bias calculation into the system (see "Q: I could not install my antennas at the same height. How do I calibrate for the height offset?" on page 43 of Appendix B, "FAQ.")

**WARNING:** The maximum allowable antenna separation is 5.0 m. Any greater distance may result in an incorrect heading.

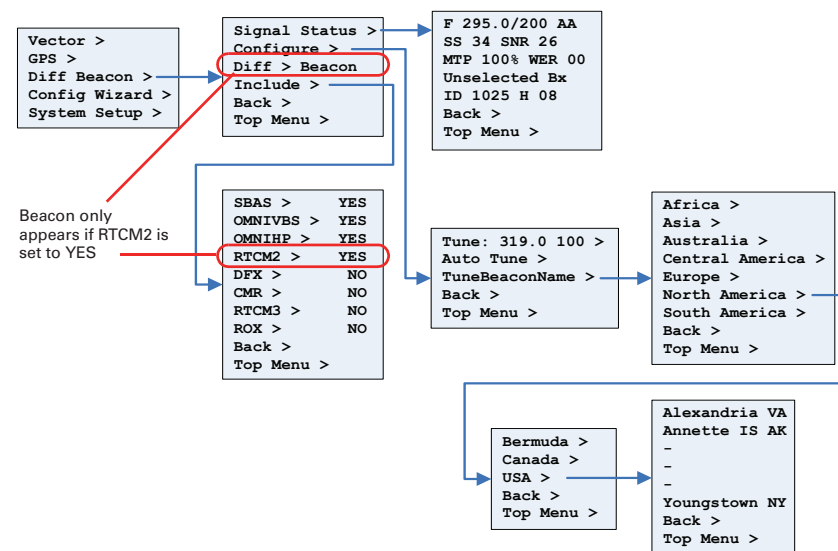


Figure C-4: Beacon menu

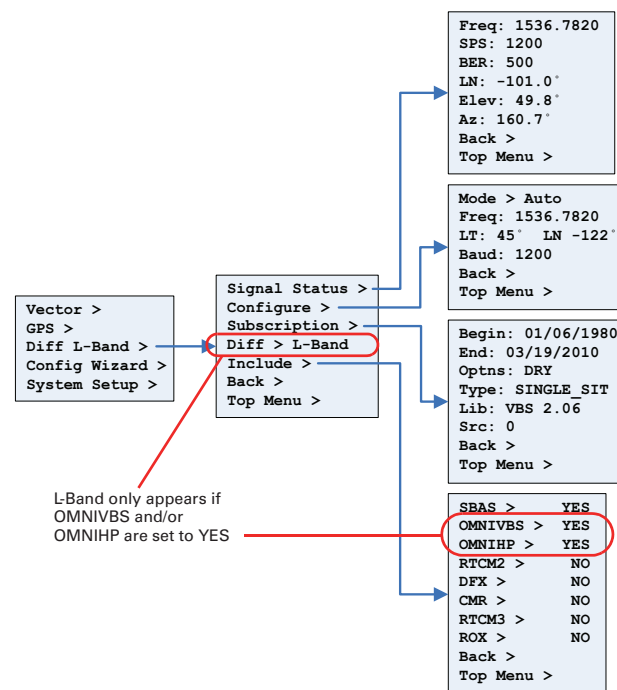


Figure C-5: L-band menu

## Differential Menu

Use the Differential menu to view or change your differential settings. The following available differential sources depend on the configuration you purchased.

- SBAS
- Beacon (RTCM2) - available with purchased unlock code
- L-band (OMNIVBS, OMNIHP) - available with purchased unlock code
- None (Autonomous)

To select the differential source:

1. Press **Differential > Include** then set each format you may use to **Yes**. For example, if you will be using Beacon, set RTCM2 to Yes.
2. Press **Back** to return to the previous menu level, press **InUse**, then select your preferred differential source. For example, if you will be using Beacon, select Beacon (RTCM2 will be displayed when finished).

Figure C-3 through Figure C-8 show the complete menu maps for the SBAS, Beacon, L-band, and Autonomous, respectively. The Include menu (at right) in each of these figures shows all available formats. If you have not purchased unlock codes for L-band and Beacon, the OMNIVBS/OMNIHP (L-band) and RTCM2 (Beacon) menu items will not appear on your menu.

```

SBAS >      YES
OMNIVBS >   YES
OMNIHP >    YES
RTCM2 >     NO
DFX >       NO
CMR >       NO
RTCM3 >     NO
ROX >       NO
Back >
Top Menu >
  
```

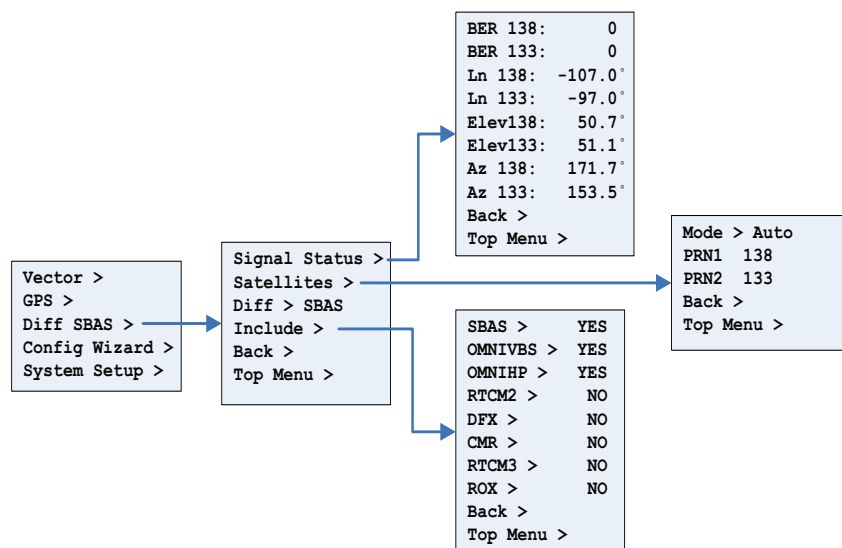


Figure C-3: SBAS menu

## Magnetic Mounting

The following procedure assumes your kit contains one A31 beacon antenna and one A21 antenna. If your kit contains two A21 antennas (no beacon), mount both antennas in the same manner as outlined in the steps for the A21.

*Note: Your kit may not include a magnetic mount.*

You can screw the magnetic mount into the bottom of the antenna and mount it to any metal surface. If there are no metal surfaces, use the zinc disc and foam adhesive included in your kit to mount the antenna.

To mount the antennas using the magnetic mount:

1. Select a location and orientation that meet the requirements outlined in "Mounting Orientation" on page 14 and "Planning the Optimal Antenna Placement" on page 15.
2. **A21 antenna only:** Unlike the A31, the A21 antenna does not include a threaded mounting hole. You must attach the mounting bracket (see at right) using the four screws in your kit.
3. Attach the magnetic mount extension to the magnetic base plate.




*Note: Photos at right and in step 4 show the zinc disc attached to the magnetic base plate. You will only need the zinc disc if mounting the antenna to a non-metal surface (see steps 6 through 11).*



4. Thread the magnetic mount into the mounting bracket on the bottom of the A21 antenna or into the bottom of the A31 antenna.


**⚠ WARNING:** When threading the magnetic mounts, hand tighten only. Damage resulting from over-tightening may void your warranty.

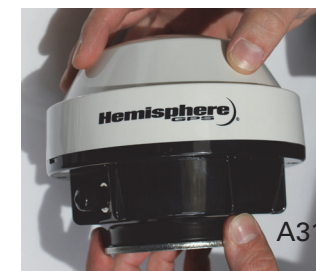

If you are mounting the antenna on a metal surface, go to step 5.

If you are mounting the antenna on a non-metal surface and need to use the metal disc and foam adhesive, skip step 5 and complete steps 6 through 11.

- Place the antenna in the desired location, ensuring the antenna is secure in its mounting position (end of metal surface mounting procedure).
- Clean and dry the surface where you will attach the zinc disc.
- Remove the backing from one side of the foam adhesive and press the adhesive onto the zinc plate (at right).
- Remove the backing from the other side of the foam adhesive and press the zinc disc onto the mounting surface on the vessel, applying firm pressure to ensure good adhesion.
- Place the antenna on top of the zinc disc, ensuring the antenna is secure in its mounting position.

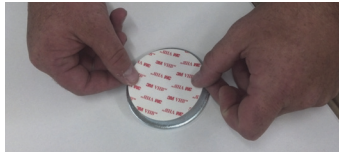

### Pole Mounting

The following procedure assumes your kit contains one A31 beacon antenna and one A21 antenna. If your kit contains two A21 antennas (no beacon), mount both antennas in the same manner as outlined in the steps for the A21. You can pole-mount the antennas using existing hardware on your vessel.

To mount the antennas using a pole mount:

- Select a location and orientation that meet the requirements outlined in "Mounting Orientation" on page 14 and "Planning the Optimal Antenna Placement" on page 15.
- A21 antenna only:** Unlike the A31, the A21 antenna does not include a threaded mounting hole. You must attach the mounting base using the four screws included in your kit (see at right).
- Thread the pole mount (not included) into the mounting bracket on the bottom of the A21 antenna or into the bottom of the A31 antenna.



A21



A31

**⚠ WARNING:** When threading the pole mounts, hand tighten only. Damage resulting from over-tightening may void your warranty.

- Mark and drill any mounting holes necessary for the pole mounts.

## GPS Menu

Use the GPS menu to view and edit your GPS settings. Settings include the data port outputs, specific positioning parameters, UTC time offset, and satellite visibility and positioning information.

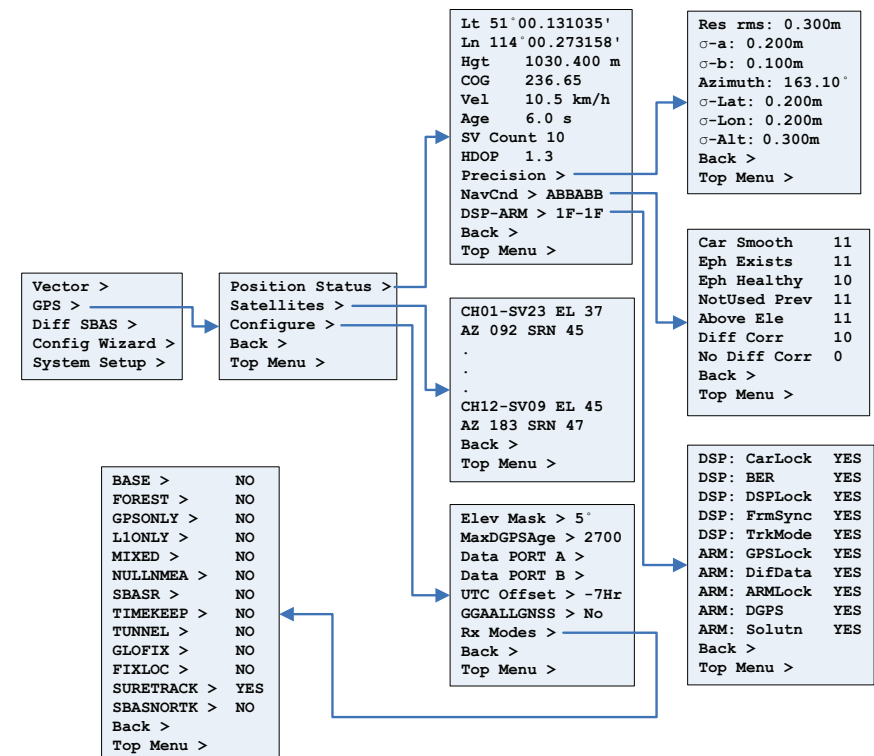


Figure C-2: GPS menu

This appendix shows the complete menu map for each menu (listed below) on the VS131 Top menu:

- Vector
- GPS
- Diff (differential)
- Config Wizard
- System Setup

## Vector Menu

Use the Vector menu to view and adjust Vector settings. Options vary depending on whether you select Pitch or Roll and include such items as aiding features, time constants, heading bias, and antenna separation.

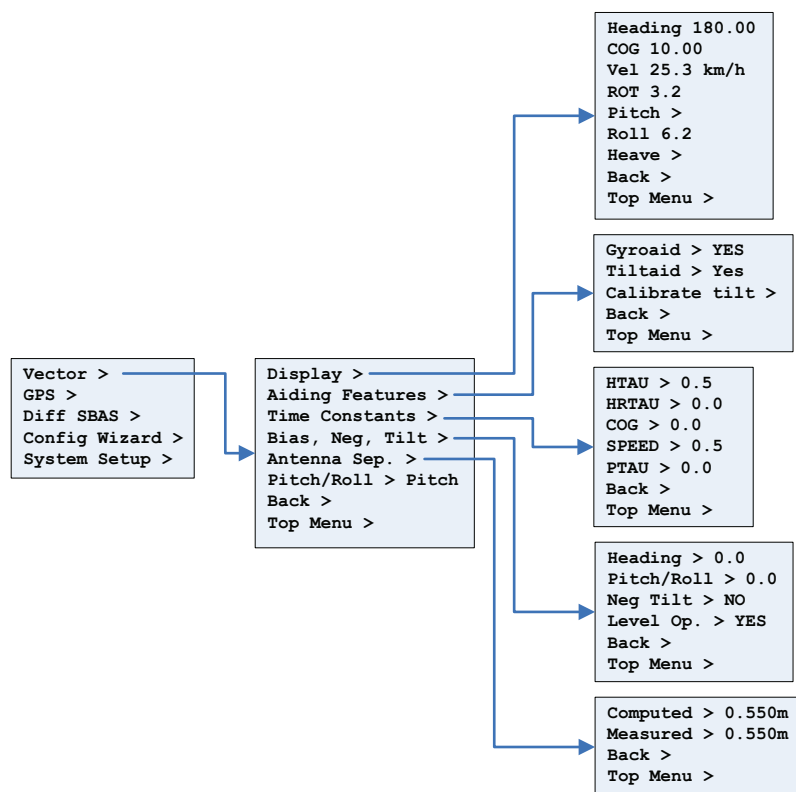


Figure C-1: Vector menu

## Rail Mounting

You can rail mount the antennas using existing hardware on your vessel.

To rail mount the antennas:

1. Select a location and orientation that meet the requirements listed in “Mounting Orientation” on page 14 and “Planning the Optimal Antenna Placement” on page 15.
2. Use appropriate hardware to securely attach the antenna to the railing.

## Routing and Securing the Antenna Cable

**⚠WARNING:** The VS131 receiver provides 5 VDC across the antenna ports. Connection to incompatible devices may damage equipment.

To route and secure the antenna cables, review the following guidelines. The two enclosed antennas each require a 50  $\Omega$  impedance antenna extension cable, such as RG-58U (up to a maximum of 15 m (49 ft.) in length), for proper operation.

- The GPS receiver inside the VS131 requires a minimum input gain of 10 dB (and maximum of 40 dB before saturation will occur). The antennas offer 28 dB of gain, so the loss budget to accommodate for cable losses is 18 dB.
- Regardless of the cable material and length you choose, ensure the cable losses are less than 18 dB of attenuation. Due to variances in the antenna gain and practical attenuation of cable materials and connectors, Hemisphere GPS recommends reducing this budget to 15 dB; this budget is present to overcome the resulting attenuation of an RF cable.
- When deciding on an antenna location, consider the amount of cable required: a longer cable of the same material will result in a higher loss than a shorter one. If the overall loss of the longer cable exceeds 15 dB, change the cable material (this normally means a more expensive material that has a larger diameter and less flexibility). The standard cables included with the VS131 are of the RG58 material family and their attenuation is ~0.8 dB/m. Including connector losses, the nominal loss of these RF cables is ~10 dB, which is within the tolerable loss budget. If a 15 m or 20 m cable run is required, a RG8 variety is available. If lengths longer than 20 m are required, more sophisticated materials are required.

For more information on cable length or low-loss cable, contact your dealer or Hemisphere GPS Technical Support. Table 3-1 provides a summary of readily available cable materials with 50  $\Omega$  impedance.

Table 3-1: Cable losses (not including connector losses)

Material	Loss at GPS L1 (1.575 GHz)
RG58	0.78 dB/m
RG8	0.36 dB/m
Times Microwave LMR400	0.15 dB/m


For additional cable guidelines see “Routing and Connecting the Cables” on page 21.

## Mounting the Receiver

Hemisphere GPS recommends mounting the antennas first and then the mounting the receiver. Use the enclosed kit to mount the receiver. When mounting the VS131 receiver, adhere to the following guidelines:

- Install the receiver inside and away from the elements and in a location that minimizes vibration, shock, extreme temperatures, and moisture
- Position the receiver horizontally with its display facing the primary antenna
- Ensure the front panel (menu screen, LEDs, buttons) is visible and accessible
- Ensure the back panel (ports, connectors) is easily accessible to connect/switch out cables

Figure 3-4 shows the dimensions (including attached mounting brackets) of the VS131. Use Figure 3-4 when using the receiver mounting procedure that follows.

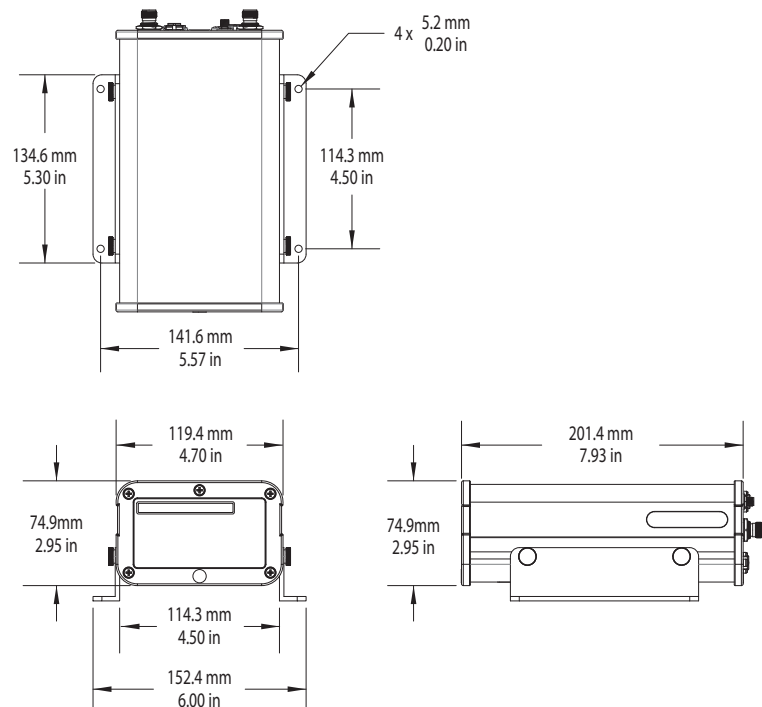

**Figure 3-4: VS131 dimensions with mounting brackets**

To mount the receiver:

1. Locate the thumbscrews, nuts, and brackets included in your kit.
2. Slide the nuts through the opening (circled at right) along both sides of the receiver.



## Appendix C: Menu Map

Vector Menu  
GPS Menu  
Differential Menu  
Config Wizard Menu  
System Setup Menu




3. Place the bracket alongside the receiver and insert the thumbscrews (two thumbscrews per bracket) so they screw into the nuts.



4. Using the remaining holes in the brackets (two holes per bracket) screw down the brackets in the desired location.

*Note: Hemisphere GPS does not provide the screws in this step.*

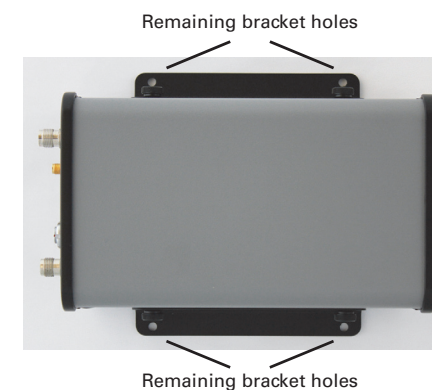

## Routing and Connecting the Cables

Adhere to the following when routing and connecting cables:

- Power cable must reach an appropriate power source
- Antenna cables must reach from the antennas to the receiver
- Data cable may connect to a data storage device, computer, or other device that accepts GNSS data
- Do not run cable in areas of excessive heat
- Do not expose cable to corrosive chemicals
- Do not crimp or excessively bend cable
- Do not place tension on cable
- Coil up excess cable near unit
- Secure along the cable route using plastic tie wraps as necessary
- Do not run cable near high voltage or strong RF noise and transmitter sources
- When connecting the power cable to the power source, ensure the power source is between 8 V and 36 V


---

**⚠ WARNING:** Improperly installed cables near machinery can be dangerous.

---

## Connecting the Receiver to External Devices

You can connect the VS131 to external devices via Port A and Port B on the back of the receiver.

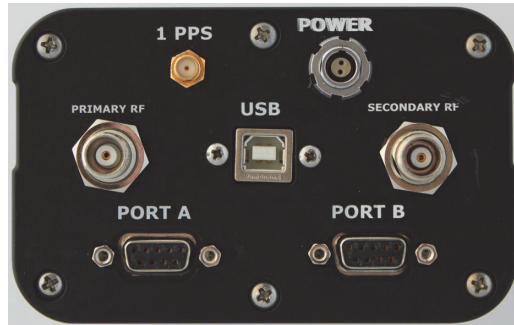

**Figure 3-5: VS131 port connections**

Figure 3-6 shows the pinouts and Table 3-2 provides pinout descriptions for Port A and Port B. Both ports communicate at the RS-232 interface level with external data loggers, navigation systems, and other devices.

The default baud rates, NMEA message types, and update rates for both ports are listed in “Default Parameters” on the following page. If the NMEA data messages you desire are different from the default values, you will need to select those also. Use the Config Wizard to select your NMEA message types and update rates per port (see “Using the Config Wizard” on page 31).

**Table 3-2: Port A / Port B pinout descriptions**

Pin	Port A	Port B
1	Not connected	Not connected
2	Transmit data Port A (NMEA 0183, binary, and RTCM input)	Transmit data Port B (NMEA 0183, binary, and RTCM input)
3	Receive data Port A (NMEA 0183, binary, and RTCM output)	Receive data Port B (NMEA 0183, binary, and RTCM output)
4	Not connected	Not connected
5	Signal ground (signal return)	Signal ground (signal return)
6	Event marker input	Not connected
7	Not connected	Not connected
8	Not connected	Not connected
9	1 PPS timing output	5V output, 350 mA max



**Figure 3-6: Port A and Port B pinouts**

- The external correction source should be using an 8 data bit, no parity, 1 stop bit (8-N-1) serial port configuration.
- Inspect the cable connection to ensure there are no signs of damage.
- Check the pinout information for the cables to ensure the transmit line of the external correction source is connected to the receive line of the VS131's serial port and that the signal grounds are connected.

Save the configuration as the profile named “RTCM” in the Config Wizard, cycle the power and load the RTCM profile.

### Q: Why am I not getting data from the VS131?

A: There are several possible reasons for this. Check the following items.

- Check receiver power status LED to ensure the receiver is powered.
- Verify the VS131 is locked to a valid DGPS signal (this can often be done on the receiving device or with VectorPC).
- Verify the VS131 is locked to GPS satellites (this can often be done on the receiving device or with VectorPC).
- Check the integrity and connectivity of power and data cable connections.

### Q: Why am I getting random data from VS131?

A: There are three possible reasons for this. Check the following items.

- Verify the RTCM or the Bin95 and Bin96 messages are not being output accidentally (send a \$JSHOW command).
- Verify the baud rate settings of VS131 and remote device match correctly.
- Potentially, the volume of data requested to be output by the VS131 could be higher than the current baud rate supports. Try increasing the baud rate to 38400 for all devices or reduce the amount of data being output.

### Q: I could not install my antennas at the same height. How do I calibrate for the height offset?

A: You may enter a non-level bias calculation that adjusts the pitch/roll output to calibrate the measurement if the antenna array is not installed on a horizontal plane.

To calibrate the pitch/roll reading, send the following command:

```
$JATT,PBIAS,x<CR><LF>
```

where x is a bias (in degrees) that will be added to the pitch/roll measurement. The acceptable pitch bias range is -15.0° to 15.0° (default is 0.0°).

To determine the current pitch compensation angle, send the following command:

```
$JATT,PBIAS<CR><LF>
```

The pitch/roll bias is added after the negation of the pitch/roll measurement (if so invoked with the \$JATT,NEGILT command).

This appendix covers power, communication and external RTCM questions. For GPS and Heading troubleshooting, see Chapter 4, “Operating the VS131.”

**Q: Can COAST technology work with corrections from an external source?**

A: Yes, the VS131 will operate in a similar fashion with COAST technology as when using SBAS or Beacon corrections. However, SBAS corrections have the advantage that they are separated into separate error components, allowing the VS131 to anticipate how errors will change over the coasting period with more consistent accuracy and for a longer period than regular RTCM range corrections.

**Q: My VS131 does not appear to be communicating. What do I do?**

A: This could be one of the following issues:

- Examine the power cable and its connector for signs of damage.
- Ensure you are properly powering the system with the correct voltage (8 to 36 VDC) by measuring the voltage at the receiver end of the power cable when the cable is connected to the power source.
- Check current restrictions imposed by power source (minimum available should be > 1.0 A).
- Verify the display has turned on and that time is incrementing in the upper right corner of the display, and configure the COM port baud rates appropriately through the menu system.
- Verify polarity of power leads.
- Check the 1.0 A inline power cable fuse.
- Since you are required to terminate the power input with your choice of connector, ensure you have made a good connection to the power supply.
- Consult the troubleshooting section of the other device's reference manual to determine if there is an issue with that device.

**Q: Am I able to configure the two serial ports with different baud rates?**

A: Yes, the ports are independent. For example, you may have one port set to 4800 and the other to 19200 or vice versa.

**Q: Am I able to have the VS131 output different NMEA messages through the two ports?**

A: Yes, you may have different NMEA messages turned on for the two serial ports. Further, these NMEA messages may also be at different update rates.

**Q: How do I determine the current configuration of the VS131?**

A: You can view the current configuration from various screens of the menu, which show all configurable items of the receiver. Alternately, you can select **Config Wizard** > **Use Previous** to return the receiver to a previously saved (known) configuration.

**Q: My VS131 does not appear to be using corrections from an external correction source. What could be the problem?**

A: This could be due to a number of issues. Check the following items.

- Make sure the corrections are of an RTCM SC-104 protocol.
- Verify the baud rates of the port used by the VS131 match that of the external correction source.

## Default Parameters

The following represents the standard configuration for the VS131. For more information on these commands refer to the Hemisphere GPS Technical Reference (go to [www.hemispheregps.com](http://www.hemispheregps.com) and click the GPS Reference icon).

*Note: Use the \$JSAVE command to save changes you make to the VS131 configuration for the changes to be present in subsequent power cycles. Also, if you change any default values and then issue a \$JRESET command verify your settings to make sure you consistently get a correct heading. To reset the VS131 to its default parameters you can re-install the configuration file (shown below)—contact your dealer or Hemisphere GPS Technical Support for information on obtaining and re-installing the configuration file.*

```
$JOFF, PORTA
$JOFF, PORTB
$JOFF, PORTD
$JAGE, 2700
$JLIMIT, 10
$JMASK, 5
$JNP, 5
$JWAASPRN, AUTO
$JDIFF, LBAND
$JPOS, 51.0, -114.0
$JSMOOTH, LONG
$JTAU, COG, 0.00
$JTAU, SPEED, 0.00
$JAIR, AUTO
$JALT, NEVER
$JATT, ACC180, YES
$JRELAY, PORTC, $MENUOPTIONS, ACC180, ON, TRUE
$JATT, HTAU, 2.0
$JATT, HRTAU, 2.0
$JATT, COGTAU, 0.0
$JATT, MSEP, 1.0
$JATT, GYROAID, YES
$JATT, TILTAID, YES
$JATT, LEVEL, NO
$JATT, EXACT, NO
$JATT, HIGHMP, NO
$JATT, FLIPBRD, NO
$JATT, HBIAS, 0.0
$JATT, NEGTLT, NO
$JATT, NMEAHE, 1
$JATT, PBIAS, 0.0
$JATT, PTAU, 0.5
$JATT, ROLL, NO
$JATT, SPDTAU, 0.0
$JASC, GPGBA, 1.0, PORTA
$JASC, GPVTG, 1.0, PORTA
$JASC, GPGSV, 1.0, PORTA
$JASC, GPZDA, 1.0, PORTA
$JASC, HEHDT, 1.0, PORTA
$JASC, HEROT, 1.0, PORTA
$JASC, GPGBA, 1.0, PORTB
$JASC, GPVTG, 1.0, PORTB
$JASC, GPGSV, 1.0, PORTB
$JASC, GPZDA, 1.0, PORTB
$JASC, HEHDT, 1.0, PORTB
$JASC, HEROT, 1.0, PORTB
$JBAUD, 19200, PORTA
$JBAUD, 19200, PORTB
$JSAVE
```



## **Appendix B: FAQ**



## **Chapter 4: Operating the VS131**

Powering the Receiver On/Off

LED Indicators

Startup

Using the Menus

Configuring the VS131

Disabling the Aiding Features

Adjusting the Time Constants

Connecting to Existing Navigation Systems

Viewing GPS/DGPS Status

## Powering the Receiver On/Off

The power button on the VS131 is located on the front panel (circled below). When you first apply power to the unit it turns on.



**Figure 4-1: VS131 front panel with power button**

The VS131 accepts an input voltage of 8 to 36 VDC via the power cable. The supplied power should be continuous and clean for best performance. Table D-5 on page 55 provides the power specifications of the VS131.

**⚠ WARNING:** Do not apply a voltage higher than 36 VDC. This will damage the receiver and void the warranty. Also, do not attempt to operate the VS131 with the fuse bypassed as this will void the warranty.

The VS131 features reverse polarity protection to prevent damage if the power leads are accidentally reversed. Although the VS131 proceeds through an internal startup sequence when you apply power, it will be ready to communicate immediately.

Initial startup may take 5 to 15 minutes depending on the location. Subsequent startups will output a valid position within 1 to 5 minutes depending on the location and time since the last startup.

The VS131 may take up to 5 minutes to receive a full ionospheric map from SBAS. Optimum accuracy is obtained once the VS131 is processing corrected positions using complete ionospheric information.

To power on the VS131:

1. Connect the ends of the VS131 power cable to a clean power source providing 8 to 36 VDC.

*Note: Hemisphere GPS recommends you use a weather-tight connection and connector if the connection is located outside.*

2. Press and hold the soft power switch on the front panel until the splash screen appears.

To power off the VS131:

- Press and hold the soft power switch on the front panel until the screen goes blank.

**Table A-1: Troubleshooting (continued)**

Symptom	Possible Solution
No heading or incorrect heading value	<ul style="list-style-type: none"> <li>• Check CSEP value is fairly constant without varying more than 1 cm (0.39 in)—larger variations may indicate a high multipath environment and require moving the receiver location</li> <li>• The standard antenna mounting configuration provides a 0.5° heading accuracy at 95% confidence. If you require more performance, you will need to increase the antenna separation (maximum recommended separation is 5.0 m). See Table D-1 on page 54 for antenna separation specifications.</li> <li>• Recalibrate the tilt sensor with \$JATT,TILTCAL command if heading is calculated then lost at consistent time intervals</li> <li>• Heading is from primary GPS antenna to secondary GPS antenna</li> <li>• \$JATT,SEARCH command forces the VS131 to acquire a new heading solution (unless gyro is enabled)</li> <li>• Enable GYROAID to provide heading for up to three minutes during GPS signal loss</li> <li>• Enable TILTAID to reduce heading search times</li> <li>• Monitor the number of satellites and SNR values for both antennas within VectorPC—at least four satellites should have strong SNR values</li> <li>• Potentially, the volume of data requested to be output by the VS131 could be higher than the current baud rate supports (try using 19200 as the baud rate for all devices or reduce the amount of data being output)</li> </ul>
No DGPS position in external RTCM mode	<ul style="list-style-type: none"> <li>• Verify the baud rate of the RTCM input port matches the baud rate of the external source</li> <li>• Verify the pinout between the RTCM source and the RTCM input port (transmit from the source must go to receive of the RTCM input port and grounds must be connected)</li> <li>• Ensure corrections are being transmitted to the correct port—using the \$JDIFF,PORTB command on Port A will cause the receiver to expect the corrections to be input through Port B</li> </ul>



Table A-1 provides troubleshooting for common problems.

**Table A-1: Troubleshooting**

Symptom	Possible Solution
Receiver fails to power	<ul style="list-style-type: none"> <li>Verify polarity of power leads</li> <li>Check integrity of power cable connectors</li> <li>Check power input voltage (8 to 36 VDC)</li> <li>Check current restrictions imposed by power source (minimum available should be &gt; 1.0 A)</li> </ul>
No data from VS131	<ul style="list-style-type: none"> <li>Check receiver power status to ensure the receiver is powered (an ammeter can be used for this)</li> <li>Verify desired messages are activated (using VectorPC or \$JSHOW in any terminal program)</li> <li>Ensure the baud rate of the VS131 matches that of the receiving device</li> <li>Check integrity and connectivity of power and data cable connections</li> </ul>
Random data from VS131	<ul style="list-style-type: none"> <li>Verify the RTCM or binary messages are not being output accidentally (send a \$JSHOW command)</li> <li>Ensure the baud rate of the VS131 matches that of the remote device</li> <li>Potentially, the volume of data requested to be output by the VS131 could be higher than the current baud rate supports (try using 19200 as the baud rate for all devices or reduce the amount of data being output)</li> </ul>
No GPS lock	<ul style="list-style-type: none"> <li>Verify the VS131 has a clear view of the sky</li> <li>Verify the lock status of GPS satellites (this can be done with VectorPC)</li> </ul>
No beacon lock	<ul style="list-style-type: none"> <li>Verify the receiver is tuned to the correct frequency and bit rate</li> <li>Ensure beacon signal coverage is expected in your area</li> <li>Ensure environmental noise is not masking the signal, reducing the SNR reading</li> </ul>
No SBAS lock	<ul style="list-style-type: none"> <li>Verify the VS131 has a clear view of the sky</li> <li>Verify the lock status of SBAS satellites (this can be done with VectorPC - monitor BER value)</li> <li>Set SBAS mode to automatic with the \$JWAASPRN,AUTO command</li> </ul> <p>SBAS lock is only possible if you are in an appropriate SBAS region; currently, there is limited SBAS availability in the southern hemisphere.</p>

## LED Indicators

The VS131 includes five LEDs located to the left of the display on the front panel (shown at right).

Table 4-1 below describes each LED indicator.



**Figure 4-2: VS131 LEDs**

**Table 4-1: LED indicators**

Indicator	Description/Function
HEADING	<p>Valid GNSS heading available</p> <p>Illuminates solid green when the receiver achieves a valid heading solution from the GNSS receiver. You must see PRIM GPS and SEC GPS illuminated before a heading solution is possible.</p> <p>If the GNSS solution is no longer available, the LED turns off.</p>
DIFF	<p>DGPS position indicator</p> <p>Illuminates solid green when the receiver achieves a differential position and a pseudorange residual of better than 10.0 m.</p> <p>If the residual value is worse than the current threshold, the LED blinks green indicating differential mode has been attained but the residual has not met the threshold.</p>
SEC GPS	<p>Secondary antenna is tracking 4 or more satellites</p> <p>Illuminates solid amber when the secondary antenna is tracking four or more satellites.</p>
PRIM GPS	<p>Primary antenna is tracking 4 or more satellites</p> <p>Illuminates solid amber when the primary antenna is tracking four or more satellites.</p>
POWER	<p>Power indicator</p> <p>Illuminates solid red when the receiver is powered on.</p>

Startup

When you power on the VS131 the Hemisphere GPS splash screen appears followed by the main screen, or Top menu (see at top right). Press the Down Arrow button to display the remaining items on the Top menu (see at bottom right).

You use the menus to view and configure system data and settings for the following Top menu items:

- Vector
- GPS
- Differential
- Config Wizard
- System Setup

For a complete menu path of each Top menu item, see Appendix C, “Menu Map.”



Appendix A: Troubleshooting

## Using the Menus

The VS131 menu system is designed for easy setup and configuration of the unit in or out of the field and supports multiple languages. You can perform most configuration tasks entirely through the menu without having to connect to a computer.

The VS131 front panel contains the three soft buttons shown at right. The Enter button also functions as the power switch (see “Powering the Receiver On/Off” on page 26 for more information).

Table 4-2 describes the indicators to the right of specific menu items.



Up Arrow button - moves to the previous menu item or to the previous selection within a menu item





Enter button - displays a submenu or selects an option within a menu item



Down Arrow button - moves to the next menu item or to the next selection within a menu item

**Table 4-2: Menu item indicators**

Indicator	Purpose	Example
 Display indicator	<p>Goes to the indicated submenu.</p> <p>This indicator also appears to the right of the “Back” and “Top Menu” menu items.</p> <ul style="list-style-type: none"> <li>Press Enter when “Back” is selected to return to the previous menu.</li> <li>Press Enter when “Top Menu” is selected to return to the Top menu.</li> </ul>	<ol style="list-style-type: none"> <li>On the Top menu press the <b>Down Arrow</b> button to highlight System Setup. The Display indicator appears to the right of System Setup.</li> <li>Press <b>Enter</b> to display the System Setup menu.</li> <li>Press the <b>Down Arrow</b> button again to highlight the Display Format option and then press <b>Enter</b>. The items on the Display Format menu appear and the Select indicator appears to the right of Disp Update (the first item on the Display Format menu).</li> </ol>
 Select indicator	<p>Scrolls within a menu to highlight an option to select.</p>	<ol style="list-style-type: none"> <li>Press <b>Enter</b> on the Disp Update item. The Display indicator changes to the Select indicator.</li> <li>Press the <b>Up Arrow</b> or <b>Down Arrow</b> button to scroll through the available options (such as 1Hz and 5Hz).</li> <li>Press <b>Enter</b> on the highlighted option to select it. That option is now the setting for the menu item and the Select indicator changes back to the Display indicator.</li> </ol>

To return the menu system to the factory default configuration:

- Press and hold the **Enter** and **Up Arrow** buttons until the splash screen disappears (Enter and Power share the same soft switch).

## Configuring the VS131

The Config Wizard menu guides you through various configuration options, enabling you to save up to five different configurations that are useful when using the VS131 on different vessels or for different applications.

If you use a Windows PC or Windows mobile device, you can use Hemisphere GPS' VectorPC software to configure the VS131. See "Using VectorPC to Communicate with the VS131" on page 4 for more information.

### Config Wizard Menu

This section describes the basic Config Wizard options you need to set to get up and running. Figure 4-3 outlines the menu structure of the Config Wizard menu.

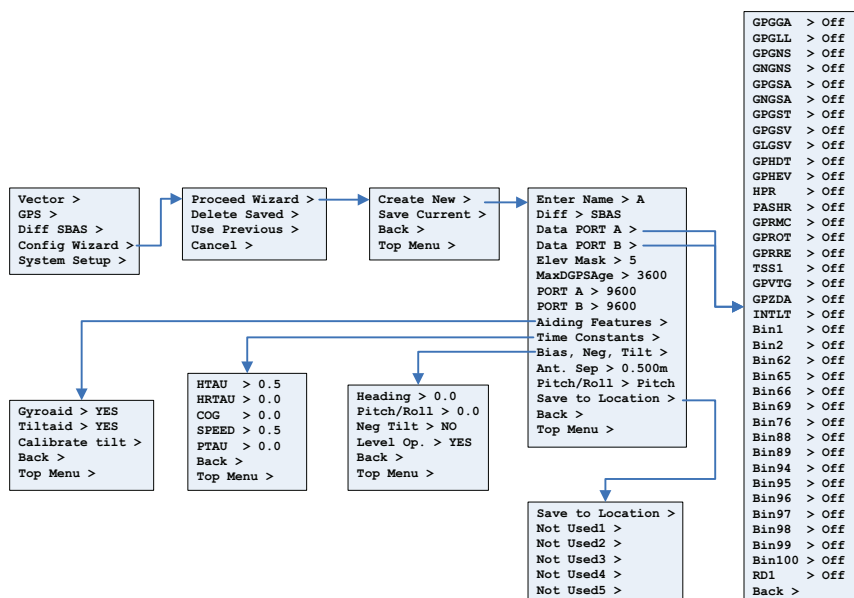


Figure 4-3: Config Wizard menu

## Connecting to Existing Navigation Systems

Most users connect the VS131 to their existing navigation system during installation. These users will receive the VS131's position and heading updates through the interface of their existing system.

## Viewing GPS/DGPS Status

Most users will receive position and heading information through their on-board navigation system. If you have not connected the VS131 to an existing navigation system, or are troubleshooting your unit, you may need to view GPS, DGPS, or Beacon status on the VS131's display screen.


### Do I Have a Signal?

Figure 4-2 on page 27 shows which LEDs on the VS131 will indicate GPS, DGPS or Beacon signal lock when illuminated. If you lose the differential signal lock, Hemisphere GPS COAST technology allows the VS131 to perform well for 40 minutes or more with aging differential GPS correction data. The amount of time you can "coast" depends on the degree of tolerable drift.

*Note: To obtain a full set of SBAS corrections, the VS131 must receive the ionospheric map over a period of a few minutes. After this, the receiver can "coast" until the next set of corrections has been received.*

### How Good is the Quality of My Signal?

In addition to the LED indicators for signal lock, the VS131's display indicates signal quality. The bars along the top of the display represent the quality of the GPS and DGPS (or if applicable, beacon) signal. The first group of bars shows the GPS signal; the second group shows the DGPS or beacon signal. Each bar represents a distinct channel and its associated signal quality. The higher the bar, the better the signal.

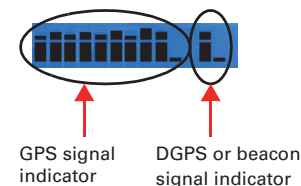

*Note: If using autonomous or external correction mode, the DGPS signal indicator will not appear in the display.*

### DGPS (SBAS)

The differential correction (or SBAS) signal indicator reflects the quality of each satellite signal, or the bit error rate (BER). A full bar height reflects a signal lock and a BER of 0. A bar height only 2 pixels tall reflects a signal loss, or BER, of 500 or greater. Bar heights in between reflect intermediate degrees of signal quality. For example, when using WAAS two satellites are available, so two BERs are provided.

### Beacon

The beacon indicator reflects the quality of the beacon signal, or the signal strength (SS) and the signal-to-noise ratio (SNR). A full bar height reflects a signal lock, SS>=35, and SNR>=24. A bar height only 2 pixels tall reflects a signal loss, or SS and SNR values of 0. Bar heights in between reflect intermediate degrees of signal quality. If using beacon, the first bar indicates SS signal quality; the second bar indicates SNR signal quality.

## Adjusting the Time Constants

The VS131's default settings are fine for most users; however, you can set the time constants to further smooth heading, course-over-ground (COG), and speed measurements. Table 4-3 provides an overview of the time constant values you can set in the Config Wizard, including the formulas for finding the optimal value of each time constant for your vessel.

**Table 4-3: Time constants**

Time Constant	Description
COGTAU (Course Over Ground)	Adjust the responsiveness to the course over ground measurement. If vessel is small and dynamic, leave this value at 0.0 s to be conservative. If the vessel is large and resistant to motion, you may want to increase this value.  Default value: 0.0 s Range: 0.0 to 60 s  Formula: $\text{cogtau (s)} = 10 / \text{max rate of change of course (}^{\circ}\text{/sec)}$
HRTAU (Rate of Turn)	Adjust the responsiveness to the rate of heading change. If vessel is large and unable to turn quickly, you may want to increase this value.  Default value: 2.0 s with gyro enabled Range: 0.0 to 60 s  Formula: $\text{hrtau (s)} = 10 / \text{max rate of the rate of turn (}^{\circ}\text{/s}^2\text{)}$
HTAU (Heading)	Adjust the responsiveness to true heading. If vessel is large and unable to turn quickly, you may want to increase this value.  For longer baselines (5 m) HTAU should be between 0.5 and 1.0, since the gyro introduces noise.  Default value: 2.0 s with gyro enabled Range: 0.0 to 60 s  Formula: $\text{htau (s)} = 40 / \text{max rate of turn (}^{\circ}\text{/s) with gyro ON}$  $\text{htau (s)} = 10 / \text{max rate of turn (}^{\circ}\text{/s) with gyro OFF}$
PTAU (Pitch)	Adjust the responsiveness to pitch. If vessel is large and unable to pitch quickly, may want to increase this value.  Default value: 0.5 s Range: 0.0 to 60 s  Formula: $\text{ptau (s)} = 10 / \text{max rate of pitch (}^{\circ}\text{/s)}$
SPDTAU (Speed)	Adjust the responsiveness to speed. If vessel is small and dynamic, leave this value at 0.0 s to be conservative. If the vessel is large and resistant to motion, you may want to increase this value.  Default value: 0.0 s Range: 0.0 to 60 s  Formula: $\text{spdttau (s)} = 10 / \text{max acceleration (m/s}^2\text{)}$

## Using the Config Wizard

The basic setup instructions outlined in this section assume the antennas are:

- Installed parallel to, and along the centerline of, the vessel's axis
- Separated by 1.0 m

If this is not the case, you will need to enter the actual antenna separation and bias in the Config Wizard.

1. Select **Config Wizard > Proceed Wizard**. The Proceed Wizard menu appears.
2. Select **Create New** to create a new configuration. You are prompted to enter a name for your configuration. In addition to the Name you can set the options shown at right (also shown in Figure 4-3 on the previous page).

*Note: For help on using the menus to view and set values see "Using the Menus" on page 29.*

3. Enter a name:
  - a. Use the arrow buttons to select a character and then press the **Enter** button to save the character. The cursor moves to the right.
  - b. Repeat step a for each additional character in the name.
  - c. Scroll through the list of characters until you reach "␣" and press the **Enter** button to accept the name. You are returned to the previous menu and the name you entered appears next to "Enter Name."

```
Enter Name > A
Diff > SBAS
Data PORT A >
Data PORT B >
Elev Mask > 5
MaxDGPSAge > 3600
PORT A > 9600
PORT B > 9600
Aiding Features >
Time Constants >
Bias, Neg, Tilt >
Ant. Sep > 1.000m
Pitch/Roll > Pitch
Save to Location >
Back >
Top Menu >
```

If you are editing an existing name, for characters you want to replace simply select a different character. If the new name is shorter and you need to delete unneeded characters to the right:

- a. After you change the final character in the new name press the **Enter** button repeatedly until the last character is highlighted.
  - b. Scroll through the list of characters until you reach "␣" and press the **Enter** button to delete the character. The cursor moves to the left.
  - c. Repeat step b for each additional rightmost character you want to delete.
  - d. Scroll through the list of characters until you reach "␣" and press the **Enter** button to accept the name. You are returned to the previous menu and the name you entered appears next to "Enter Name."
4. Set a DGPS source: From the same menu, select **DIFF**. The options are:
    - SBAS (default)
    - Beacon
    - Autonomous
    - L-Band
    - Extern RTCM (External RTCM)
  5. Change the type of GPS data message sent to the data ports: Select either **Data Port A** or **Data Port B** from the menu list.

6. *Set the elevation cutoff angle:* Select **Elev Mask** and set the angle between 0° and 45°. The default value is 5°.
7. *Set the maximum DGPS age:* The maximum DGPS age is 2700 seconds (45 minutes) by default.
8. *Configure baud rates:* If the default baud rate on the selected port does not match that of the external device you are connecting to, you will need to configure the Baud Rate, using the Port A or Port B entries.  
4800, 9600, 19200, 38400, 57600, and 115200 are the available baud rates.
9. *Enable/disable aiding features:* The Aiding Features menu enables you to turn the gyroaid and tiltaid features on or off. For more information on disabling the aiding features, see “Disabling Tilt Aiding” on page 33 or “Disabling Gyro Aiding” on page 33.
10. *Adjust time constants:* While the default time constants settings will work for most users, if you have a large, slow turning vessel or a small, quick moving vessel you may want to adjust the time constants to reduce heading start up and re acquisition times.  
For details on configuring the time constants, see “Adjusting the Time Constants” on page 34.
11. *Enter a heading bias:* If you did not install the antenna’s parallel to and along the vessel’s centerline, you will need to enter a heading bias in the Heading field of the Bias, Neg, Tilt menu. The heading bias (-180° to +180°) compensates for any offset from the centerline.

*Note: If you installed the antennas for roll (perpendicular to the boat’s axis), rather than pitch, you must enter the heading bias (+/-90°). You must also enter the bias for roll (see below).*

12. *Enter a pitch/roll bias:* Enter the bias for pitch or roll (-15° - +15°) to compensate for any offset from the boat’s centerline. Enter this bias in the Pitch/Roll field of the Bias, Neg, Tilt menu.
13. *Enter the antenna separation:* If you did not install the antennas 1.0 m apart, enter the actual antenna separation in the Ant. Sep field. The available range is 0 - 5.0 m.
14. *Configure antenna for roll:* Most users install the antennas for pitch; however, if you install the antennas for roll, you will need to configure the VS131 for roll. In the Create New menu set the Pitch/Roll setting to Roll.
15. *Save your configuration:* To save your new configuration, select the Save to Location field. You will be prompted for a location to save your configuration.

Select one of the empty slots, noted by the name Not Used or select a slot with an existing configuration to overwrite it.

After your configuration is saved, you must select it from the Config Wizard in order to activate it. You may then continue to enter different receiver configurations without upsetting the current operation of the receiver. Re-enter the Config Wizard and select the configuration to use.

## Disabling the Aiding Features

While the default settings will work for most users, you can configure the tilt and gyro aiding features to further reduce heading startup and re-acquisition times.

### Disabling Tilt Aiding

The VS131’s tiltaid (accelerometer) is enabled by default and constrains the RTK heading solution to reduce startup and re acquisition times. The tiltaid is precalibrated at the factory; however, if you experience any tilt measurement offset, you can recalibrate the tilt sensor via the Calibrate Tilt option in the Vector menu. See “Vector menu” on page 46 for a menu map on how to access this feature.

*Note: Make sure the receiver is perfectly level before recalibrating the tiltaid.*

The only times you may need to disable the tiltaid feature are:

- If you were unable to install the VS131 on a level plane with the antennas. The tilt sensor is located inside the VS131, so it is important that you install the VS131 on a level horizontal plane.

**⚠ WARNING:** If you were unable to install the VS131 in a horizontal plane with the antennas, you must disable tiltaid. Failure to do so may cause erratic equipment behavior.

- If troubleshooting, to ensure the receiver is working properly.

You can turn tilt aiding off either through the Config Wizard or Vector menus.

### Disabling Gyro Aiding

The VS131’s internal gyro-aid is enabled by default. The gyro:

- Shortens re-acquisition times when satellites are obstructed and heading is lost, by reducing the search volume required for the RTK solution, and
- Provides accurate substitute headings for a short period (depending on the roll and pitch of the vessel) ideally seeing you through to re-acquisition.

The only time you might need to disable the gyro-aid is during troubleshooting, to ensure the receiver is working properly.

**⚠ WARNING:** Do not exceed turn rates of 90°/sec. The VS131 uses gyro measurements to obtain a heading rate measurement and the gyro cannot measure beyond this rate.

You can turn the gyroaid feature off either through the Config Wizard menu or the Vector menu.