



875-0435-10

**S631 GNSS
Smart Antenna**

User Guide
Revision: A2
July 24, 2020

Table of Contents

Device Compliance, License and Patents.....	4
Terms and Definitions.....	7
Chapter 1: Introduction	10
Overview	10
Product Overview	11
Key Features.....	16
What’s Included in Your Kit.....	17
Chapter 2: Installation	18
Overview	18
Ports and Connections	19
Installing/Connecting the S631.....	20
Installing UHF Antennas.....	24
Installing the S631 on a Tribrach	25
Installing the S631 on a Range Pole.....	26
Connecting to a Power Source.....	27
Connecting to an External Device.....	28
Powering the S631 On/Off.....	29
Inserting and Removing the MicroSD Card/SIM Card	30
Chapter 3: Setup and Configuration	32
Overview	32
Control Panel Overview	33
Setting up the S631.....	34
Bluetooth Communication.....	35
Hemisphere WebUI.....	36
Firmware Update	60
How to Download Static Data.....	63
Appendix A: Troubleshooting	64
Overview	64
Troubleshooting.....	65
Appendix B: Technical Specifications.....	67

Overview	67
Technical Specifications	68
Appendix C: Radio Mode/QR Code.....	73
Overview	73
Radio Mode.....	74
QR Code	76
Index.....	77
End User License Agreement	78
Warranty Notice.....	82

Device Compliance, License and Patents

Compliance

Environmental

Temperature – operating -30°C to +60°C Temperature – storage -40°C to +80°C
Humidity MIL-STD-810F Method 5-7.4 Vibration MIL-STD- 810FG Method.
514.6E-1 Loose cargo MIL-STD- 810F FIG. 514.5C-5

Regulatory Compliance

CE Compliance

- IEC 60950-1:2005
- EN 301 113-1 / EN 301 113-2
- EN 301 489-1 v1.9.2
- EN301 489-3 v1.6.1
- EN301 489-7 v1.3.1
- EN 301489-17 v2.2.1
- EN301 489-24 v1.5.1
- EN55022:2010
- EN55024:2010
- EN 300440-1 v1.6.1 / EN 300440-2 v1.4.1
- EN 300 328 V1.9.1
- EN 301 511 v9.0.2
- EN 301 908-1 v6.2.1 / EN 301 908-2 v6.2.1

FCC Compliance

- FCC Part 15, Subpart B
- FCC Part 15, Subpart C:2015
- FCC Part 15, Subpart C:2014
- FCC Part 2
- FCC Part 22H
- FCC Part 24E

IC Compliance

- ICES-003:2012 Issue 5
- RSS-247 Issue 1
- RSS-GEN Issue 4
- RSS 132 Issue 3
- RSS 133 Issue 6

Continued on next page

Device Compliance, License and Patents, Continued

Compliance, continued

Certifications

- S631 (752-0042-10)
- Model: S631
- FCC ID: LTE – XMR201903EG25G
- BT/Wi-Fi – 2ABNA-2455A
- UHF – 2ABNA-TRM121
- IC: LTE – 10224A-201903EG25G
- BT/Wi-Fi – 11648A-2455A
- UHF – 11648A-TRM121
- S631 (752-0043-10)
- Model: S631
- FCC ID: LTE – XMR201903EG25G
- BT/Wi-Fi – 2ABNA-2455A
- UHF – MRBSATEL-TA37
- IC: LTE – 10224A-201903EG25G
- BT/Wi-Fi – 11648A-2455A
- UHF – 2422A-SATELTA37

⚠ WARNING: Your S631 is equipped with a 400 MHz radio and you may be required to obtain a valid radio license for your jurisdiction. Set the radio only to the frequency and power you are licensed to use at your location.

Device Compliance

This device complies with part 15 of the FCC Rules. Operation is subject to the following two conditions:

- This device may not cause harmful interference, and
- this device must accept any interference received, including interference that may cause undesired operation.

This product complies with the essential requirements and other relevant provisions of Directive 2014/53/EU. The declaration of conformity may be consulted at [HTTPS://HEMISPHEREGNSS.COM/ABOUT-US/QUALITY-COMMITMENT](https://hemispheregnss.com/about-us/quality-commitment).

Copyright Notice

Copyright Hemisphere GNSS, Inc. (2020). All rights reserved.

No part of this manual may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of Hemisphere GNSS.

Trademarks

Hemisphere GNSS®, the Hemisphere GNSS logo, TRACER™, Crescent®, Eclipse™, e-Dif®, L-Dif™, PocketMax4™, S320™, SBX-4™, Vector™, XF1™, and XF2™ are proprietary trademarks of Hemisphere GNSS, Inc. Other trademarks are the properties of their respective owners.

Continued on next page

Device Compliance, License and Patents, Continued

Patents

Hemisphere GNSS products may be covered by one or more of the following patents:

Patents			
6111549	6876920	7400956	8000381
6397147	7142956	7429952	8018376
6469663	7162348	7437230	8085196
6501346	7277792	7460942	8102325
6539303	7292185	7689354	8138970
6549091	7292186	7808428	8140223
6711501	7373231	7835832	8174437
6744404	7388539	7885745	8184050
6865465	7400294	7948769	8190337
8214111	8217833	8265826	8271194
8307535	8311696	8334804	RE41358

Australia Patents	
2002244539	2002325645
2004320401	

Notice to Customers

Contact your local dealer for technical assistance. To find the authorized dealer near you:

Hemisphere GNSS, Inc
 8515 East Anderson Drive
 Scottsdale, AZ 85255 USA
 Phone: (480) 348-6380
 Fax: (480) 270-5070
PRECISION@HGNS.COM
WWW.HGNS.COM

Technical Support

If you need to contact Hemisphere GNSS Technical Support:

Hemisphere GNSS, Inc.
 8515 East Anderson Drive
 Scottsdale, AZ 85255 USA
 Phone: (480) 348-6380
 Fax: (480) 270-5070
SUPPORT.HGNS.COM

Documentation Feedback

Hemisphere GNSS is committed to the quality and continuous improvement of our products and services. We urge you to provide Hemisphere GNSS with any feedback regarding this guide by opening a support case at the following website: HGNS.COM

Terms and Definitions

Introduction The following table lists the terms and definitions used in this document.

S631 terms & definitions

Term	Definition
Activation	Activation refers to a feature added through a one-time purchase. For features that require recurring fees, see Subscription .
aRTK	aRTK is a Hemisphere GNSS exclusive service that uses Atlas to extrapolate the last RTK correction during an RTK outage so the length of time an RTK position can be used after an RTK outage is extended.
Atlas	Atlas is a subscription based service provided by Hemisphere.
Base Station	The base station is a receiver placed over a familiar point and provides real-time observations and sends these to nearby RTK rovers via UHF radio or the internet.
BeiDou	BeiDou is a global navigation satellite system deployed and maintained by China.
Cold Start	Position moved more than 100km during power-off, or power-off longer than 3 days.
Datalink	Datalink is the device used to send RTK or DGNSS corrections from a base station to one of more rovers. Common datalinks are UHF radio or NTRIP.
DGNSS	Differential GNSS
Elevation Mask	Elevation Mask is the minimum angle between a satellite and the horizon for the receiver to use that satellite in the solution.
Firmware	Firmware is the software loaded into the receiver that controls the functionality of the receiver and runs the GNSS engine.

Continued on next page

Terms and Definitions, Continued

S631 terms & definitions, continued

Term	Definition
GALILEO	Galileo is a global navigation satellite system implemented by the European Union and European Space Agency.
GLONASS	Global Orbiting Navigation Satellite System (GLONASS) is a Global Navigation Satellite System (GLONASS) deployed and maintained by Russia. It is comparable to the United States' GPS system.
GNSS	Global Navigation Satellite System (GNSS) is a system that provides autonomous 3D position (latitude, longitude, and altitude) along with very accurate timing globally by using satellites. Current GNSS providers are: GPS, GLONASS and Galileo.
GPS	Global Positioning System (GPS) is a global navigation satellite system implemented by the United States.
Hot Start	RF signal loss when power is on.
LED	Light Emitting Diode
Mountpoint	Mountpoints are the specified data streams in NTRIP. Multiple base stations may send data to a NTRIP caster.
NavIC (IRNSS)	Navigation with Indian Constellation and Indian Regional Navigational Satellite System (IRNSS) is a global navigation satellite system deployed and maintained by India.
NMEA	National Marine Electronics Association (NMEA) is a marine electronics organization that sets standards for communication between marine electronics.
NTRIP	Networked Transport of RTCM via Internet Protocol (NTRIP) is a protocol for streaming GNSS data over the internet. NTRIP is most often used to stream RTK or DGNSS corrections over the internet.
NTRIP Server	The NTRIP server sends data from the NTRIP source (base station) to the NTRIP caster.
QZSS	Quasi-Zenith Satellite System (QZSS) is a satellite navigation system currently under development in Japan.
RMS	Root mean square

Continued on next page

Terms and Definitions, Continued

S631 terms & definitions, continued

Term	Definition
RTK	Real-Time-Kinematic (RTK) is a real-time differential GPS method that provides better accuracy than differential corrections.
SBAS	Satellite Based Augmentation System (SBAS) is a system that provides differential corrections over satellite throughout a wide area or region.
Subscription	A subscription is a feature that is enabled for a limited time. Once the end-date of the subscription has been reached, the feature will turn off until the subscription is renewed.
Warm Start	Power loss is less than the cold start time or distance.

Chapter 1: Introduction

Overview

Introduction

This User Guide provides information to help you quickly set up your S631 GNSS Smart Antenna. You can download this manual from the Hemisphere GNSS website at WWW.HGNSS.COM.

Contents

Topic	See Page
Product Overview	11
Key Features	16
What's Included in Your Kit	17

Product Overview

Product overview

The S631 is an all-new multi-frequency, multi-GNSS smart antenna. The S631 provides robust performance and high precision in a compact and rugged package. With multiple wireless communications ports and an open GNSS interface, the S631 can be used in a variety of operating modes.

Use the S631 as a precise base station for sending RTK to your existing rover network. Turn S631 into a lightweight and easy-to-use rover by connecting it to your base via UHF radio or cellular network. Use the built-in web user interface (WebUI) to control, manage, and upgrade the S631 with new firmware and activations. S631 is Athena[®]-enabled and Atlas[®]-capable.

Powered by the Phantom[™] 40 OEM board, the S631 supports 800+ channels and can simultaneously track all satellite signals including GPS, GLONASS, BeiDou, Galileo, QZSS and NavIC (IRNSS), making them robust and reliable.

S631 comes standard with two long-life lithium batteries providing up to 12 hours of operation. The batteries are hot-swappable, and may be changed while working, maximizing your efficiency and Return on Investment (ROI).

The S631 combines Hemisphere's Athena GNSS engine and Atlas L-band correction technologies with a new WebUI, offering an unparalleled level of customer-friendly performance.

The ruggedized antenna is designed for the most challenging environments and meets IP67-standard requirements.

Continued on next page

Product Overview, Continued

**Product
overview**
, continued

The S631 is the ideal positioning system to use in land or marine survey, GIS, mapping, and construction. Together with SureFix™, Hemisphere's advanced processor, the S631 delivers high-fidelity RTK quality information that results in guaranteed precision with virtually 100% reliability.



Figure 1-1: S631 GNSS Smart Antenna

Continued on next page

Product Overview, Continued

Athena RTK

The S631 receiver is powered by the Athena RTK technology. The S631 provides state-of-the-art RTK performance when receiving corrections from a static base station or network RTK correction system. With multiple connectivity options, the S631 allows for RTK corrections to be received over radio, cell modem, Wi-Fi, Bluetooth, or serial connection. S631 delivers centimeter-level accuracy with virtually instantaneously initialization times and cutting-edge robustness in challenging environments.

Athena RTK is Hemisphere's next-generation RTK engine designed to support all available constellations and takes advantage of available new signals. Athena was designed to seamlessly integrate into existing product portfolios and supports all major industry correction formats and standards.

Athena RTK can be added to the S631 as an activation.

Athena RTK has the following benefits:

- **Improved Initialization time** - Performing initializations in less than 15 seconds at better than 99.9% of the time.
- **Robustness in difficult operating environments** - Extremely high productivity under the most aggressive of geographic and landscape-oriented environments.
- **Performance on long baselines** - Industry-leading position stability for long baseline applications.

For more information about Athena RTK, see:

[HTTPS://WWW.HEMISPHEREGNSS.COM/TECHNOLOGY/#ATHENA](https://www.hemispheregnss.com/technology/#athena)

Continued on next page

Product Overview, Continued

Atlas L-band

The Atlas system delivers world-wide centimeter-level correction data over L-band communication satellites. S631 users can experience sub-decimeter positioning performance anywhere on earth, without the need to be near a GNSS or communication infrastructure.

With Atlas, the positioning accuracy does not degrade as a function of distance to a base station, as the data content is not composed of a single base station's information, but an entire network's information.

Atlas L-band is Hemisphere's industry leading correction service, which can be added to the S631 as a subscription. Atlas L-band has the following benefits:

- **Positioning accuracy** - Competitive positioning accuracies down to 4cm RMS in certain applications.
- **Positioning sustainability** - Cutting edge position quality maintenance in the absence of correction signals, using Hemisphere's patented technology.
- **Scalable service levels** - Capable of providing virtually any accuracy, precision, and repeatability level in the 4cm to 50cm range.
- **Convergence time** - Industry-leading convergence times of 10-40 minutes.
- **Global Ionospheric Model** - Real-time ionospheric activity and data is sent to the receiver and allows Atlas-capable devices to adjust accordingly, providing excellent convergence performance.

For more information about Atlas L-band, see: [HTTP://HGNS.COM/ATLAS](http://hgns.com/atlas)

⚠ WARNING: Your S631 is equipped with a UHF radio. If you choose to use the radio, you may need to obtain a license.

Continued on next page

Product Overview, Continued

aRTK Position Aiding

aRTK is an innovative feature available in Hemisphere's S631 Smart Antenna that greatly mitigates the impact of land-based communication instability.

Powered by Hemisphere's Atlas L-band system service, aRTK provides an additional layer of communication redundancy to RTK users, assuring that productivity is not impacted by intermittent data connectivity.

S631 receives the aRTK augmentation correction data over satellite, while also receiving the land-based RTK correction data. With this, the receiver internally operates with two sources of RTK correction, creating one additional layer of correction redundancy as compared to typical RTK systems.

Once this process is established (a few seconds), the receiver can operate in the absence of either correction source. The receiver can continue generating RTK positions if the land-based RTK correction source becomes unavailable for a period of time.

SureFix™ RTK Position

SureFix is an additional processor that runs in combination with the RTK engine and provides high fidelity quality indicators to users.

The SureFix processor takes several inputs, such as GNSS data, data preprocessing results, and generated RTK solutions. Using all the available information and functional and stochastic analysis methods, SureFix determines the quality of the current RTK engine solution.

Shown as SureFix quality indicators, these indicators are combined with the RTK solution before being provided to the user. At the end of the process, the user has access to high fidelity information about the quality of the RTK solution.

Key Features

Key features

The key features of the S631 Smart Antenna include:

- Multi-frequency GPS, GLONASS, BeiDou, Galileo, QZSS, IRNSS, and Atlas L-band
 - Long-range RTK baselines up to 50 km with fast acquisition times
 - UHF (400 MHz & 900 MHz), cellular, Bluetooth, and Wi-Fi wireless communication
 - Athena GNSS engine providing best-in-class RTK performance
 - Internal sensor corrects collected point coordinates to within 2 cm
-

What's Included in Your Kit

What's included in your kit As shown in Table 1-1 below, the S631 is available in a variety of kits, with supplementary products sold as “controller/option kits”, “accessory kits” or simply as separate accessories. Contents can change without prior notice. Check the official price list to confirm contents.

Important: Charge your Li-Ion battery upon receipt of shipment. According to the 2017 IATA Dangerous Goods Regulations and supplemental IATA Lithium Battery Guidance, batteries must be charged to less than 30% to meet international air freight requirements.

Table 1-1: S631 parts list

Main Kits	Part Number	Quantity
S631 Smart Antenna	752-0042-10 or 752-0043-10	1
S631 Serial Cable	051-0390-0	1
S321 Serial Cable (5-pin)	051-0392-0	1
S631 UHF 900MHz Antenna (TNC)	150-0058-10	1
S631 UHF 400MHz Antenna (TNC)	150-1026-0	1
Battery	427-0067-0	2
Battery Charger Adapter	427-0081-10	1
Battery Charger	427-0069-0	1
Cigarette Lighter Adapter	427-0064-0	1
Quick Release	699-0015-0	1
Tape Measure	699-0006-000	1
Carry Case	750-0248-10	1

Base Accessory Kit 940-5048-10	Part Number	Quantity
S631 Power Cable (Alligator Clips)	054-0171-0	1
S631 Power Cable	054-0180-0	1
External UHF Antenna Bracket Kit	710-0188-10	1

Chapter 2: Installation

Overview

Introduction Chapter 2 provides instruction on how to install your S631 Smart Antenna.

Contents

Topic	See Page
Ports and Connections	19
Installing/Connecting the S631	20
Installing UHF Antennas	24
Installing the S631 on a Tribrach	25
Installing the S631 on a Range Pole	26
Connecting to a Power Source	27
Connecting to an External Device	28
Powering the S631 On/Off	29
Inserting and Removing the MicroSD Card/SIM Card	30

Ports and Connections

Ports and connections

All ports and connections are located on the bottom of the unit, as shown in Figure 2-1. Table 2-1 provides additional information about each port/connection.



Figure 2-1: S631 ports and connectors

Table 2-1: S631 ports and connections

Port	What to connect
7-pin Diagnostic Port (LEMO)	Diagnostic cable for serial or USB
5-pin Power/Data Port (LEMO)	External Power, data, and radio devices
UHF Antenna Connector	External UHF antenna
Mounting hole	Pole or tripod mount

Installing/Connecting the S631

Installing batteries

The S631 comes standard with two long-life lithium batteries (see [What's Included in Your Kit](#)) providing up to 12 hours of operation. The batteries are hot-swappable and may be changed while your work.

To install the battery, slide each latch so that the lock is showing.



Figure 2-2: Battery latches

Continued on next page

Installing/Connecting the S631, Continued

Installing batteries, continued

Press the button on the side to open the battery compartment and remove the door as shown in Figure 2-3.



Figure 2-3: Battery compartment door removed

Continued on next page

Installing/Connecting the S631, Continued

Installing batteries, continued

Place the battery into the compartment. Take care to ensure the contacts on the battery are on the same side as the contacts on the receiver. The battery will fit down onto the notch. Slide the battery forward until it clicks and locks into place (Figure 2-4).



Figure 2-4: Installed battery

Continued on next page

Installing/Connecting the S631, Continued

Installing batteries, continued

To close the door cover, ensure the tab is unlocked. Slide the latch to cover the lock and lock the door (Figure 2-5).



Figure 2-5: Closed and locked battery compartment door

Installing UHF Antennas

Installing UHF antennas

To install the external UHF antenna of the S631, locate the UHF antenna (150-1026-0 for 400MHz or 150-0058-10 for 900MHz) from the kit list under [What's Included in Your Kit](#).

Insert the connector end of the UHF antenna and rotate clockwise to secure the antenna to the S631.

Installing the S631 on a Tribrach

Installing S631 on a tribrach

The S631 mounts flush to the tribrach by securing the 5/8-11" female metal mounting portion of the S631 to the standard 5/8-11" male portion of the tribrach. Hand-tighten (35-40 in-lbs. of torque) to secure the S631 onto the mount in a clockwise rotation.



Figure 2-6: Installing S631 on a tribrach

Installing the S631 on a Range Pole

Installing the S631 on a range pole

Use the standard 5/8-11" mount on the bottom of the S631 to secure the unit to a field standard 5/8-11" range pole.

The S631 should be placed carefully on the range pole to ensure cross-threading does not occur while rotating the unit in a clockwise direction. Hand-tighten (35-40 in-lbs. of torque) to secure the unit.



Figure 2-7: Range pole installation

Connecting to a Power Source

Connecting to a power source The S631 has two main power sources. The first power source is the internal removable battery described in the earlier portion of this chapter. The second power source is the external power cable (Part Number 054-0171-0).

The 5-pin (LEMO) connector allows 9 to 24V of power into the S631.



Figure 2-8: External power connector

Connecting to an External Device

Connecting to an external device

The 7-pin connector is available for diagnostics. You can also use this pin connector to download your data files.



Figure 2-9: 7-pin diagnostic connector

To download your data files, connect the 7-pin Lemo connector end of the cable to the S631. Plug the USB end into a computer. You can access the internal memory of the receiver via the filesystem.

The data files are kept in the “record” folder. Text files with a *.script* file extension that contain commands (see [S631 Series Command Interface Integrator Guide](#)) are placed into the “update” folder and sent upon startup of the receiver.

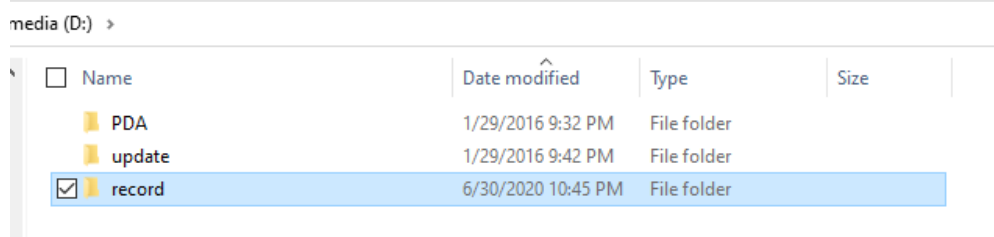


Figure 2-10: Record folder

Powering the S631 On/Off

Powering the S631 on/off

To power on the S631 receiver, press the **I** key for one second, and wait for the device to beep three times and power on.

To power off the S631 receiver, press the **I** key until the receiver beeps and the LED lights blink. Then press the power key again to power off.

Inserting and Removing the MicroSD Card/SIM Card

Inserting and removing the MicroSD card/SIM card

To remove the MicroSD card or SIM card:

- Open the battery compartment A.
- Remove the battery.
- Remove the cover for the SD or SIM card.
- Gently slide the tray backward until it clicks out of place.
- Gently lift the tray up and remove the card.

Note: When you insert either card make sure the contacts on the card are facing downward (toward the top of the unit).



Caution: Use electrostatic discharge (ESD) protection, such as wearing an ESD strap that is attached to an earth ground before inserting or removing the SIM card on the S631. If an ESD strap is not available, then touch a metal object prior to accessing the SIM card holder.

The MicroSD card and the SIM card are only accessible by first opening battery compartment **A**, where:

- The “SIM” card slot is positioned on the left side of the battery opening.
- The “TF” card slot is positioned on the right side of the battery opening.

Warning! Ensure the unit is powered off when inserting or removing the SIM card.

Continued on next page

Inserting and Removing the MicroSD Card/SIM Card, Continued

Inserting and removing the MicroSD card/SIM card, continued

Figure 2-11 shows the Micro/SIM card slot.



Figure 2-11: MicroSD/SIM card slot

Chapter 3: Setup and Configuration

Overview

Introduction Chapter 3 contains the information you need to set up and configure your S631 GNSS Smart Antenna.

Contents






Topic	See Page
Control Panel Overview	33
Setting up the S631	34
Bluetooth Communication	35
Hemisphere WebUI	36
Firmware Update	60
How to Download Static Data	63

Control Panel Overview

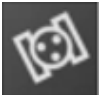Control Panel overview

Refer to the table below for information on the control panel LED indicators.

Table 3-1: LED Indicators

Icon	Colors	Description	
Satellite LED 	Red Green	Off	Not receiving satellites
		Flashing Red	Receiving satellites but no solution
		Flashing Green	Has a solution but is not fixed
		Green	Fixed
		Alternate Red and Green	GNSS receiver board abnormal
Data Link LED 	Green Blue	Green	Datalink setup complete
		Flashing Green	Data transmitting normally
		Flashing Blue	In static mode, flashes according to the sampling intervals
Bluetooth LED 	Blue	Off	No Bluetooth connection is established
		Blue	Bluetooth connection established
Power LED 	Red Green	Green	Power is between 30% and 100%
		Flashing Green	Power is between 10% and 30%
		Flashing Red	Power is below 10%
Power Button 	-	-	Used to turn on and off the receiver
		-	Short press to broadcast the current working mode and status

Setting up the S631

Setting up the S631

Figure 3-1 shows a typical setup for a base station (tripod is not included).

The antenna is connected to the bottom of the unit; you have the option of attaching the antenna to the antenna bracket to face the antenna upward.



Figure 3-1: Base setup

Installing the base

To install the base, complete the following steps:

- Put a tripod on a location with known or unknown coordinates, attach the receiver to the tribrach.
 - Attach the UHF radio antenna to the TNC connector (if using the internal UHF radio). We recommend using the 40cm pole extension to increase the height of the antenna.
 - Switch on the receiver and select the base working mode.
-

Installing the rover

To install the rover, complete the following steps:

- Attach the hand-held bracket on the pole, fix the hand-held to the bracket, put the rover on the pole and attach the UHF antenna to the TNC connector (if using the internal UHF radio).
 - Power on the receiver and select the rover working mode.
 - Open the hand-held and start the software, then you can configure the instruments.
-

Bluetooth Communication

Bluetooth communication

If you have a Bluetooth-enabled device, such as a data collector, you can wirelessly communicate with the S631.

When you attempt to connect the S631 to a Bluetooth-enabled device, such as a hand-held data collector, the following S631 Bluetooth information appears on the device:

XXXXXX

where "XXXXXX" is the serial number

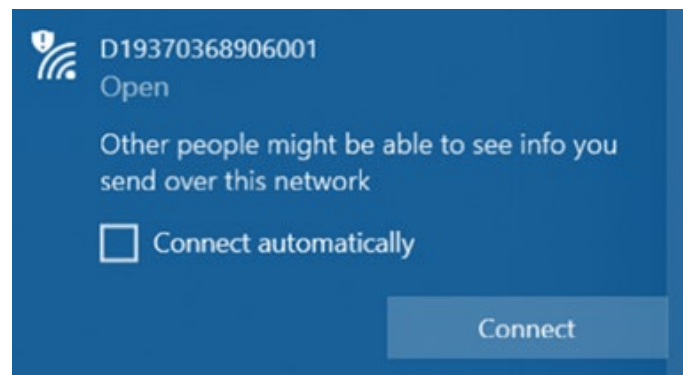
Hemisphere WebUI

Hemisphere WebUI

The WebUI can work on any PC, tablet, or phone that has Wi-Fi network capabilities.

Initial setup

Using the Windows Wi-Fi network, locate the Wireless Network Connection labeled the same as the serial number of the device.



If you want this network to automatically connect, select the **Connect automatically** check box before pushing the **Connect** button. If not, click the **Connect** button. We suggest setting this to a private connection.

Once connected to your device, type or copy the following IP address into your URL bar:

`http://192.168.10.1/`

The WebUI will prompt you for a username and password. The default username and password are:

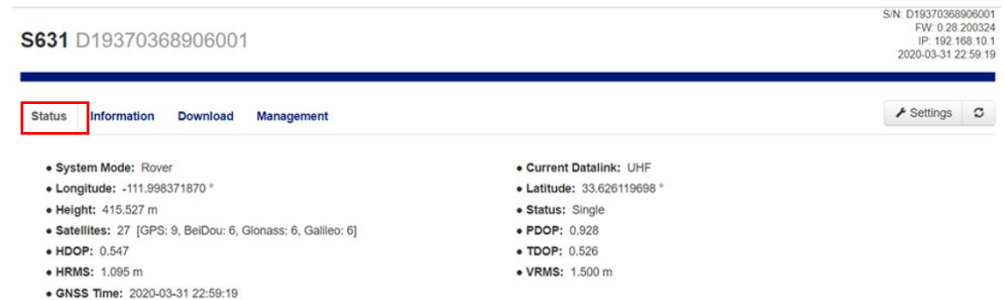
- Username: admin
- Password: s631

Continued on next page

Hemisphere WebUI, Continued

Status tab

The **Status** tab provides general GNSS information including **System Mode**, **Latitude**, **Longitude**, and **Height**.



S631 D19370368906001

S/N: D19370368906001
FW: 0.28.200324
IP: 192.168.10.1
2020-03-31 22:59:19

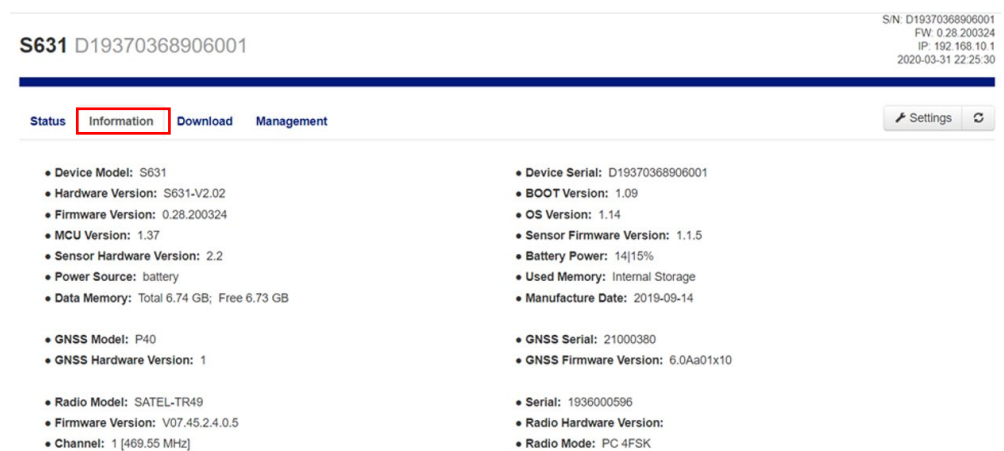
Status Information Download Management Settings

- System Mode: Rover
- Longitude: -111.998371870 °
- Height: 415.527 m
- Satellites: 27 [GPS: 9, BeiDou: 6, Glonass: 6, Galileo: 6]
- HDOP: 0.547
- HRMS: 1.095 m
- GNSS Time: 2020-03-31 22:59:19
- Current Datalink: UHF
- Latitude: 33.626119698 °
- Status: Single
- PDOP: 0.928
- TDOP: 0.526
- VRMS: 1.500 m

This feature allows you to update the menu application software. Once the correct software is selected under the **Choose File** browser, the **Upload File** button initiates the update procedure and re-starts the S631 device.

Information tab

The **Information** tab contains device and module information and current software and firmware versions.



S631 D19370368906001

S/N: D19370368906001
FW: 0.28.200324
IP: 192.168.10.1
2020-03-31 22:25:30

Status Information Download Management Settings


- Device Model: S631
- Hardware Version: S631-V2.02
- Firmware Version: 0.28.200324
- MCU Version: 1.37
- Sensor Hardware Version: 2.2
- Power Source: battery
- Data Memory: Total 6.74 GB; Free 6.73 GB
- GNSS Model: P40
- GNSS Hardware Version: 1
- Radio Model: SATEL-TR49
- Firmware Version: V07.45.2.4.0.5
- Channel: 1 [469.55 MHz]
- Device Serial: D19370368906001
- BOOT Version: 1.09
- OS Version: 1.14
- Sensor Firmware Version: 1.1.5
- Battery Power: 14|15%
- Used Memory: Internal Storage
- Manufacture Date: 2019-09-14
- GNSS Serial: 21000380
- GNSS Firmware Version: 6.0Aa01x10
- Serial: 1936000596
- Radio Hardware Version:
- Radio Mode: PC 4FSK

Continued on next page

Hemisphere WebUI, Continued

Download tab

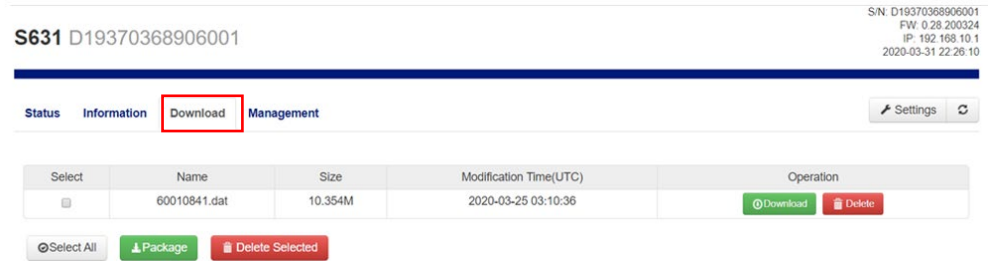The **Download** tab allows you to log and review multiple data files from the on-board memory of the device.



S631 D19370368906001


S/N: D19370368906001
FW: 0.28.200324
IP: 192.168.10.1
2020-03-31 22:26:10

Status Information **Download** Management Settings

Select	Name	Size	Modification Time(UTC)	Operation
<input type="checkbox"/>	60010841.dat	10.354M	2020-03-25 03:10:36	<input type="button" value="Download"/> <input type="button" value="Delete"/>

Management tab

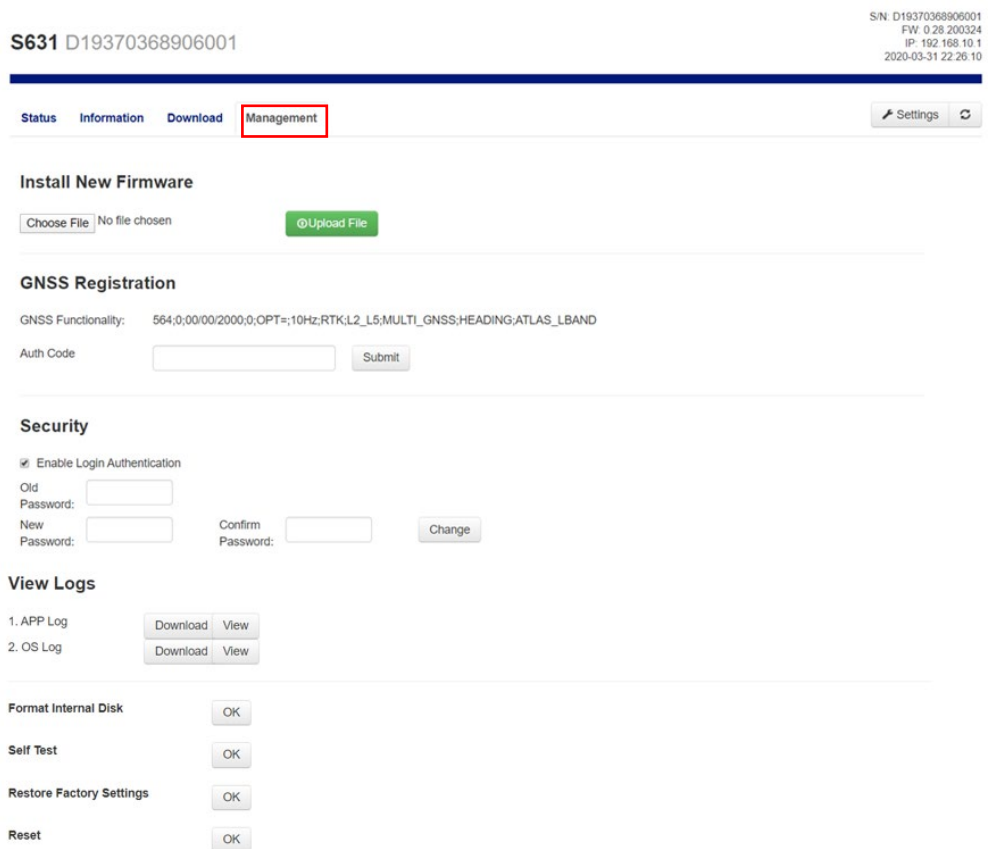The **Management** tab provides access to the firmware update tools, a terminal to register authorization codes, and password customization to properly secure your device.



S631 D19370368906001

S/N: D19370368906001
FW: 0.28.200324
IP: 192.168.10.1
2020-03-31 22:26:10

Status Information Download **Management** Settings

Install New Firmware

No file chosen

GNSS Registration

GNSS Functionality: 564;0;00/00/2000;0;OPT=;10Hz;RTK;L2_L5;MULTI_GNSS;HEADING:ATLAS_LBAND

Auth Code

Security

Enable Login Authentication

Old Password:

New Password: Confirm Password:

View Logs

1. APP Log

2. OS Log

Format Internal Disk

Self Test

Restore Factory Settings

Reset

Continued on next page

Hemisphere WebUI, Continued

**Management
tab, continued**

GNSS Registration

GNSS Registration displays the expiration date of various subscription features on the S631.

The Atlas expiration date will be displayed under this field. In addition, the ability to update the S631 with new subscriptions is available under the **AuthCode** field. Type the new Atlas code and the device will automatically update.

Security

The **Security** field allows the user to enable or disable login requirements. The user can reset or customize a new password for their device. By filling in the required fields you can change, create and/or confirm your password.

View Logs

The **View Logs** field allows you to track any activity at the application and Operating System (OS) level. (This is important when troubleshooting any issues.)

Formatting / Self-Test / Reset:

The **Format Internal Disk** button allows you to reformat the internal hard drive in the S631.

Self-Test provides an application review to ensure the device functioning properly.

Restore Factory Settings returns the S631 to all default settings and performs a full power cycle.

Reset initiates a complete device shut down, creating a hard reset to the device and stopping any application activity.

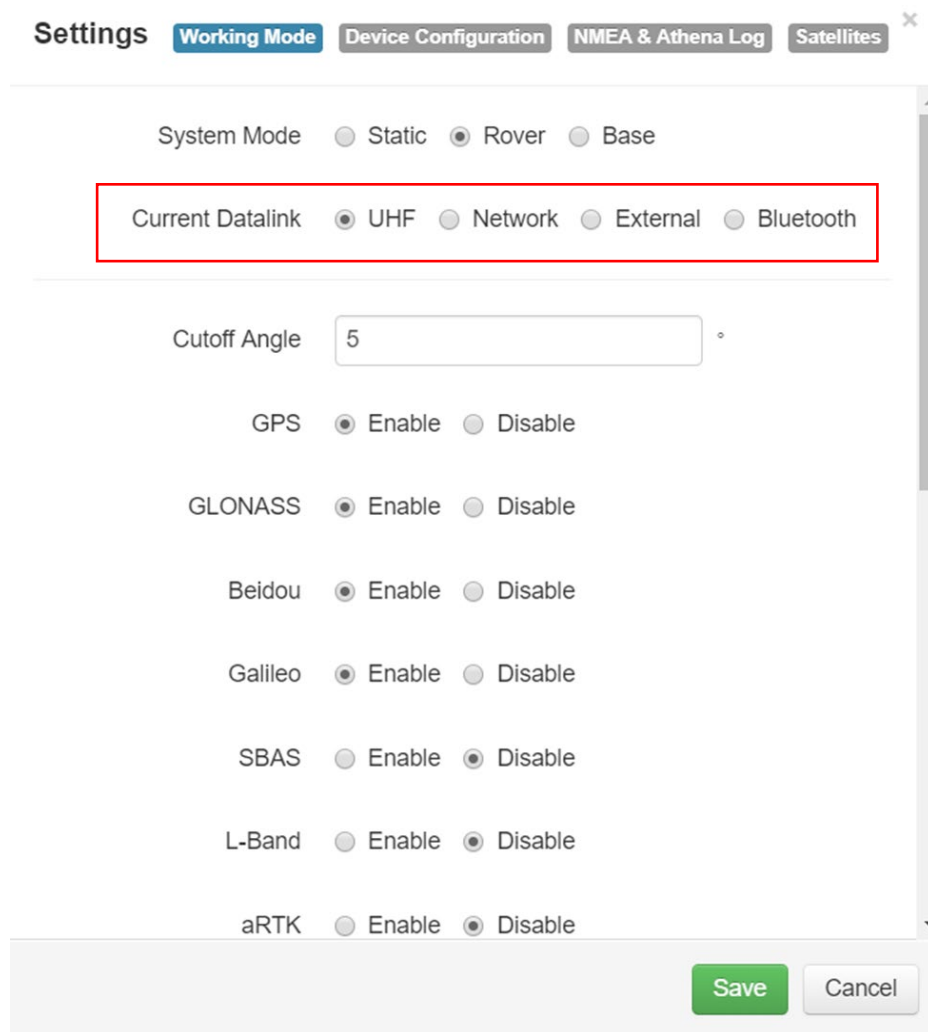
Continued on next page

Hemisphere WebUI, Continued

Working Mode **UHF**

When using a UHF datalink, channel tables must be configured by a certified Hemisphere GNSS dealer, or by uploading a channel table file provided by a dealer.

Important: The Advanced UHF Settings can only be accessed by Hemisphere GNSS or certified Hemisphere GNSS dealers.



The screenshot shows the 'Settings' page in the Hemisphere WebUI. The 'Working Mode' tab is selected, and the 'Current Datalink' is set to 'UHF'. The 'System Mode' is set to 'Rover'. The 'Cutoff Angle' is set to 5 degrees. The 'GPS', 'GLONASS', 'Beidou', and 'Galileo' options are all set to 'Enable'. The 'SBAS' and 'L-Band' options are set to 'Disable'. The 'aRTK' option is also set to 'Disable'. The 'Save' button is highlighted in green.

Settings Working Mode Device Configuration NMEA & Athena Log Satellites

System Mode Static Rover Base

Current Datalink UHF Network External Bluetooth

Cutoff Angle °

GPS Enable Disable

GLONASS Enable Disable

Beidou Enable Disable

Galileo Enable Disable

SBAS Enable Disable

L-Band Enable Disable

aRTK Enable Disable

Save Cancel

Continued on next page

Hemisphere WebUI, Continued

Working Mode, Reference the following table for **Working Mode** fields and descriptions:
continued

Field	Description
Cutoff Angle	Satellites at a lower angle to the horizon than “5” are not used in the GNSS solution.
GLONASS	Enable or disable the use of GLONASS satellites.
BeiDou	Enable or disable the use of BeiDou satellites.
Galileo	Enable or disable the use of Galileo satellites.
SBAS	Enable or disable the use of SBAS for DGNSS corrections.
L-band	Enable to use Atlas corrections or aRTK.
Atlas Frequency	If using Atlas, set to Auto to automatically tune to the correct frequency, or manually tune to the correct frequency.
Atlas Datum	If receiving Atlas corrections, you can use the ITRF08 datum, the GDA94 datum, or input custom X, Y, Z offsets. Note: This only affects Atlas positions.
RTK Timeout	This field indicates the amount of time an RTK correction will continue to be used after RTK corrections are lost. Note: If using aRTK, set the L-band to Enable and RTK Timeout should be set to 2700.

Continued on next page

Hemisphere WebUI, Continued

Working Mode, continued **System Mode**

The S631 can be configured as a survey rover, base station, or run a static observation.

To set the base location select one of the following positions:

- **Single Position:** Upon startup, the S631 will average its position and use that position for the base position.
- **Repeat Position:** Used to input a permanent base station position into the S631. You may type in a latitude, longitude, and altitude, or click **Current Position** to automatically populate the field with the current GNSS position.
- **BaseLink Position:** (Requires an Atlas H10 (10-centimeter) subscription.) Used to input a **Target Accuracy**. Once the accuracy of the GNSS position of the receiver has reached the **Target Accuracy**, the receiver will begin to output RTK based on its calculated position. The accuracy of the GNSS position may continue to improve. If it does improve, a new target accuracy may be entered, and the base position will shift to reflect the new accuracy.

S631 D19370368906001

 S/N: D19370368906001
 FW: 0.28.200324
 IP: 192.168.10.1
 2020-03-31 23:00:23

Status
Information
Download
Management

Settings
Refresh

• **System Mode:** Base [Started] Stop

- **Longitude:** -111.998371751 °
- **Height:** 415.772 m
- **Satellites:** 25 [GPS: 8, BeiDou: 6, Glonass: 6, Galileo: 5]
- **HDOP:** 0.608
- **HRMS:** 1.217 m
- **GNSS Time:** 2020-03-31 23:00:23

- **Current Datalink:** UHF
- **Latitude:** 33.626118067 °
- **Status:** Single
- **PDOP:** 1.066
- **TDOP:** 0.640
- **VRMS:** 1.750 m

Continued on next page

Hemisphere WebUI, Continued

Working Mode, continued **Data Link**

The S631 supports the sending and receiving of RTK via the internal UHF radio, external devices (such as an external radio) via serial, TCP/IP, NTRIP, and Bluetooth (rover only).

Internal UHF

Your S631 comes without a channel table loaded. Only Hemisphere GNSS or a Hemisphere GNSS certified dealer can create the file to upload a channel table.

Next to **Current DataLink** select **UHF**.

Settings **Working Mode** Device Configuration NMEA & Athena Log Satellites

System Mode Static Rover Base

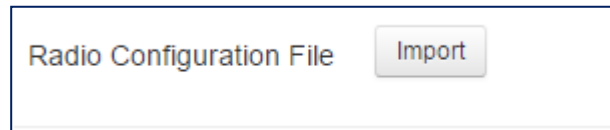
Current Datalink UHF Network External Bluetooth

Note: The radio frequency should match the transmitting base.


Continued on next page

Hemisphere WebUI, Continued

Working Mode, The following dialogue window appears:
continued



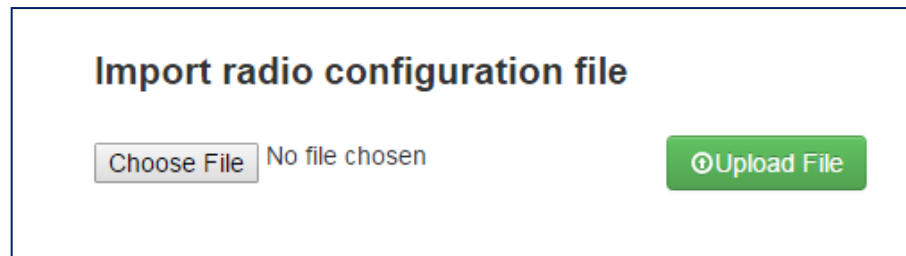
You can also upload a file by clicking **Import** next to **Radio Configuration File** and uploading a channel table file (file extension .ucf) provided by your dealer.



Continued on next page

Hemisphere WebUI, Continued

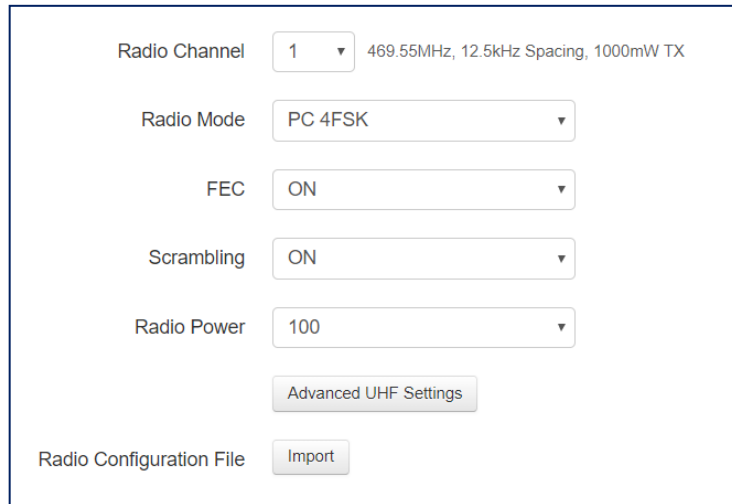Working Mode, continued The following dialogue window appears at the bottom of the page.



The screenshot shows a configuration dialog box with the following elements:

- Radio Channel:** A dropdown menu showing '1' with a small downward arrow. To its right, the text '469.55MHz, 12.5kHz Spacing, 1000mW TX' is displayed.
- Radio Mode:** A dropdown menu showing 'PC 4FSK' with a small downward arrow.
- FEC:** A dropdown menu showing 'ON' with a small downward arrow.
- Scrambling:** A dropdown menu showing 'ON' with a small downward arrow.
- Radio Power:** A dropdown menu showing '100' with a small downward arrow.
- Advanced UHF Settings:** A button with a light gray background and rounded corners.
- Radio Configuration File:** A label followed by an 'Import' button with a light gray background and rounded corners.

Radio Channel: Select a channel from the channel table provided by your dealer. The frequency, bandwidth, and transmit power (base only) is shown next to the channel.

Radio Mode: The S631 supports PacCrest protocols (GMSK and 4FSK modulation), Satel protocols, and Trimtalk protocols. For a full list of protocols, with descriptions (FEC, Scrambling, over the air link rate, and modulation), please refer to [Appendix C](#).

FEC: Forward Error Corrections

Radio Power: Transmit RTK corrections at 100mW, 200mW, 500mW, or 1W (dependent upon the radio settings and restrictions provided by your dealer). This feature is only displayed when running as a base.

Continued on next page

Hemisphere WebUI, Continued

Working Mode, External continued

If you wish to send RTK corrections out of the serial port (i.e., an external UHF radio) instead of to the Internal UHF radio (as explained above) select **External** next to **Current Datalink**.

Use the drop-down arrow to select the **baud rate** of the external device and plug that device into the 5-pin serial port. (Baud rates range from 9600 bps – 115200 bps.)

External Serial Port Baud Rate

The part numbers for the 5-pin cable are as follows:

Table 3-2: S631 5-pin cables

5-pin cable	Part Number	Description
S631 Power Cable (Alligator Clips)	054-0171-0	Alligator clip adapter for the 054-0180 serial cable and the 054-0178-0 power cable.
S631 Serial Cable	051-0392-0	Serial cable only Serial comes out to a DB9. To connect to an external UHF radio, you may need a null modem adapter.
S631 Power + Serial	054-0180-0	Power and serial cable
S631 Power Cable	054-0178-0	Power cable only

Continued on next page

Hemisphere WebUI, Continued

Working Mode, **Network**
continued

The S631 supports TCP/IP connections for a direct connection between base and rovers via cellular as well as NTRIP.

NTRIP

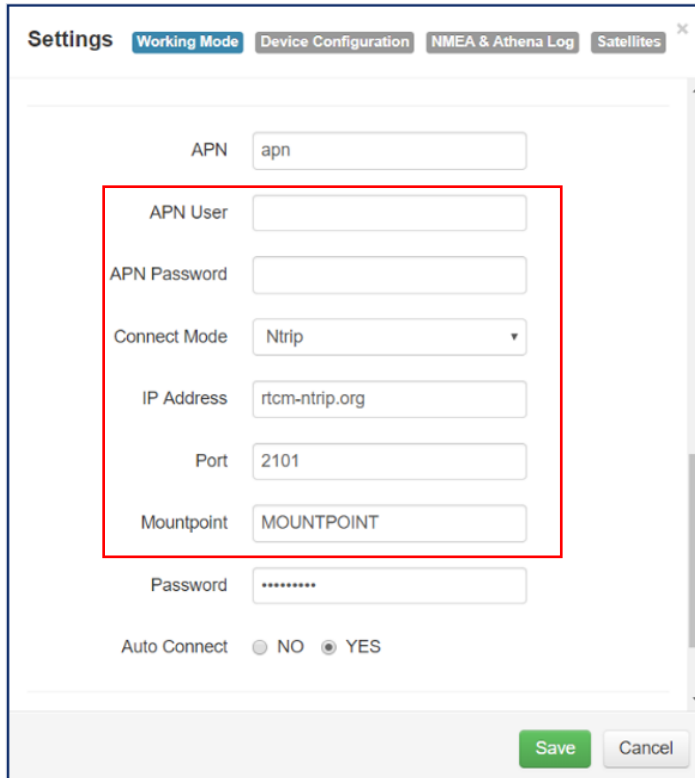
NTRIP requires a specific IP address, username, and password. When used as a base, the S631 is an NTRIP server.

Continued on next page

Hemisphere WebUI, Continued

Working Mode,
continued,
continued

Type your **APN Username**, **APN Password**, **IP address**, **Port**, and **Mountpoint**. If a username and password is not required for your APN, you can leave those fields blank. The configuration of NTRIP for a base is shown below.



The screenshot shows the 'Settings' window with the 'Working Mode' tab selected. The 'APN' field is set to 'apn'. A red box highlights the 'APN User', 'APN Password', 'Connect Mode', 'IP Address', 'Port', and 'Mountpoint' fields. The 'Connect Mode' is set to 'Ntrip', 'IP Address' is 'rtcm-ntrip.org', 'Port' is '2101', and 'Mountpoint' is 'MOUNTPOINT'. The 'Password' field is masked with dots. The 'Auto Connect' option is set to 'YES'.

If configuring NTRIP for a Rover, click **Get Mountpoint** to generate a list of available mountpoints.

WARNING: If the S631 has not yet established an internet connection via the Internal GSM modem, the **Get Mountpoint** button will not operate. You can configure the APN settings while using TCP/IP so that an internet connection is established.

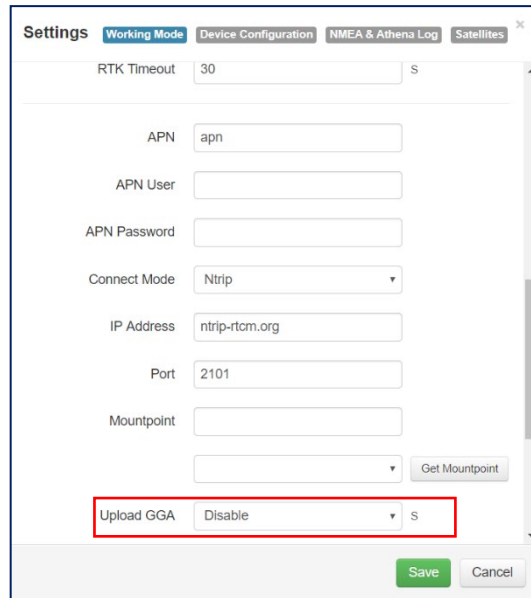
Continued on next page

Hemisphere WebUI, Continued

Working Mode,
continued

Some networks require a GNSS position prior to sending RTK. To send GNSS positions to the network, click on the dropdown menu next to **Upload GGA** and select a rate.

After establishing an internet connection, change **Connect Mode** back to **NTRIP** and proceed with the configuration.



The screenshot shows the 'Settings' window with the 'Working Mode' tab selected. The 'Upload GGA' dropdown menu is highlighted with a red box, showing 'Disable' selected and 'S' as the rate. Other settings include RTK Timeout (30 S), APN (apn), APN User, APN Password, Connect Mode (Ntrip), IP Address (ntrip-rtcm.org), Port (2101), and Mountpoint. A 'Get Mountpoint' button is visible next to the Mountpoint field. 'Save' and 'Cancel' buttons are at the bottom right.

Continued on next page

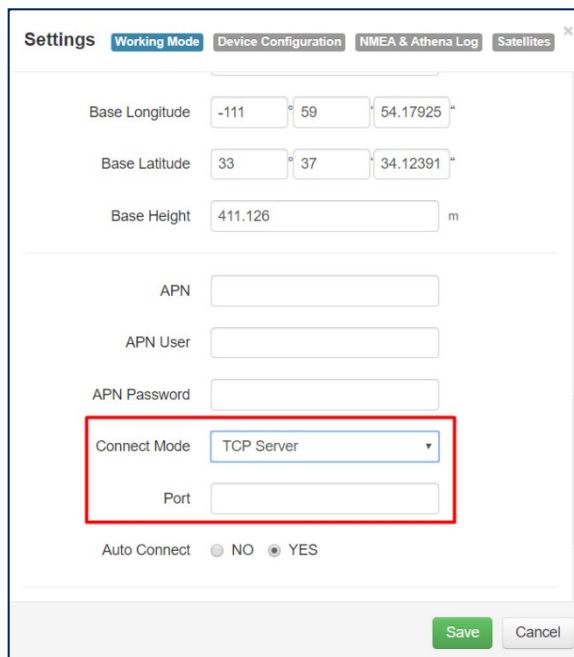
Hemisphere WebUI, Continued

Working Mode, TCP/IP continued

If running as a base station, select **TCP Server** and type in a **Port name**.

The TCP Server requires that the SIM card provide a public IP address. The public IP address can be found in the **Information** tab on the S631 WebUI.

Note: The **Auto Connect** identifies that the receiver connects to the network when powered up.




The screenshot shows the 'Settings' page in the Hemisphere WebUI, specifically the 'Working Mode' tab. The page contains several configuration fields: 'Base Longitude' (split into three input boxes: -111, 59, 54.17925), 'Base Latitude' (split into three input boxes: 33, 37, 34.12391), 'Base Height' (411.126 m), 'APN', 'APN User', 'APN Password', 'Connect Mode' (a dropdown menu currently set to 'TCP Server'), 'Port' (an empty text input field), and 'Auto Connect' (radio buttons for 'NO' and 'YES', with 'YES' selected). A red rectangular box highlights the 'Connect Mode' dropdown and the 'Port' input field. At the bottom right, there are 'Save' and 'Cancel' buttons.

Continued on next page

Hemisphere WebUI, Continued

Working Mode, continued If the S631 is running as a rover, select **TCP Client** and type in the **IP address** and **Port** of the base.

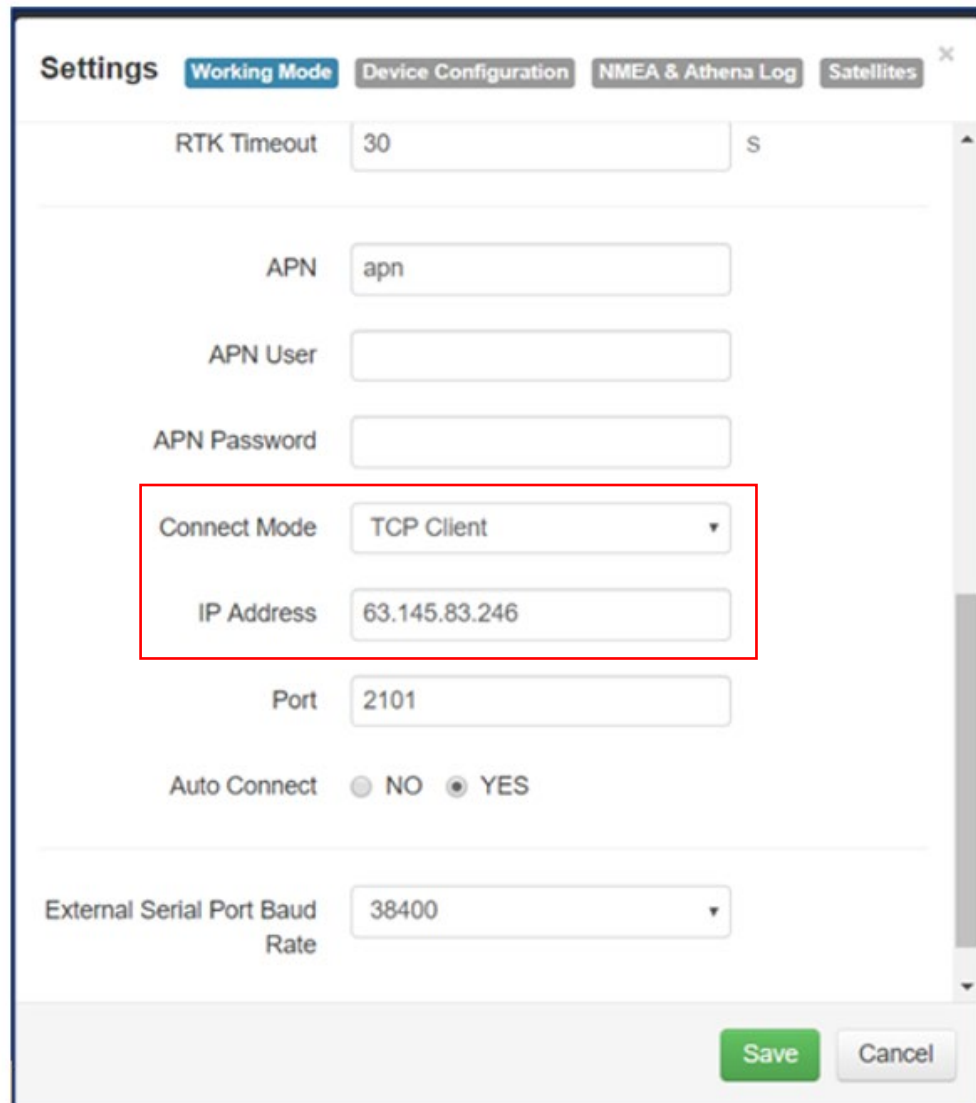Note: The **IP address** and **Port** of the base is under the **Information** tab of the base station.




The screenshot shows the 'Settings' window with the 'Working Mode' tab selected. The 'Connect Mode' dropdown menu is highlighted with a red box and is set to 'TCP Client'. Below it, the 'IP Address' field contains the value '63.145.83.246'. Other visible settings include 'RTK Timeout' at 30, 'APN' as 'apn', 'APN User' and 'APN Password' as empty fields, 'Port' at 2101, 'Auto Connect' set to YES, and 'External Serial Port Baud Rate' at 38400. 'Save' and 'Cancel' buttons are at the bottom right.

Continued on next page

Hemisphere WebUI, Continued

Working Mode, Rover/Bluetooth continued

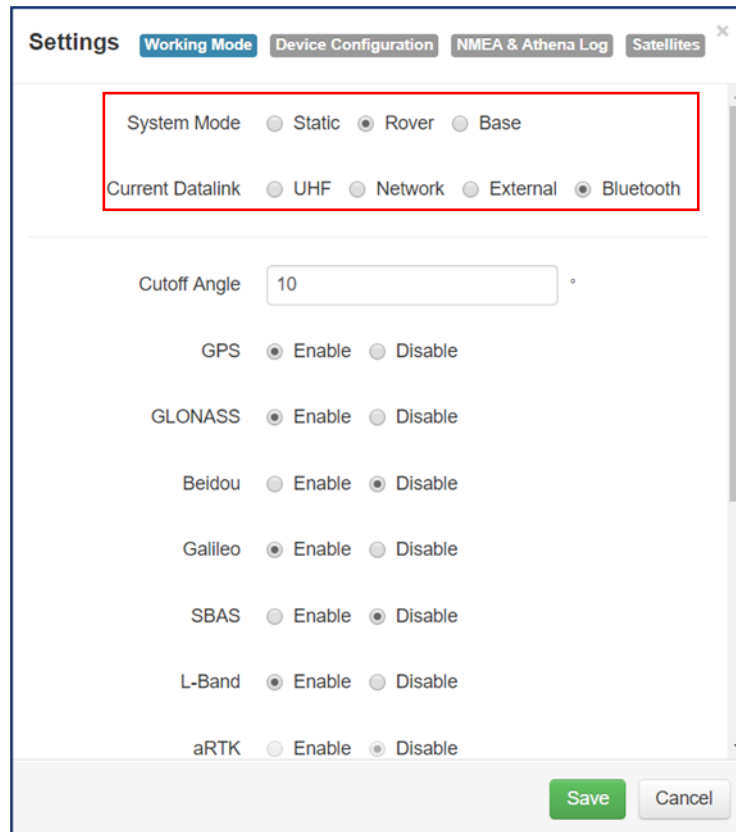The Rover/Bluetooth is typically used with third-party software when streaming network corrections to the data collector internet and then sending them to the S631 via the Bluetooth communication port.



The screenshot shows the 'Settings' window with the 'Working Mode' tab selected. A red rectangular box highlights the 'System Mode' and 'Current Datalink' sections. In the 'System Mode' section, the 'Rover' radio button is selected. In the 'Current Datalink' section, the 'Bluetooth' radio button is selected. Below these sections, there is a 'Cutoff Angle' input field with the value '10'. Further down, there are several satellite system enable/disable options: GPS (Enable), GLONASS (Enable), Beidou (Disable), Galileo (Enable), SBAS (Disable), L-Band (Enable), and aRTK (Disable). At the bottom right of the settings window are 'Save' and 'Cancel' buttons.

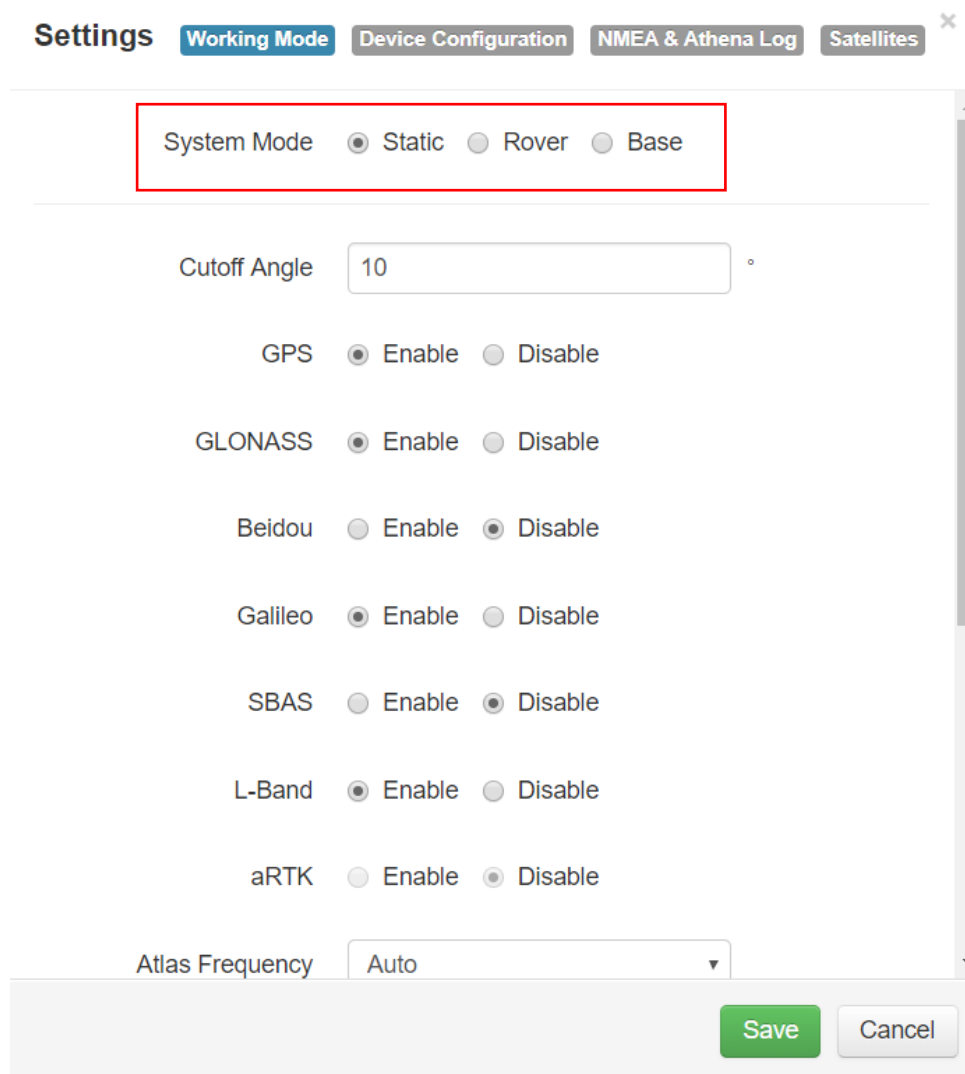
Continued on next page

Hemisphere WebUI, Continued

Working Mode, Static continued

Use **Static** mode to take a static observation of a point and stop logging (for both base and rover) if the position moves.

Select **Static** next to **System Mode** and configure the log file. To configure a file, refer to [Working Mode](#) for instructions.



Settings Working Mode Device Configuration NMEA & Athena Log Satellites

System Mode Static Rover Base

Cutoff Angle °

GPS Enable Disable

GLONASS Enable Disable

Beidou Enable Disable

Galileo Enable Disable

SBAS Enable Disable

L-Band Enable Disable

aRTK Enable Disable

Atlas Frequency

Continued on next page

Hemisphere WebUI, Continued

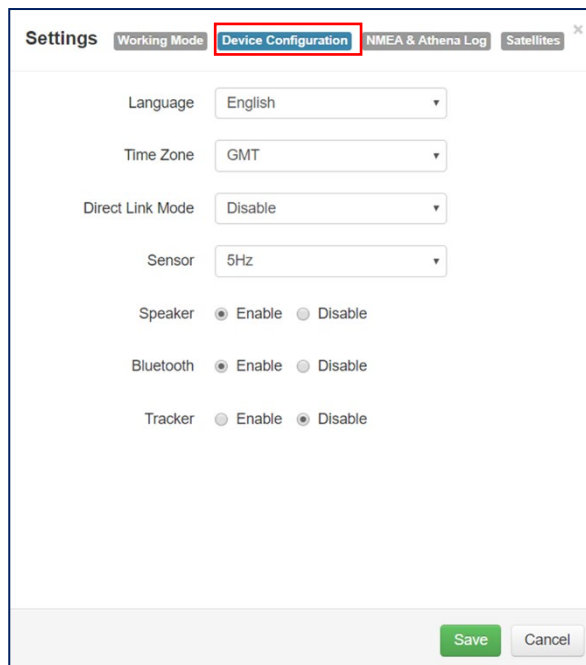
Device Configuration

The **Device Configuration** tab allows for custom settings for language, time zones, storage, and several other options.

When enabling the speaker, the S631 relays the status of the positioning via voice updates. The S631 will audibly indicate when the receiver is in **Base** or **Rover** mode. Voice indication covers logging data and declaring when the S631 has achieved RTK float and RTK fix. This is important when working in a low visibility environment.

Direct Link mode enables certain troubleshooting features for Hemisphere GNSS and certified Hemisphere GNSS dealers. In addition, the easy-to-use radio buttons allow you to use tracker and disable or enable Bluetooth.

Note: Restore Factory Defaults re-enables Bluetooth.



The screenshot shows the 'Settings' window with the 'Device Configuration' tab selected. The settings are as follows:

Setting	Value
Language	English
Time Zone	GMT
Direct Link Mode	Disable
Sensor	5Hz
Speaker	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Bluetooth	<input checked="" type="radio"/> Enable <input type="radio"/> Disable
Tracker	<input type="radio"/> Enable <input checked="" type="radio"/> Disable

At the bottom right, there are 'Save' and 'Cancel' buttons.

Continued on next page

Hemisphere WebUI, Continued

Device Configuration, continued

Sensor

Turn on the Sensor, using the drop-down arrow to select the desired rate.

Settings **Working Mode** **Device Configuration** NMEA & Athena Log Satellites ×

Language

Time Zone

Direct Link Mode

Sensor

Speaker Enable Disable

Bluetooth Enable Disable

Tracker Enable Disable

Continued on next page

Hemisphere WebUI, Continued

NMEA Message To enable NMEA messages, click the **NMEA & Athena Log** tab. Adjust the NMEA messages that are output over the 5-pin serial port and over Bluetooth.

Settings
Working Mode
Device Configuration
NMEA & Athena Log
Satellites x

NMEA by Bluetooth:

GGA: <input type="text" value="Off"/>	ZDA: <input type="text" value="Off"/>	GEDOP: <input type="text" value="Off"/>
GSA: <input type="text" value="Off"/>	GSV: <input type="text" value="Off"/>	GEREF: <input type="text" value="Off"/>
GST: <input type="text" value="Off"/>	VTG: <input type="text" value="Off"/>	GESNR: <input type="text" value="Off"/>
RMC: <input type="text" value="Off"/>	GLL: <input type="text" value="Off"/>	GEVCV: <input type="text" value="Off"/>
BIN3: <input type="text" value="5Hz"/>	BIN5: <input type="text" value="1Hz"/>	GELBD: <input type="text" value="Off"/>
BIN209: <input type="text" value="1Hz"/>	RTKSTAT: <input type="text" value="Off"/>	

NMEA by Serial Port:

GGA: <input type="text" value="1Hz"/>	ZDA: <input type="text" value="Off"/>	GSA: <input type="text" value="Off"/>
GSV: <input type="text" value="Off"/>	GST: <input type="text" value="Off"/>	VTG: <input type="text" value="1Hz"/>
RMC: <input type="text" value="Off"/>	GLL: <input type="text" value="Off"/>	BIN3: <input type="text" value="Off"/>
BIN5: <input type="text" value="Off"/>	BIN209: <input type="text" value="Off"/>	RTKSTAT: <input type="text" value="Off"/>

Continued on next page

Hemisphere WebUI, Continued

NMEA Message, continued Refer to Table 3-3 for NMEA Message fields and descriptions:

Table 3-3: NMEA Message Fields and Descriptions

Field	Description
NMEA Log	Store the NMEA or binary messages that are turned on to the internal memory of the receiver or to an SD Card.
First Storage	Select if NMEA, binary, or Athena logs should be stored to the internal memory of the receiver or to an SD card.
Athena Log	Record raw data for converting to Rinex and post-processing. If “Yes” is selected, the following dialogue will display: Access the Rinex converter using the following hyperlink: HTTPS://HEMISPHEREGNSS.COM/RESOURCES-SUPPORT/SOFTWARE
Point Name	Choose a name for the point that is occupied.
Antenna Height	Type the height of the antenna in meters. Note: Older versions of firmware required millimeters (mm) as seen in the image. Please refer to the unit listed to the right side of the field.
Pdop Threshold	Data will not be logged if the Pdop of the receiver exceeds the user defined value (3.5 is the default value and can be changed).
Interval	Log data at intervals of 30s, 15s, 5s, 1Hz, 2Hz, 5Hz, or 10Hz.

Continued on next page

Hemisphere WebUI, Continued

NMEA Message, continued While the receiver is logging data, the WebUI will display **[Recording]** next to **System Mode** under the **Status** tab. To stop recording, click **Stop Record**.

S631 D19370368906001 S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-21 18:51:27

Status Information **Download** Management Settings ↻

- **System Mode:** Base [Started] Stop **[Recording]** Stop Record
- **Longitude:** -111.998382543 °
- **Height:** 411.118 m
- **Satellites:** 12 [GPS: 6, Glonass: 2, Galileo: 4]
- **HDOP:** 1.177
- **HRMS:** 2.355 m
- **GNSS Time:** 2020-04-21 18:51:27
- **Current Datalink:** External
- **Latitude:** 33.626146334 °
- **Status:** Single
- **PDOP:** 2.123
- **TDOP:** 1.396
- **VRMS:** 3.532 m

To download the log, click the **Download** tab.

S631 D19370368906001 S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-13 22:05:05

Status Information **Download** Management Settings ↻

Select	Name	Size	Modification Time(UTC)	Operation
<input type="checkbox"/>	60010841.dat	10.354M	2020-03-25 03:10:36	⬇️ Download 🗑️ Delete

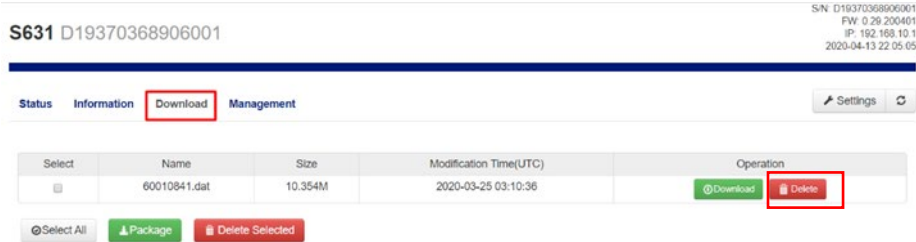
Select All
Package
Delete Selected

All logs stored on the S631 internal hard drive will display.

Continued on next page

Hemisphere WebUI, Continued

NMEA Message, continued Click **Delete** to delete the log.



S631 D19370368906001

S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-13 22:05:05


Status Information **Download** Management Settings

Select	Name	Size	Modification Time(UTC)	Operation
<input type="checkbox"/>	60010841.dat	10.354M	2020-03-25 03:10:36	<input type="button" value="Download"/> <input type="button" value="Delete"/>

Multiple logs can be downloaded or deleted at one time by selecting the box next to each of the logs and clicking **Package** or **Delete Selected**.

Satellites

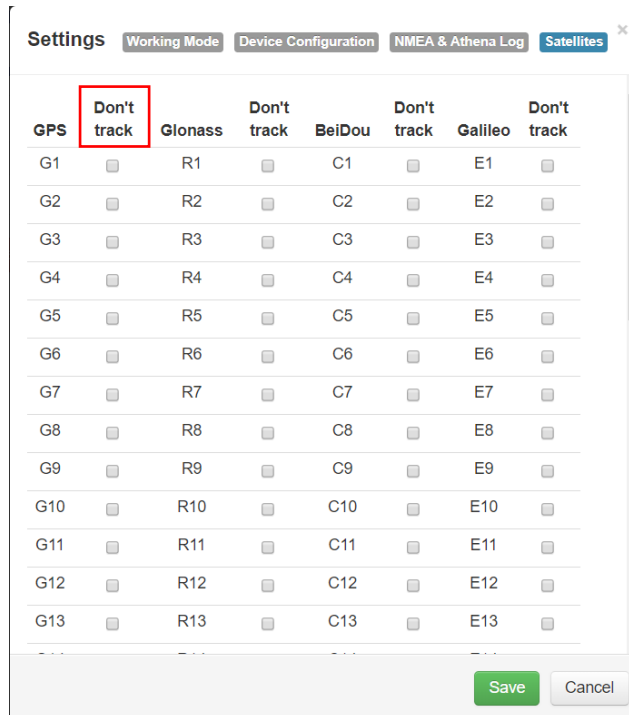If you wish to exclude a specific satellite, select the **Don't track** checkbox next to that satellite in the list.



Settings Working Mode Device Configuration NMEA & Athena Log **Satellites**

GPS	Don't track	Glonass	Don't track	BeiDou	Don't track	Galileo	Don't track
G1	<input type="checkbox"/>	R1	<input type="checkbox"/>	C1	<input type="checkbox"/>	E1	<input type="checkbox"/>
G2	<input type="checkbox"/>	R2	<input type="checkbox"/>	C2	<input type="checkbox"/>	E2	<input type="checkbox"/>
G3	<input type="checkbox"/>	R3	<input type="checkbox"/>	C3	<input type="checkbox"/>	E3	<input type="checkbox"/>
G4	<input type="checkbox"/>	R4	<input type="checkbox"/>	C4	<input type="checkbox"/>	E4	<input type="checkbox"/>
G5	<input type="checkbox"/>	R5	<input type="checkbox"/>	C5	<input type="checkbox"/>	E5	<input type="checkbox"/>
G6	<input type="checkbox"/>	R6	<input type="checkbox"/>	C6	<input type="checkbox"/>	E6	<input type="checkbox"/>
G7	<input type="checkbox"/>	R7	<input type="checkbox"/>	C7	<input type="checkbox"/>	E7	<input type="checkbox"/>
G8	<input type="checkbox"/>	R8	<input type="checkbox"/>	C8	<input type="checkbox"/>	E8	<input type="checkbox"/>
G9	<input type="checkbox"/>	R9	<input type="checkbox"/>	C9	<input type="checkbox"/>	E9	<input type="checkbox"/>
G10	<input type="checkbox"/>	R10	<input type="checkbox"/>	C10	<input type="checkbox"/>	E10	<input type="checkbox"/>
G11	<input type="checkbox"/>	R11	<input type="checkbox"/>	C11	<input type="checkbox"/>	E11	<input type="checkbox"/>
G12	<input type="checkbox"/>	R12	<input type="checkbox"/>	C12	<input type="checkbox"/>	E12	<input type="checkbox"/>
G13	<input type="checkbox"/>	R13	<input type="checkbox"/>	C13	<input type="checkbox"/>	E13	<input type="checkbox"/>

Save Cancel

Firmware Update

Updating firmware via WebUI

Updating Firmware via WebUI

S631 D19370368906001

S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-21 18:52:20

Status Information Download **Management**

Settings

Install New Firmware

Choose File No file chosen

Upload File

Using the **Management** tab under the WebUI, select the **Choose File** button to find the appropriate firmware of application software for the S631 device.

After selecting the correct firmware/software file, click the green **Upload File** button.

S631 D19370368906001

S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-13 22:05:05

Status Information Download **Management**

Settings

File is being uploaded...

When the file is uploaded, be sure to compare the current firmware version with the new firmware version. When you have verified the correct files are in place, click the **OK** button.

Continued on next page

Firmware Update, Continued

Updating firmware via WebUI, continued

A status bar indicates the level of progress for the updating firmware / software.

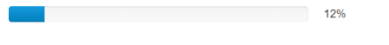
S631 D19370368906001

S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-13 22:05:05

Status Information Download Management Settings

Firmware Type : OEM Firmware
Current Version : 6.0Aa01x9
New Version : 6.0Aa01x10

Update running...



12%

When the status bar reaches 100%, the upgrade is complete. The WebUI will indicate **Update successful**.


S631 D19370368906001

S/N: D19370368906001
FW: 0.29.200401
IP: 192.168.10.1
2020-04-13 22:05:05

Status Information Download Management Settings

Firmware Type : OEM Firmware
Current Version : 6.0Aa01x9
New Version : 6.0Aa01x10

Update successful.



100%

Back

Continued on next page

Firmware Update, Continued

Updating
firmware via
WebUI,
continued

Updating Firmware via MicroSD Card

Using the WebUI, select **Settings** and **Device Configuration**. Under **Device Configuration**, locate the **First Storage** option, and select the **SD Card** radio button.

Click the **Save** button at the bottom right of the screen.

Place the upgrade files under “update” folder of the MicroSD card. Version info must be placed after the file name and separated by “_”.

The name must follow the naming convention listed below.

Receiver firmware: S631_update_YYMMDD.bin
YY: Year
MM: Month DD: Day
e.g. S631_update_160202.bin

Radio firmware: SATEL_update_XXXXX.bin
XXXXX: version
e.g. SATEL_update_V07.27.2.0.8.6.bin

3G module firmware: PHS_update_XXXXX.bin
XXXXX: version
e.g. PHS_update_03.001.bin

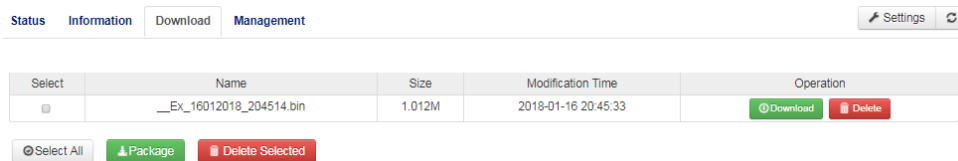
How to Download Static Data

How to download static data


Static data can be logged to the S631 internal memory or to a MicroSD card.

If **First Storage** is set to **Internal Storage** (see [Device Configuration](#)), the log files save to the internal memory of the S631.

To download the logs, log into the WebUI and click **Download**.



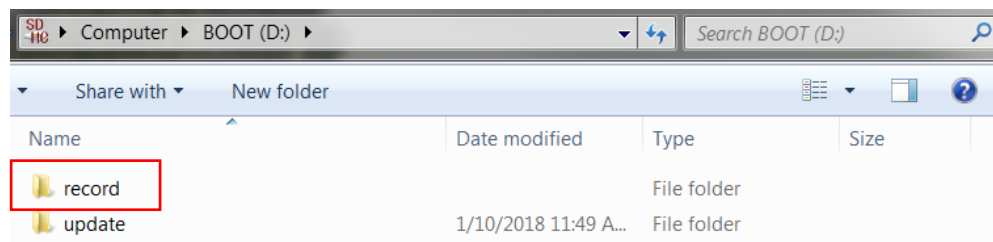If **First Storage** is set to **SD Card**, the files save to the MicroSD card in the S631. If the MicroSD card is full, or the S631 does not have a MicroSD card placed inside, the files will save to the S631 in the **record** folder.



Appendix A: Troubleshooting

Overview

Introduction Appendix A provides troubleshooting and solutions for common questions.

Contents

Topic	See Page
Troubleshooting	65

Troubleshooting

Troubleshooting Table A-1 provides troubleshooting tips for the S631.

Table A-1: Troubleshooting

Issue	Possible Resolution
Receiver fails to power	<ul style="list-style-type: none"> • External power is low. • Check charge on external battery and the fuse on the power cable, if applicable. • Internal power: Check charge on internal battery. • Check all power cables and pins. • Try other batteries or cables. • Make sure to hold the power button down for a minimum of one full second to turn on. • Ensure the battery is installed with contacts pointed in the correct direction.
Random data from WebUI or S631 Direct Link mode	<ul style="list-style-type: none"> • Verify the messages selected in the output messages in the WebUI match what you desire. • Verify the baud rate settings match. <p>Potentially the volume of data requested to be output could be higher than the current baud rate supports. Try using a higher baud rate for communications.</p>

Continued on next page

Troubleshooting, Continued

Troubleshooting , continued

Issue	Possible Resolution
S631 will not go RTK Fixed	<ul style="list-style-type: none"> • If the S631 is “RTK Float” then it is receiving RTK or Atlas corrections. • If the RTK latency is between 10-15 seconds, these are most likely Atlas corrections. • If the RTK latency is less than 10-15 seconds, the S631 is receiving RTK, but probably will not Fix because of the environment. • If the S631 will not go RTK Float or RTK Fixed, check to ensure the base station is operating. • Verify the settings of the UHF radio at the base and at the rover are the same. • If using a network, check the Cellular Signal Quality (CSQ) under the Information tab for cellular reception. • If using the internal UHF radio, ensure a valid 400 MHz or 900 MHz UHF antenna is plugged into the TNC connector. <p>If using Bluetooth, ensure RTK is reaching the data collector (check the data collector internet or data collector radio).</p>

Appendix B: Technical Specifications

Overview

Introduction The S631 GNSS Smart Antenna technical specifications are contained in Appendix B.

Contents

Topic	See Page
Technical Specifications	68

Technical Specifications

S631 Technical specifications

Table B-1: GNSS Receiver

Item	Specification
Receiver type	Multi-Frequency GPS, GLONASS, BeiDou, Galileo, QZSS, IRNSS, and Atlas L-band
Signals Received	GPS L1CA/L1P/L1C/L2P/L2C/L5 GLONASS G1/G2/G3, P1/P2 BeiDou B1i/B2i/B3i/B10C/B2A/B2B/ ACEBOC GALILEO E1BC/E5a/E5b/E6BC/ALTB OC QZSS L1CA/L2C/L5/L1C/LEX IRNSS L5 Atlas
Channels	800+
RTK Formats	RTCM2.1, RTCM2.3, RTCM3.0, RTCM3.1, RTCM3.2 including MSM
Recording Intervals	Selectable from 1, 2, 4, 5, 10 Hz (20 Hz optional)

Table B-2: Accuracy

Positioning (RMS)	Horizontal	Vertical
Autonomous, no SA: ¹	1.2m	2.4m
SBAS: ¹	0.3m	0.6m
Atlas H10: ^{1,3}	0.04m	0.08m
RTK ^{1,2}	8 mm + 1 ppm	15 mm + 2 ppm
Static Performance ¹	2.5 mm + 1 ppm	5 mm + 1 ppm
Tilt Compensation (within 30°)	2cm (with 1.8 m pole)	
Initialization Time	<10 s	

Continued on next page

Technical Specifications, Continued

S631 Technical specifications, continued

Table B-3: L-band Receiver

Item	Specification
Receiver Type	Single Channel
Frequency Range	1525 to 1560 MHz
Sensitivity	-130 dBm
Channel Spacing	5.0 kHz
Satellite Selection	Manual and Automatic
Reacquisition Time	15 seconds (typical)

Table B-4: Communications

Item	Specification
Bluetooth	Bluetooth 2.1+EDR / 4.0 LE
Wi-Fi	802.11 b/g
Network	LTE FDD: B1/B2/B3/B4/B5/B7/B8/B12/B13/ B18/B19/B20/B25/B26/B28 LTE TDD: B38/B39/B40/B41 UMTS: B1/B2/B4/B5/B6/B8/B19 GSM: B2/B3/B5/B8
Radio	Frequency range: 410MHz ~ 470MHz and 902.4MHz ~ 928MHz Channel Spacing: 12.5 KHz / 25 KHz Protocol: TrimTalk 450S, PCC EOT, TrimMark III(19200)
WebUI	To upgrade software, manage status and settings, data download, via smartphone, tablet or other electronic device, configure advanced radio settings.

Continued on next page

Technical Specifications, Continued

S631 Technical specifications, continued

Table B-5: Connector Ports

Item	Description
TNC	For connecting to UHF radio antenna
LEMO 5-pin	For connecting to external power supply, external radio
LEMO 7-pin	For serial port, USB
Card Slots	For Micro SIM card and Micro SD card

Table B-6: Data Storage

Item	Description
Storage Type	8 GB internal, SD card up to 32 GB

Table B-7: Physical

Item	Specification
Weight	1.3 kg (with battery)
Dimensions	Diameter: 152mm Height: 76mm

Continued on next page

Technical Specifications, Continued

S631 Technical specifications, continued

Table B-8: Environmental

Item	Specification
Operating Temperature	-30°C to 65°C
Storage Temperature	-40°C to 80°C
Temperature Protection	IP67, Protect from temporary immersion to a depth of 1 meter
Shock Resistance	MIL-STD-810G, method 516.6 Designed to survive a 2m pole drop on concrete floor with no damage; designed to survive a 1m free drop on hardwood floor with no damage
Vibration	MIL-STD-810G, method 514.6E-I
Humidity	Up to 100%
Flammability	UL recognized, 94HB Flame Class Rating (3). 1.49mm
Chemical Resistance	Cleaning agents, soapy water, industrial alcohol, water vapor, solar radiation (UV)

Table B-9: Electrical

Item	Specification
Input Voltage	9 to 28 VDC
Battery	With removable dual battery, for single battery parameter: 7.2 V, 3400 mAh, 24.48 Wh
Working Time	More than 9 hours in Rover UHF mode

Continued on next page

Technical Specifications, Continued

S631 Technical specifications, continued

Table B-10: User Interface

Item	Specification
Button	Switch receiver on/off, broadcast current operation mode and status.
LEDs	Power, Satellite, Data Link, Bluetooth
WebUI	Supports software updates, receiver status and settings, and data downloads via smartphones, tablets, or other Wi-Fi capable devices.

¹ Depends on multi-path environment, number of satellites in view, satellite geometry, and ionospheric activity

² Depends also on baseline length

³ Requires a subscription from Hemisphere GNSS

Appendix C: Radio Mode/QR Code

Overview

Introduction The S631 Radio Mode information and the QR code is provided in Appendix C.

Contents

Topic	See Page
Radio Mode	74
QR Code	76
Index	77
End User License Agreement	78
Warranty Notice	82

Radio Mode

Radio Mode

The following tables show the available S631 radio modes. Table C-1 displays the information for the S631 model part number 752-0042-10, and Table C-2 displays the information for the S631 model part number 752-0043-10.

**Table C-1: Radio Mode G.E. Protocols
S631 part number 752-0042-10**

Radio Mode	Link Rate	Spacing	Modulation	Scrambling	FEC
Trimtalk 1	4800 bps	12.5 kHz	GMSK	OFF	OFF
Trimtalk 2	9600 bps	25.0 kHz			
Trimmark III	19200 bps	25.0 kHz	GMSK	OFF	OFF
PC5	4800 bps	12.5 kHz	GMSK	ON	ON
PC1	9600 bps	25.0 kHz	GMSK	ON	ON
Satel	9600 bps	12.5 kHz	4FSK	On	OFF
					ON
	25.0 kHz	OFF			
	19200 bps	25.0 kHz			ON
PacCrest 4-FSK	9600 bps	12.5 kHz	4FSK	On	OFF
					ON
	25.0 kHz	OFF			
	19200 bps	25.0 kHz			ON
900MHz	--	--	--	--	--

Continued on next page

Radio Mode, Continued

Radio Mode,
continued


Table C-2: Radio Mode Satel Protocols
S631 part number 752-0043-10

Radio Mode	Link Rate	Spacing	Modulation	Scrambling	FEC
Trimtalk 1	4800 bps	12.5 kHz	GMSK	OFF	OFF
Trimtalk 2	9600 bps	25.0 kHz			
PacCrest GMSK	4800 bps	12.5 kHz	GMSK	OFF	OFF
				ON	ON
	9600 bps	25.0 kHz		OFF	OFF
				ON	ON
PacCrest 4FSK	9600 bps	12.5 kHz	4FSK	OFF	OFF
				ON	ON
	19200 bps	25.0 kHz		OFF	OFF
				ON	ON
Satel	9600 bps	12.5 kHz	4FSK	On	OFF
	19200 bps	25.0 kHz			ON
900 MHz	--	--	--	--	--

QR Code

QR code

The below image shows the S631 QR code.

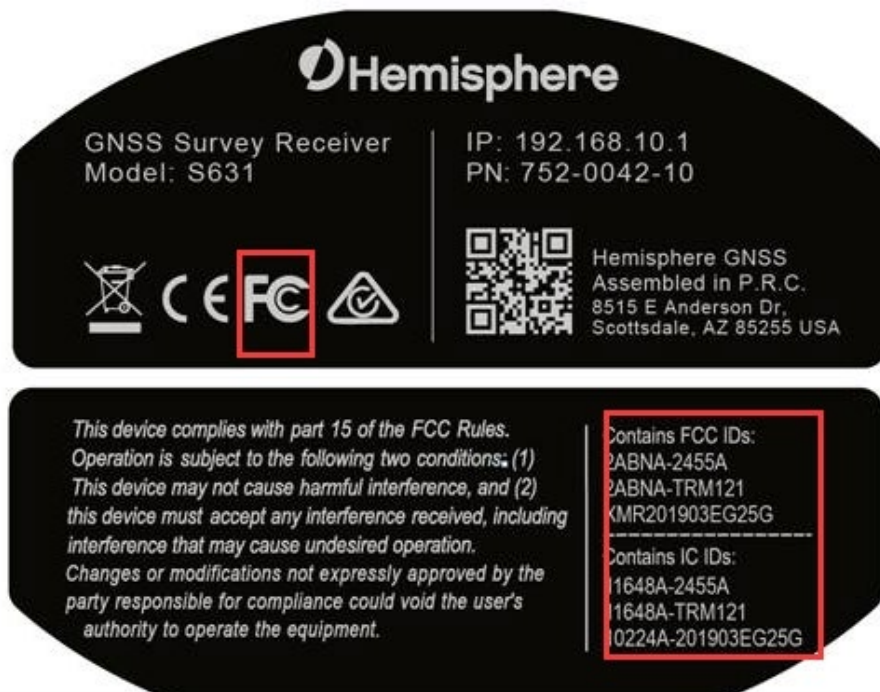

Index

Activation, 7
aRTK, 7, 15, 41
aRTK Position Aiding, 15
Atlas, 7, 11, 14, 15, 39, 41, 42, 66, 68
Auto Connect, 50
base, 34
BeiDou, 7
Bluetooth, 13, 16, 33, 35, 43, 52, 54, 56, 66, 69, 72
Convergence time, 14
Direct Link, 54, 65
LED Indicators, 33
MicroSD card, 30, 62, 63
Positioning accuracy, 14
Positioning sustainability, 14
Radio Mode, 45, 73, 74, 75
rover, 34
RTK Timeout, 41
SBAS, 9, 41, 68
Scalable service levels, 14
SIM card, 30, 31, 50, 70
Subscription, 7
SureFix, 12, 15
tribrach, 25, 34
UHF antennas, 24

End User License Agreement

End User License Agreement

IMPORTANT - This is an agreement (the "Agreement") between you, the end purchaser ("Licensee") and Hemisphere GNSS Inc. ("Hemisphere") which permits Licensee to use the Hemisphere software (the "Software") that accompanies this Agreement. This Software may be licensed on a standalone basis or may be embedded in a Product. Please read and ensure that you understand this Agreement before installing or using the Software Update or using a Product.

In this agreement any product that has Software embedded in it at the time of sale to the Licensee shall be referred to as a "Product". As well, in this Agreement, the use of a Product shall be deemed to be use of the Software which is embedded in the Product.

BY INSTALLING OR USING THE SOFTWARE UPDATE OR THE PRODUCT, LICENSEE THEREBY AGREES TO BE LEGALLY BOUND BY THE TERMS OF THIS AGREEMENT. IF YOU DO NOT AGREE TO THESE TERMS, (I) DO NOT INSTALL OR USE THE SOFTWARE, AND (II) IF YOU ARE INSTALLING AN UPDATE TO THE SOFTWARE, DO NOT INSTALL THE UPDATE AND PROMPTLY DESTROY IT.

HEMISPHERE PROVIDES LIMITED WARRANTIES IN RELATION TO THE SOFTWARE. AS WELL, THOSE WHO USE THE EMBEDDED SOFTWARE DO SO AT THEIR OWN RISK. YOU SHOULD UNDERSTAND THE IMPORTANCE OF THESE AND OTHER LIMITATIONS SET OUT IN THIS AGREEMENT BEFORE INSTALLING OR USING THE SOFTWARE OR THE PRODUCT.

1. LICENSE. Hemisphere hereby grants to Licensee a non-transferable and non-exclusive license to use the Software as embedded in a Product and all Updates (collectively the "Software"), solely in binary executable form.
2. RESTRICTIONS ON USE. Licensee agrees that Licensee and its employees will not directly or indirectly, in any manner whatsoever:
 - a. install or use more copies of the Software than the number of copies that have been licensed;
 - b. use or install the Software in connection with any product other than the Product the Software was intended to be used or installed on as set out in the documentation that accompanies the Software.
 - c. copy any of the Software or any written materials for any purpose except as part of Licensee's normal backup processes;
 - d. modify or create derivative works based on the Software;
 - e. sub-license, rent, lease, loan or distribute the Software;
 - f. permit any third party to use the Software;
 - g. use or operate Product for the benefit of any third party in any type of service outsourcing, application service, provider service or service bureau capacity;
 - h. reverse engineer, decompile or disassemble the Software or otherwise reduce it to a human perceivable form;
 - i. Assign this Agreement or sell or otherwise transfer the Software to any other party except as part of the sale or transfer of the whole Product.
3. UPDATES. At Hemisphere's discretion Hemisphere may make Updates available to Licensee. An update ("Update") means any update to the Software that is made available to Licensee including error corrections, enhancements and other modifications. Licensee may access, download and install Updates during the Warranty Period only. All Updates that Licensee downloads, installs or uses shall be deemed to be Software and subject to this Agreement. Hemisphere reserves the right to modify the Product without any obligation to notify, supply or install any improvements or alterations to existing Software.
4. SUPPORT. Hemisphere may make available directly or through its authorized dealers telephone and email support for the Software. Contact Hemisphere to find the authorized dealer near you. As well, Hemisphere may make available user and technical documentation regarding the Software. Hemisphere reserves the right to reduce and limit access to such support at anytime.

Continued on next page

End User License Agreement, Continued

End User License Agreement

1. **BACKUPS AND RECOVERY.** Licensee shall back-up all data used, created or stored by the Software on a regular basis as necessary to enable proper recovery of the data and related systems and processes in the event of a malfunction in the Software or any loss or corruption of data caused by the Software. Licensee shall assume all risks of loss or damage for any failure to comply with the foregoing.
2. **OWNERSHIP.** Hemisphere and its suppliers own all rights, title and interest in and to the Software and related materials, including all intellectual property rights. The Software is licensed to Licensee, not sold.
3. **TRADEMARKS.** "Hemisphere GNSS", "Crescent", "Eclipse" and the associated logos are trademarks of Hemisphere. Other trademarks are the property of their respective owners. Licensee may not use any of these trademarks without the consent of their respective owners.
4. **LIMITED WARRANTY.** Hemisphere warrants solely to the Licensee, subject to the exclusions and procedures set forth herein below, that for a period of one (1) year from the original date of purchase of the Product in which it is embedded (the "Warranty Period"), the Software, under normal use and maintenance, will conform in all material respects to the documentation provided with the Software and any media will be free of defects in materials and workmanship. For any Update, Hemisphere warrants, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater, that the Update, under normal use and maintenance, will conform in all material respects to the documentation provided with the Update and any media will be free of defects in materials and workmanship. Notwithstanding the foregoing, Hemisphere does not warrant that the Software will meet Licensee's requirements or that its operation will be error free.
5. **WARRANTY EXCLUSIONS.** The warranty set forth in Section (8) will not apply to any deficiencies caused by (a) the Product not being used as described in the documentation supplied to Licensee, (b) the Software having been altered, modified or converted in any way by anyone other than Hemisphere approved by Hemisphere, (c) any malfunction of Licensee's equipment or other software, or (d) damage occurring in transit or due to any accident, abuse, misuse, improper installation, lightning (or other electrical discharge) or neglect other than that caused by Hemisphere. Hemisphere GNSS does not warrant or guarantee the precision or accuracy of positions obtained when using the Software (whether standalone or embedded in a Product). The Product and the Software is not intended and should not be used as the primary means of navigation or for use in safety of life applications. The potential positioning and navigation accuracy obtainable with the Software as stated in the Product or Software documentation serves to provide only an estimate of achievable accuracy based on specifications provided by the US Department of Defense for GPS positioning and DGPS service provider performance specifications, where applicable.
6. **WARRANTY DISCLAIMER.** EXCEPT AS EXPRESSLY SET OUT IN THIS AGREEMENT, HEMISPHERE MAKES NO REPRESENTATION, WARRANTY OR CONDITION OF ANY KIND TO LICENSEE, WHETHER VERBAL OR WRITTEN AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS OF ANY KIND INCLUDING FITNESS FOR A PARTICULAR PURPOSE, MERCHANTABILITY, ACCURACY, RELIABILITY OR THAT THE USE OF THE SOFTWARE WILL BE UNINTERRUPTED OR ERROR-FREE AND HEREBY DISCLAIMS ALL REPRESENTATIONS, WARRANTIES AND CONDITIONS ARISING AS A RESULT OF CUSTOM, USAGE OR TRADE AND THOSE ARISING UNDER STATUTE.
7. **LIMITS ON WARRANTY DISCLAIMER.** Some jurisdictions do not allow the exclusion of implied warranties or conditions, so some of the above exclusions may not apply to Licensee. In that case, any implied warranties or conditions which would then otherwise arise will be limited in duration to ninety (90) days from the date of the license of the Software or the purchase of the Product. The warranties given herein give Licensee specific legal rights and Licensee may have other rights which may vary from jurisdiction to jurisdiction.
8. **CHANGE TO WARRANTY.** No employee or agent of Hemisphere is authorized to change the warranty provided or the limitation or disclaimer of warranty provisions. All such changes will only be effective if pursuant to a separate agreement signed by senior officers of the respective parties.

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

1 **WARRANTY CLAIM.** In the event Licensee has a warranty claim Licensee must first check for and install all Updates that are made available. The warranty will not otherwise be honored. Proof of purchase may be required. Hemisphere does not honor claims asserted after the end of the Warranty Period.

2 **LICENSEE REMEDIES.** In all cases which involve a failure of the Software to conform in any material respect to the documentation during the Warranty Period or a breach of a warranty, Hemisphere's sole obligation and liability, and Licensee's sole and exclusive remedy, is for Hemisphere, at Hemisphere's option, to (a) repair the Software, (b) replace the Software with software conforming to the documentation, or (c) if Hemisphere is unable, on a reasonable commercial basis, to repair the Software or to replace the Software with conforming software within ninety (90) days, to terminate this Agreement and thereafter Licensee shall cease using the Software. Hemisphere will also issue a refund for the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.

3 **LIMITATION OF LIABILITY.** IN NO EVENT WILL HEMISPHERE BE LIABLE TO LICENSEE FOR ANY INCIDENTAL, CONSEQUENTIAL, SPECIAL OR INDIRECT DAMAGES INCLUDING ARISING IN RELATION TO ANY LOSS OF DATA, INCOME, REVENUE, GOODWILL OR ANTICIPATED SAVINGS EVEN IF HEMISPHERE HAS BEEN INFORMED OF THE POSSIBILITY OF SUCH LOSS OR DAMAGE. FURTHER, IN NO EVENT WILL HEMISPHERE'S TOTAL CUMULATIVE LIABILITY HEREUNDER, FROM ALL CAUSES OF ACTION OF ANY KIND, EXCEED THE TOTAL AMOUNT PAID BY LICENSEE TO HEMISPHERE TO PURCHASE THE PRODUCT. THIS LIMITATION AND EXCLUSION APPLIES IRRESPECTIVE OF THE CAUSE OF ACTION, INCLUDING BUT NOT LIMITED TO BREACH OF CONTRACT, NEGLIGENCE, STRICT LIABILITY, TORT, BREACH OF WARRANTY, MISREPRESENTATION OR ANY OTHER LEGAL THEORY AND WILL SURVIVE A FUNDAMENTAL BREACH.

4 **LIMITS ON LIMITATION OF LIABILITY.** Some jurisdictions do not allow for the limitation or exclusion of liability for incidental or consequential damages, so the above limitation or exclusion may not apply to Licensee and Licensee may also have other legal rights which may vary from jurisdiction to jurisdiction.

5 **BASIS OF BARGAIN.** Licensee agrees and acknowledges that Hemisphere has set its prices and the parties have entered into this Agreement in reliance on the limited warranties, warranty disclaimers and limitations of liability set forth herein, that the same reflect an agreed-to allocation of risk between the parties (including the risk that a remedy may fail of its essential purpose and cause consequential loss), and that the same forms an essential basis of the bargain between the parties. Licensee agrees and acknowledges that Hemisphere would not have been able to sell the Product at the amount charged on an economic basis without such limitations.

6 **PROPRIETARY RIGHTS INDEMNITY.** Hemisphere shall indemnify, defend and hold harmless Licensee from and against any and all actions, claims, demands, proceedings, liabilities, direct damages, judgments, settlements, fines, penalties, costs and expenses, including royalties and attorneys' fees and related costs, in connection with or arising out of any actual infringement of any third party patent, copyright or other intellectual property right by the Software or by its use, in accordance with this Agreement and documentation, PROVIDED THAT: (a) Hemisphere has the right to assume full control over any action, claim, demand or proceeding, (b) Licensee shall promptly notify Hemisphere of any such action, claim, demand, or proceeding, and (c) Licensee shall give Hemisphere such reasonable assistance and tangible material as is reasonably available to Licensee for the defense of the action, claim, demand or proceeding. Licensee shall not settle or compromise any of same for which Hemisphere has agreed to assume responsibility without Hemisphere's prior written consent. Licensee may, at its sole cost and expense, retain separate counsel from the counsel utilized or retained by Hemisphere.

19. **INFRINGEMENT.** If use of the Software may be enjoined due to a claim of infringement by a third party then, at its sole discretion and expense, Hemisphere may do one of the following: (a) negotiate a license or other agreement so that the Product is no longer subject to such a potential claim, (b) modify the Product so that it becomes non-infringing, provided such modification can be accomplished without materially affecting the performance and functionality of the Product,

Continued on next page

End User License Agreement, Continued

End User license agreement, continued

(c) replace the Software, or the Product, with non-infringing software, or product, of equal or better performance and quality, or (d) if none of the foregoing can be done on a commercially reasonable basis, terminate this license and Licensee shall stop using the Product and Hemisphere shall refund the price paid by Licensee less an amount on account of amortization, calculated on a straight-line basis over a deemed useful life of three (3) years.

The foregoing sets out the entire liability of Hemisphere and the sole obligations of Hemisphere to Licensee in respect of any claim that the Software or its use infringes any third party rights.

INDEMNIFICATION. Except in relation to an infringement action, Licensee shall indemnify and hold Hemisphere harmless from any and all claims, damages, losses, liabilities, costs and expenses (including reasonable fees of lawyers and other professionals) arising out of or in connection with Licensee's use of the Product, whether direct or indirect, including without limiting the foregoing, loss of data, loss of profit or business interruption.

TERMINATION. Licensee may terminate this Agreement at any time without cause. Hemisphere may terminate this Agreement on 30 days notice to Licensee if Licensee fails to materially comply with each provision of this Agreement unless such default is cured within the 30 days. Any such termination by a party shall be in addition to and without prejudice to such rights and remedies as may be available, including injunction and other equitable remedies. Upon receipt by Licensee of written notice of termination from Hemisphere or termination by Licensee, Licensee shall at the end of any notice period (a) cease using the Software; and (b) return to Hemisphere (or destroy and provide a certificate of a Senior Officer attesting to such destruction) the Software and all related material and any magnetic or optical media provided to Licensee. The provisions of Sections 6), 7), 8), 9), 10), 15), 21), 26) and 27) herein shall survive the expiration or termination of this Agreement for any reason.

EXPORT RESTRICTIONS. Licensee agrees that Licensee will comply with all export control legislation of Canada, the United States, Australia and any other applicable country's laws and regulations, whether under the Arms Export Control Act, the International Traffic in Arms Regulations, the Export Administration Regulations, the regulations of the United States Departments of Commerce, State, and Treasury, or otherwise as well as the export control legislation of all other countries.

PRODUCT COMPONENTS. The Product may contain third party components. Those third party components may be subject to additional terms and conditions. Licensee is required to agree to those terms and conditions in order to use the Product.

FORCE MAJEURE EVENT. Neither party will have the right to claim damages as a result of the other's inability to perform or any delay in performance due to unforeseeable circumstances beyond its reasonable control, such as labor disputes, strikes, lockouts, war, riot, insurrection, epidemic, Internet virus attack, Internet failure, supplier failure, act of God, or governmental action not the fault of the non-performing party.

FORUM FOR DISPUTES. The parties agree that the courts located in Calgary, Alberta, Canada and the courts of appeal there from will have exclusive jurisdiction to resolve any disputes between Licensee and Hemisphere concerning this Agreement or Licensee's use or inability to use the Software and the parties hereby irrevocably agree to attorn to the jurisdiction of those courts. Notwithstanding the foregoing, either party may apply to any court of competent jurisdiction for injunctive relief.

APPLICABLE LAW. This Agreement shall be governed by the laws of the Province of Alberta, Canada, exclusive of any of its choice of law and conflicts of law jurisprudence.

CISG. The United Nations Convention on Contracts for the International Sale of Goods will not apply to this Agreement or any transaction hereunder.

GENERAL. This is the entire agreement between Licensee and Hemisphere relating to the Product and Licensee's use of the same, and supersedes all prior, collateral or contemporaneous oral or written representations, warranties or agreements regarding the same. No amendment to or modification of this Agreement will be binding unless in writing and signed by duly authorized representatives of the parties. Any and all terms and conditions set out in any correspondence between the parties or set out in a purchase order which are different from or in addition to the terms and conditions set forth herein, shall have no application and no written notice of same shall be required. In the event that one or more of the provisions of this Agreement is found to be illegal or unenforceable, this Agreement shall not be rendered inoperative but the remaining provisions shall continue in full force and effect.

Warranty Notice

Warranty notice

COVERED PRODUCTS: This warranty covers all products manufactured by Hemisphere GNSS and purchased by the end purchaser (the "Products"), unless otherwise specifically and expressly agreed in writing by Hemisphere GNSS.

LIMITED WARRANTY: Hemisphere GNSS warrants solely to the end purchaser of the Products, subject to the exclusions and procedures set forth below, that the Products sold to such end purchaser and its internal components shall be free, under normal use and maintenance, from defects in materials, and workmanship and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for a period of 12 months from delivery of such Product to such end purchaser (the "Warranty Period"). Repairs and replacement components for the Products are warranted, subject to the exclusions and procedures set forth below, to be free, under normal use and maintenance, from defects in material and workmanship, and will substantially conform to Hemisphere GNSS's applicable specifications for the Product, for 90 days from performance or delivery, or for the balance of the original Warranty Period, whichever is greater.

EXCLUSION OF ALL OTHER WARRANTIES. The LIMITED WARRANTY shall apply only if the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS relevant User's Manual and Specifications, AND the Product is not modified or misused. The Product is provided "AS IS" and the implied warranties of MERCHANTABILITY and FITNESS FOR A PARTICULAR PURPOSE and ALL OTHER WARRANTIES,

express, implied or arising by statute, by course of dealing or by trade usage, in connection with the design, sale, installation, service or use of any products or any component thereof, are EXCLUDED from this transaction and shall not apply to the Product. The LIMITED WARRANTY is IN LIEU OF any other warranty, express or implied, including but not limited to, any warranty of MERCHANTABILITY or FITNESS FOR A PARTICULAR PURPOSE, title, and non-infringement.

LIMITATION OF REMEDIES. The purchaser's EXCLUSIVE REMEDY against Hemisphere GNSS shall be, at Hemisphere GNSS's option, the repair or replacement of any defective Product or components thereof. The purchaser shall notify Hemisphere GNSS or a Hemisphere GNSS's approved service center immediately of any defect. Repairs shall be made through a Hemisphere GNSS approved service center only. Repair, modification or service of Hemisphere GNSS products by any party other than a Hemisphere GNSS approved service center shall render this warranty null and void. The remedy in this paragraph shall only be applied in the event that the Product is properly and correctly installed, configured, interfaced, maintained, stored, and operated in accordance with Hemisphere GNSS's relevant User's Manual and Specifications, AND the Product is not modified or misused. NO OTHER REMEDY (INCLUDING, BUT NOT LIMITED TO, SPECIAL, INDIRECT, INCIDENTAL, CONSEQUENTIAL OR CONTINGENT DAMAGES FOR LOST PROFITS, LOST SALES, INJURY TO PERSON OR PROPERTY, OR ANY OTHER INCIDENTAL OR CONSEQUENTIAL LOSS) SHALL BE AVAILABLE

TO PURCHASER, even if Hemisphere GNSS has been advised of the possibility of such damages. Without limiting the foregoing, Hemisphere GNSS shall not be liable for any damages of any kind resulting from installation, use, quality, performance or accuracy of any Product.

HEMISPHERE IS NOT RESPONSIBLE FOR PURCHASER'S NEGLIGENCE OR UNAUTHORIZED USES OF THE PRODUCT.

IN NO EVENT SHALL Hemisphere GNSS BE IN ANY WAY RESPONSIBLE FOR ANY DAMAGES RESULTING FROM PURCHASER'S OWN NEGLIGENCE, OR FROM OPERATION OF THE PRODUCT IN ANY WAY OTHER THAN AS SPECIFIED IN Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS is NOT RESPONSIBLE for defects or performance problems resulting from (1) misuse, abuse, improper installation, neglect of Product; (2) the utilization of the Product with hardware or software products, information, data, systems, interfaces or devices not made, supplied or specified by Hemisphere GNSS; (3) the operation of the Product under any specification other than, or in addition to, the specifications set forth in Hemisphere GNSS's relevant User's Manual and Specifications; (4) damage caused by accident or natural events, such as lightning (or other electrical discharge) or fresh/ salt water immersion of Product; (5) damage occurring in transit; (6) normal wear and tear; or (7) the operation or failure of operation of any satellite-based positioning system or differential correction service; or the availability or performance of any satellite-based positioning signal or differential correction signal.

THE PURCHASER IS RESPONSIBLE FOR OPERATING THE VEHICLE SAFELY. The purchaser is solely responsible for the safe operation of the vehicle used in connection with the Product, and for maintaining proper system control settings. UNSAFE DRIVING OR SYSTEM CONTROL SETTINGS CAN RESULT IN PROPERTY DAMAGE, INJURY, OR DEATH.

Continued on next page

Warranty Notice, Continued

Warranty notice, continued

The purchaser is solely responsible for his/her safety and for the safety of others. The purchaser is solely responsible for maintaining control of the automated steering system at all times. THE PURCHASER IS SOLELY RESPONSIBLE FOR ENSURING THE PRODUCT IS PROPERLY AND CORRECTLY INSTALLED, CONFIGURED, INTERFACED, MAINTAINED, STORED, AND OPERATED IN ACCORDANCE WITH Hemisphere GNSS's RELEVANT USER'S MANUAL AND SPECIFICATIONS. Hemisphere GNSS does not warrant or guarantee the positioning and navigation precision or accuracy obtained when using Products. Products are not intended for primary navigation or for use in safety of life applications. The potential accuracy of Products as stated in Hemisphere GNSS literature and/or Product specifications serves to provide only an estimate of achievable accuracy based on performance specifications provided by the satellite service operator (i.e. US Department of Defense in the case of GPS and differential correction service provider. Hemisphere GNSS reserves the right to modify Products without any obligation to notify, supply or install any improvements or alterations to existing Products.

GOVERNING LAW. This agreement and any disputes relating to, concerning or based upon the Product shall be governed by and interpreted in accordance with the laws of the State of Arizona.

OBTAINING WARRANTY SERVICE. In order to obtain warranty service, the end purchaser must bring the Product to a Hemisphere GNSS approved service center along with the end purchaser's proof of purchase. Hemisphere GNSS does not warrant claims asserted after the end of the warranty period. For any questions regarding warranty service or to obtain information regarding the location of any of Hemisphere GNSS approved service center, contact Hemisphere GNSS at the following address:

Hemisphere GNSS

8515 E. Anderson Drive Scottsdale, AZ 85255, USA

Phone: +1-480-348-6380

Fax: +1-480-270-5070

TECHSUPPORT@HGNS.COM

WWW.HGNS.COM



Hemisphere GNSS Inc.
8515 East Anderson Drive
Scottsdale, Arizona, US 85255
Phone: 480-348-6380
Fax: 480-270-5070
precision@hgnss.com
www.hgnss.com